

CONTENTS

5C(6E3)

Fig. 1	CRANKCASE, CYLINDER & PISTON	A3
Fig. 2	INTAKE	A4
Fig. 3	STARTER	A5
Fig. 4	COWLING & FUEL	A6
Fig. 5	UPPER CASING & BRACKET	A7
Fig. 6	CONTROL	B1
Fig. 7	LOWER & DRIVE	B2
Fig. 8	C.D.I. MAGNETO	B3
Fig. 9	ELECTRIC PARTS	B4
Fig. 10	COWLING (5CS MODEL)	B5
Fig. 11	FUEL (5CS MODEL)	B6
Fig. 12	OPTIONAL PARTS	B7
Fig. 13	REPAIR KIT	C1
	NUMERICAL INDEX	

This Parts Catalogue is related to the parts in use for the Yamaha outboard motor 5C '85 (6E3). When you are ordering replacement parts for the 5C '85 (6E3), refer to this Parts Catalogue and quote both part numbers and part names correctly.

1. Modifications or additions which have been made after issue of the Parts Catalogue will be announced in the Yamaha Parts News.
It is advisable that according to the Yamaha Parts News you make necessary corrections to the Parts Catalogue on hand to keep it up-to-date.

2. Abbreviations

The following abbreviations are used in this Parts Catalogue.

- U.R. Use size (thickness) and/or number as required.
- U.N. Use as many as you need.
- A.P. Alternate Parts
- S.T.D. Standard
- O.S. Over Size

3. Parts, which are to be supplied in the form of assemblies, are listed with an indention of one letter's space, and a dot (.) is put against the name of each part.

EXAMPLE

CARBURETOR ASS'Y

. JET, pilot

. NOZZLE, main

4. Indication of No. of constituent parts for assembly.



The numeral appearing to the right of each constituent part under the description indicates the quantity of such parts for each individual assembly unit.

EXAMPLE


Part No.	Description	Q'ty	Remarks
6E0-85500-70	C.D.I. MAGNETO ASS'Y	1	
6E0-85550-70	. ROTOR ASS'Y	1	
6E0-15723-00-94	. . PULLEY, starter	1	

5. Initial Serial No. and Color Code

A Engine Serial No.	5C S:007873 and following
	L:305908 and following
	5CS S:136244 and following
	L:420839 and following

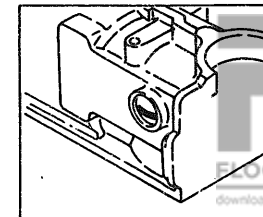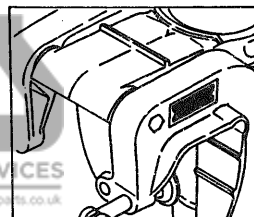


Color Code	Color Name	Abbreviate
EJ	METALIC MARINE BLUE	MMB
36	CLEAN WHITE	W

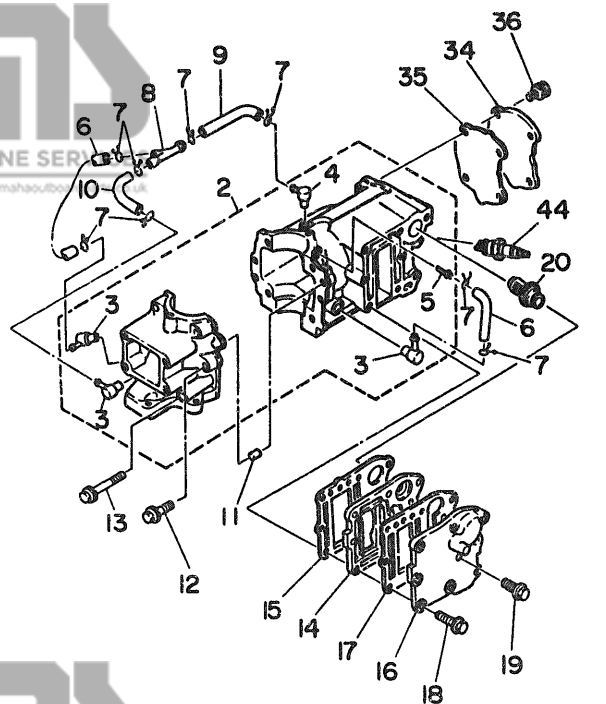

CRANK CYLINDER
ASS'Y

Fig.8, Ref.No.22

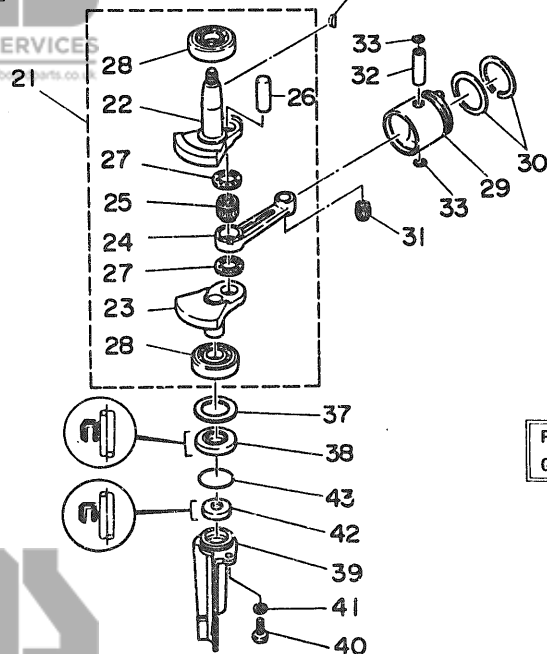

POWER HEAD
GASKET KIT

Fig. 1 CRANKCASE, CYLINDER & PISTON

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6E3-W0090-01-EJ	CRANK CYLINDER ASS'Y (Ref. No. 2 to 44)	1 U.R.	23	6E3-11422-00	. CRANK 2	1
*	6E3-W0090-21-EJ	CRANK CYLINDER ASS'Y (Ref. No. 2 to 44)	1 U.R.	24	6E0-11651-00	. ROD, connecting	1
2	6E3-15100-01-94	CRANKCASE ASS'Y	1	25	93310-418V1	. BEARING, con-rod big end	1
3	650-11370-00	. CHECK VALVE ASS'Y	3	26	6G1-11681-00	. PIN, crank	1
4	6E5-11372-00	. NIPPLE, hose 2	1	27	90209-18112	. WASHER	2
5	624-14485-00	. PIPE, joint	1	28	93306-20411	. BEARING (B6204)	2
6	90445-07M28	HOSE	2	29	6E3-11631-00-98	PISTON	1
7	90467-06016	CLIP	8	30	6J1-11610-00	PISTON RING SET	1
8	6E0-24378-00	PIPE, joint	1	31	93310-112V0	BEARING, con-rod small end	1
9	90445-07M51	HOSE	1	32	6G1-11633-00	PIN, piston	1
10	90445-07M00	HOSE	1	33	93450-13022	CIRCLIP	2
11	93606-12019	PIN, dowel B	2	34	6E3-11191-01-9M	COVER, cylinder head	1
12	90105-06M16	BOLT	4	35	6E3-11193-01	GASKET, head cover	1
13	90105-06M17	BOLT	2	36	90105-06M14	BOLT	4
14	6E3-41111-01-9M	INNER COVER, exhaust	1	37	90201-32M48	WASHER	1
15	6E3-41112-01	GASKET, exhaust inner cover	1	38	93102-20M06	OIL SEAL	1
16	6E3-41113-01-9M	OUTER COVER, exhaust	1	39	6E0-15396-00-9M	HOUSING, oil seal 2	1
17	6E3-41114-01	GASKET, exhaust outer cover	1	40	97395-06016	BOLT	1
18	95895-06025	BOLT	8	41	92990-06600	WASHER	1
19	90105-06M14	BOLT	1	42	93101-11M25	OIL SEAL	1
20	6E5-12411-00	THERMOSTAT	1	43	93210-31114	O-RING	1
21	6E3-11400-00	CRANK ASS'Y	1	44	94701-00040	PLUG, spark (B7HS) HGK	1 U.R.
22	6E3-11412-00	. CRANK 1	1	*	94702-00272	PLUG, spark (B7HS) NGK	1 U.P.
				45	6E3-W0001-01	POWER HEAD GASKET KIT	1

* Not shown

■ See Fig. 13 for detail service parts.

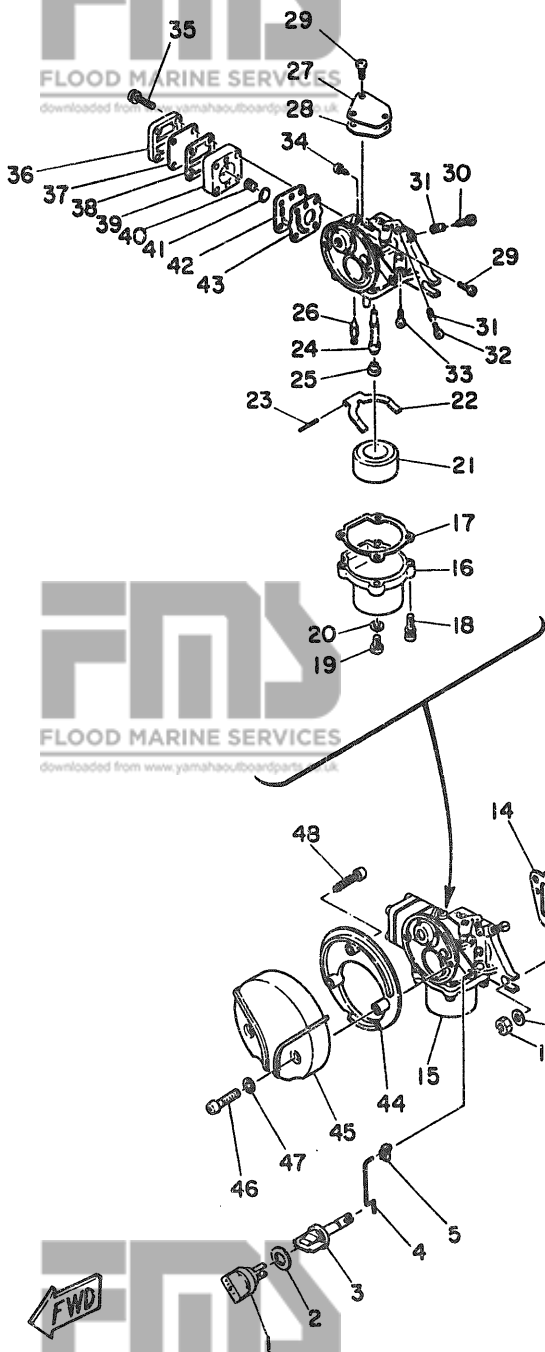


Fig. 2 INTAKE

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6E0-41271-00	KNOB, choke 1	1	26	6E0-14392-00	. VALVE, needle	1
2	90202-12M16	WASHER	1	27	6E0-14157-00	. COVER, plate	1
3	6E0-41272-00	KNOB, choke 2	1	28	6E0-14227-00	. PACKING	1
4	6E0-41256-00	ROD, choke link	1	29	97803-04007	. SCREW	4
5	661-41262-02	JOINT, choke lever	1	30	647-14323-00	. SCREW, air adjusting	1
6	6E0-13610-00	REED VALVE ASS'Y	1	31	646-14212-01	. SPRING, pilot adjusting	2
7	6E0-W0004-00	. REED SET	1	32	648-14321-00	. SCREW, throttle	1
8	6E0-13621-00	PACKING, valve seat	1	33	648-14342-23	. JET, pilot (#46)	1
9	90105-06M14	BOLT	2	34	647-14326-00	. SCREW, guide	1
10	95621-06325	BOLT, stud	1	35	98503-04020	. SCREW	4
11	90116-06M08	BOLT, stud	1	36	6E0-24413-00	. COVER, pump	1
12	95303-06700	NUT	2	37	6E0-24471-00	. DIAPHRAGM	1
13	92903-06600	WASHER	2	38	6E0-24435-00	. GASKET, pump cover	1
14	6E0-14198-00	GASKET	1	39	6E0-24412-00	. BODY, pump	1
15	6E3-14301-01	CARBURETOR ASS'Y	1	40	6E0-24423-00	. SPRING	1
16	6E0-14381-00	. BODY, float chamber	1	41	6E0-14346-00	. PLATE	1
17	654-14384-00	. GASKET, float chamber	1	42	6E0-24411-00	. DIAPHRAGM	1
18	97803-04016	. SCREW	4	43	6E0-24434-00	. GASKET, pump body	1
19	677-14383-00	. SCREW, drain	1	44	6E0-14417-00	COVER 1	1
20	6A1-14398-00	. GASKET	1	45	5E0-14418-00	COVER 2	1
21	647-14385-00	. FLOAT	1	46	97803-05025	SCREW, pinhead 1	2
22	6E0-14387-00	. ARM	1	47	92903-05600	WASHER	2
23	647-14386-00	. PIN, float	1	48	97780-40720	SCREW, ovalhead tapping	1
24	6E0-14341-00	. NOZZLE, main	1	49	6E0-W0093-00	CARBURETOR REPAIR SET	1
25	648-14343-43	. JET, main (#86)	1				

* See Fig. 13 for detail service parts.

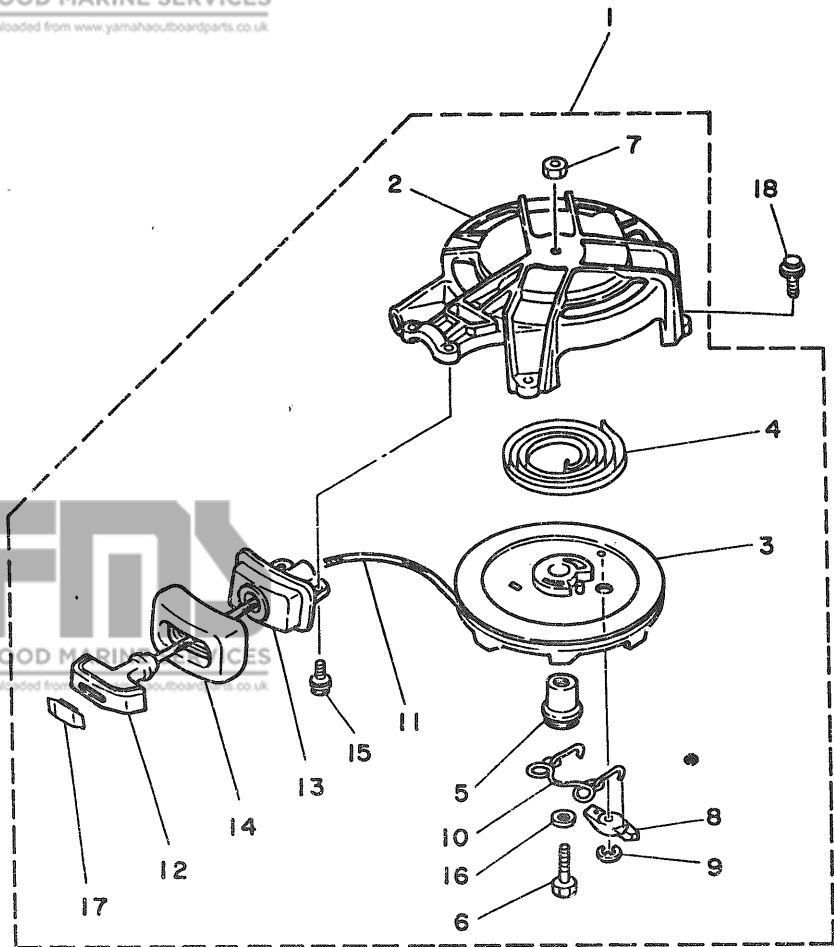


Fig. 3 STARTER

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6E3-15710-02-94	STARTER ASS'Y	1	10	6E0-15705-00	SPRING, drive pawl	1
2	6E0-15711-01-94	CASE, starter	1	11	+	WIRE (1850mm)	1
3	6E0-15714-01	DRUM, sheave	1	12	6G1-15755-00	HANDLE, starter	1
4	90510-08M03	SPRING, spiral	1	13	6E3-15758-01	GUIDE, wire	1
5	6E0-15717-00-94	SHAFT	1	14	6E0-15761-00	SEAL	1
6	97313-06035	BOLT	1	15	90105-06M14	BOLT	2
7	95303-06600	NUT	1	16	90201-06M30	WASHER	1
8	677-15741-01	PAWL, drive	1	17	689-15779-01	COVER	1
9	93430-06M02	CIRCLIP	1	18	90105-06M15	BOLT	3

+ Cut from 50m rolls, Parts No. 90890-44372, cutting length 1.85m.

FWD

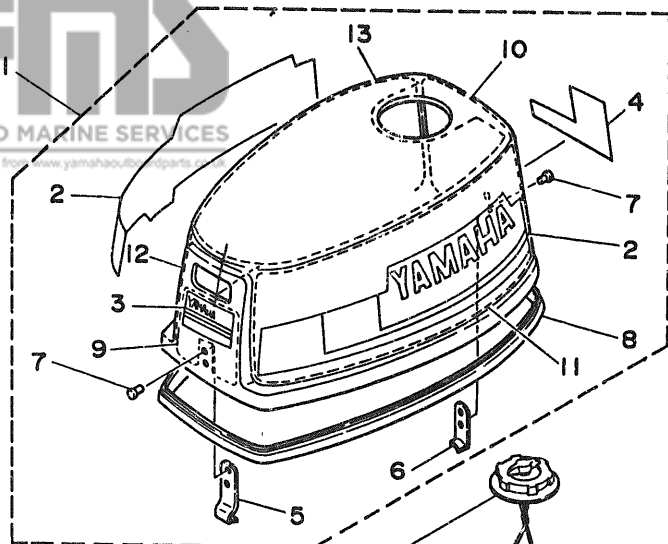
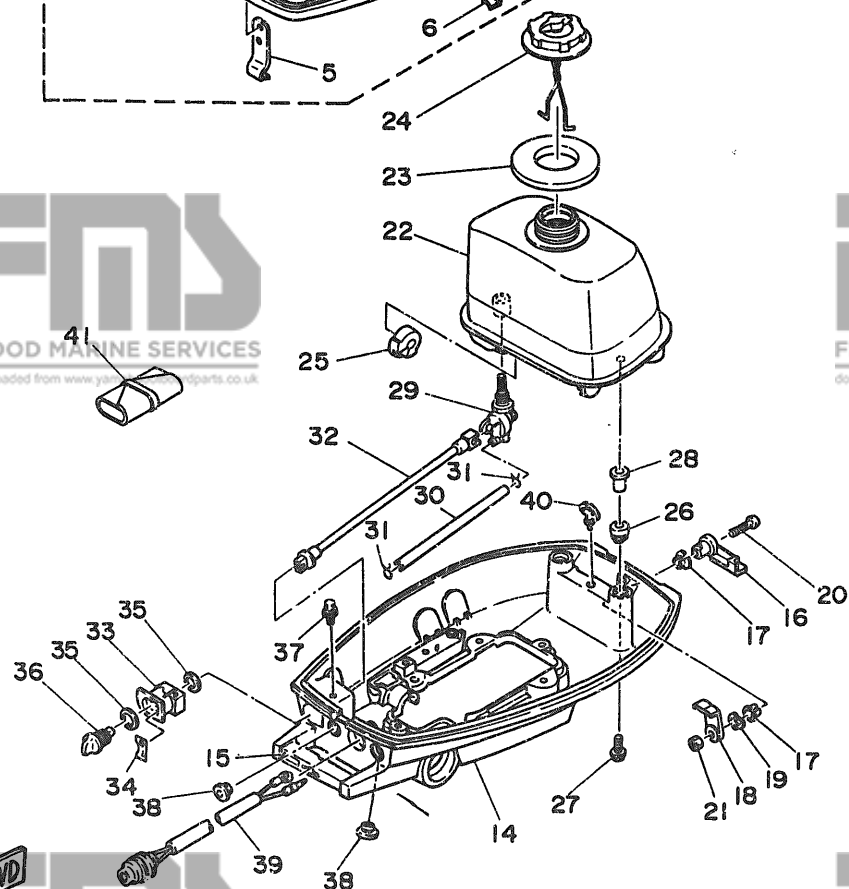


Fig. 4 COWLING & FUEL

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6E3-42610-E0-EJ	TOP COWLING ASS'Y	1	22	6E0-24110-00-EJ	FUEL TANK COMP.	1
2	6E0-M0070-20	. GRAPHIC SIDE SET	1	23	6E3-24641-00	GASKET, cap	1
3	6E0-42677-01	. GRAPHIC, front	1	24	6E0-24610-01	CAP ASS'Y	1
4	6E3-42678-20	. GRAPHIC, rear	1	25	6E0-24181-00	DAMPER, locating 1	2
5	6E0-42651-00	. HOOK 1	1	26	6E3-24182-00	DAMPER, locating 2	2
6	6E0-42647-01	. HOLDER, clamp band	1	27	95895-06025	BOLT	2
7	90266-04M00	. RIVET 2	4	28	6E0-42542-00	PIPE 1	2
8	6E0-42615-00	. SEAL	1	29	6E0-24500-00	FUEL COCK ASS'Y	1
9	6E3-42662-80	. DAMPER 1	1	30	90445-09M37	HOSE	1
10	6E3-42663-80	. DAMPER 2	1	31	90467-08004	CLIP, pipe 1	2
11	6E3-42664-80	. DAMPER 3	1	32	6E0-24572-00	SHAFT, fuel change	1
12	6E3-42666-80	. DAMPER 5	1	33	6E0-24571-00	BUSHING	1
13	6E3-42665-80	. DAMPER 4	1	34	6E0-24591-00	GRAPHIC, change lever	1
14	6E0-42711-02-EJ	COWLING, bottom	1	35	90202-12M17	WASHER	2
15	6A1-42792-01	MARK 3	1	36	6E0-24575-01	LEVER, fuel change	1
16	6E0-42815-00-EJ	LEVER, clamp 1	1	37	90105-06M15	BOLT	1
17	90386-12069	BUSHING	2	38	90480-14M14	GROMMET	2
18	6E0-42816-00	LEVER, clamp 2	1	39	6E0-82550-00	STOP SWITCH ASS'Y	1
19	90206-12052	WASHER, wave	1	40	606-42591-00	HOLDER, share pin	1
20	97890-06030	SCREW, panhead	1	41	6E0-28100-00	TOOL ASS'Y	1
21	95303-06700	NUT	1				



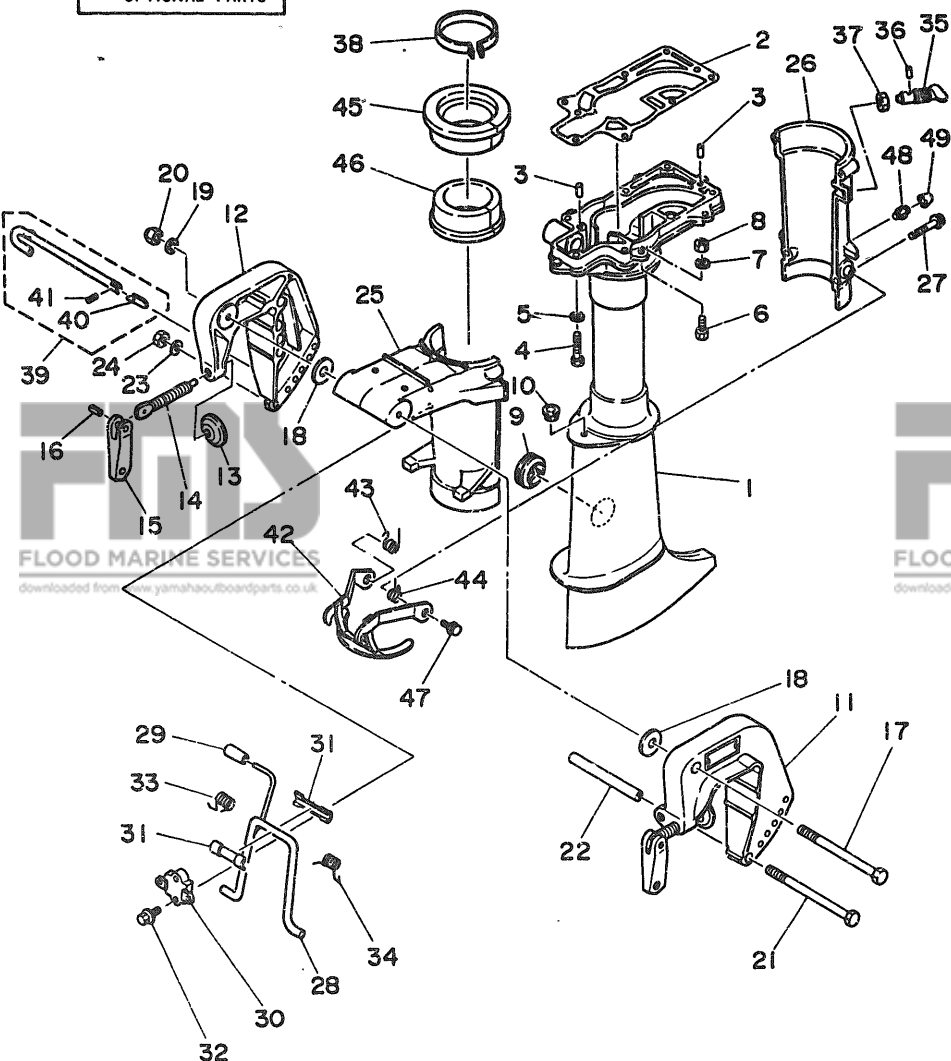
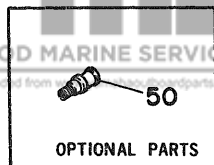


Fig. 5 UPPER CASING & BRACKET

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6E0-45111-01-EJ	CASING, upper (Short)	1 U.R.	28	6E0-43181-00	LEVER, tilt stop	1
2	6E0-45111-11-EJ	CASING, upper (Long)	1 U.R.	29	6E0-43632-00	KNOB, tilt	1
3	6E0-45113-00	GASKET, upper casing	1	30	6E0-43313-00-EJ	BRACKET, swivel 3	1
4	93606-12019	PIN, dowel B	2	31	620-43189-00	BUSHING 2	2
5	97395-06030	BOLT	7	32	95895-06020	BOLT	2
6	92990-06600	WASHER	7	33	90508-16020	SPRING, torsion 1	1
7	97395-06016	BOLT	4	34	90508-16021	SPRING, torsion 2	1
8	92990-06600	WASHER	4	35	6E0-42529-01	SCREW, friction piece	1
9	95380-06700	NUT	4	36	91690-20010	PIN, spring	1
10	647-45151-01	COVER, upper casing	1	37	95380-08600	NUT	1
11	90480-10M13	GROMMET	1	38	6E0-42528-02	PIECE, friction	1
12	6E0-43111-00-EJ	BRACKET, clamp 1	1	39	6E0-43160-00	TILT ROD ASS'Y	1
13	6E0-43112-00-EJ	BRACKET, clamp 2	1	40	656-43165-01	STOPPER PLATE	1
14	648-43114-01	PAD, transom clamp	2	41	91690-30008	PIN, spring	1
15	6E0-43116-00	SCREW, transom clamp	2	42	6E0-43614-00-EJ	PLATE, tilt lock 1	1
16	6E0-43118-00	HANDLE, transom clamp	2	43	90508-14M10	SPRING, torsion	1
17	90254-04M00	PIN	2	44	90508-14M11	SPRING, torsion	1
18	90101-08M68	BOLT	1	45	6E0-42537-01	BUSHING, pivot shaft 1	1
19	90201-08M47	WASHER	2	46	6E0-42538-01	BUSHING, pivot shaft 2	1
20	92990-08600	WASHER	1	47	95895-06010	BOLT	2
21	90185-08M00	NUT, self-locking	1	48	93700-06004	NIPPLE, grease	1
22	90101-06335	BOLT	1	49	663-45119-00	CAP, grease nipple	1
23	90560-06088	SPACER	1	50	6E0-28193-00-94	PLUG, water check 1	1 A.P.
24	92990-06600	WASHER	1				
25	95380-06600	NUT	1				
26	6E0-43311-02-EJ	BRACKET, swivel 1	1				
27	6E0-43312-02-EJ	BRACKET, swivel 2	1				
28	95895-06035	BOLT	4				

※ Not shown

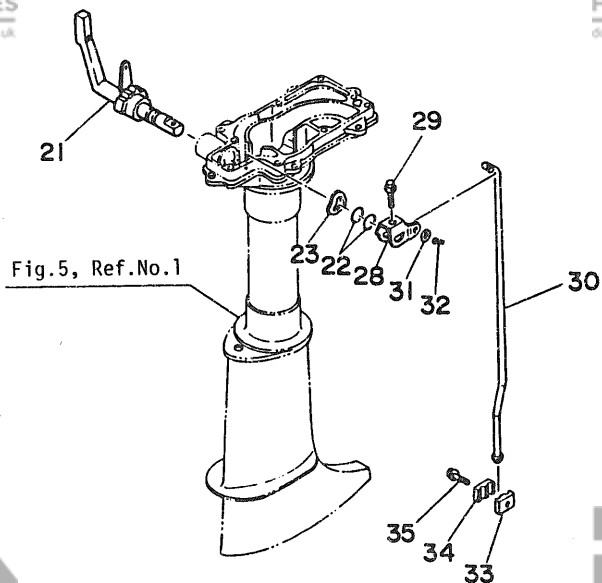
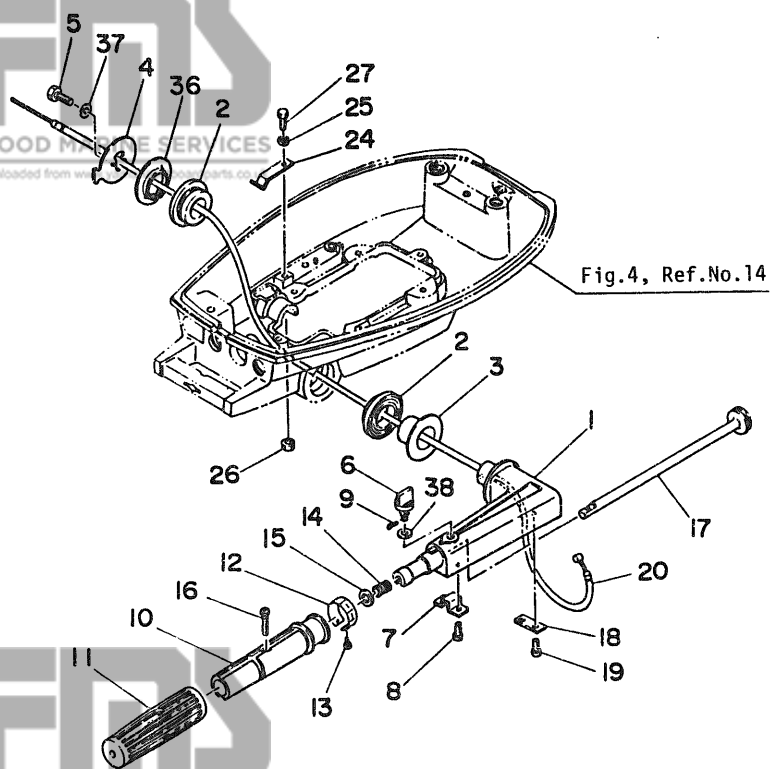


Fig. 6 CONTROL

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6E0-42111-00-EJ	HANDLE, steering	1	21	6E0-44111-01	HANDLE, gear shift	1
2	6E0-42129-01	BUSHING 1	2	22	93210-12327	O-RING	2
3	90386-26M30	BUSHING	1	23	90206-16M06	WASHER, wave	1
4	6E0-42131-01-94	COVER, handle steering	1	24	6E0-44116-00	SPRING	1
5	97313-05016	BOLT	2	25	92903-06600	WASHER	1
6	6E0-42125-00	BOLT, friction adjust	1	26	95380-06700	NUT	1
7	6E0-42134-00	COVER	1	27	97395-06012	BOLT	1
8	97890-05012	SCREW, panhead	2	28	6E0-44121-00	LEVER, shift rod 1	1
9	91490-12008	PIN, cotter	1	29	95895-06025	BOLT	1
10	6E0-42119-00	GRIP, steering handle	1	30	6E0-44143-00	ROD, shift 1 (Short)	1 U.R.
11	6E0-42117-00	HANDLE	1	*	6E0-44143-10	ROD, shift 1 (Long)	1 U.R.
12	6E0-42137-01	INDICATOR, throttle	1	31	92990-05600	WASHER	1
13	90269-02001	RIVET	1	32	91490-16010	PIN, cotter	1
14	90501-23215	SPRING, compression	1	33	6E0-44145-00	CONNECTOR, shift rod 1	1
15	90201-10119	WASHER	1	34	6E0-44146-00	CONNECTOR, shift rod 2	1
16	98180-05025	SCREW	1	35	95895-06020	BOLT	1
17	6E0-42138-01	LEVER, throttle	1	36	90386-26M33	BUSHING	1
18	6E0-42159-00	STAY	1	37	92903-05600	WASHER	2
19	97890-05012	SCREW, panhead	2	38	90202-07M22	WASHER	1
20	6E0-26301-01	THROTTLE WIRE ASS'Y	1				

* Not shown

LOWER UNIT
ASS'Y

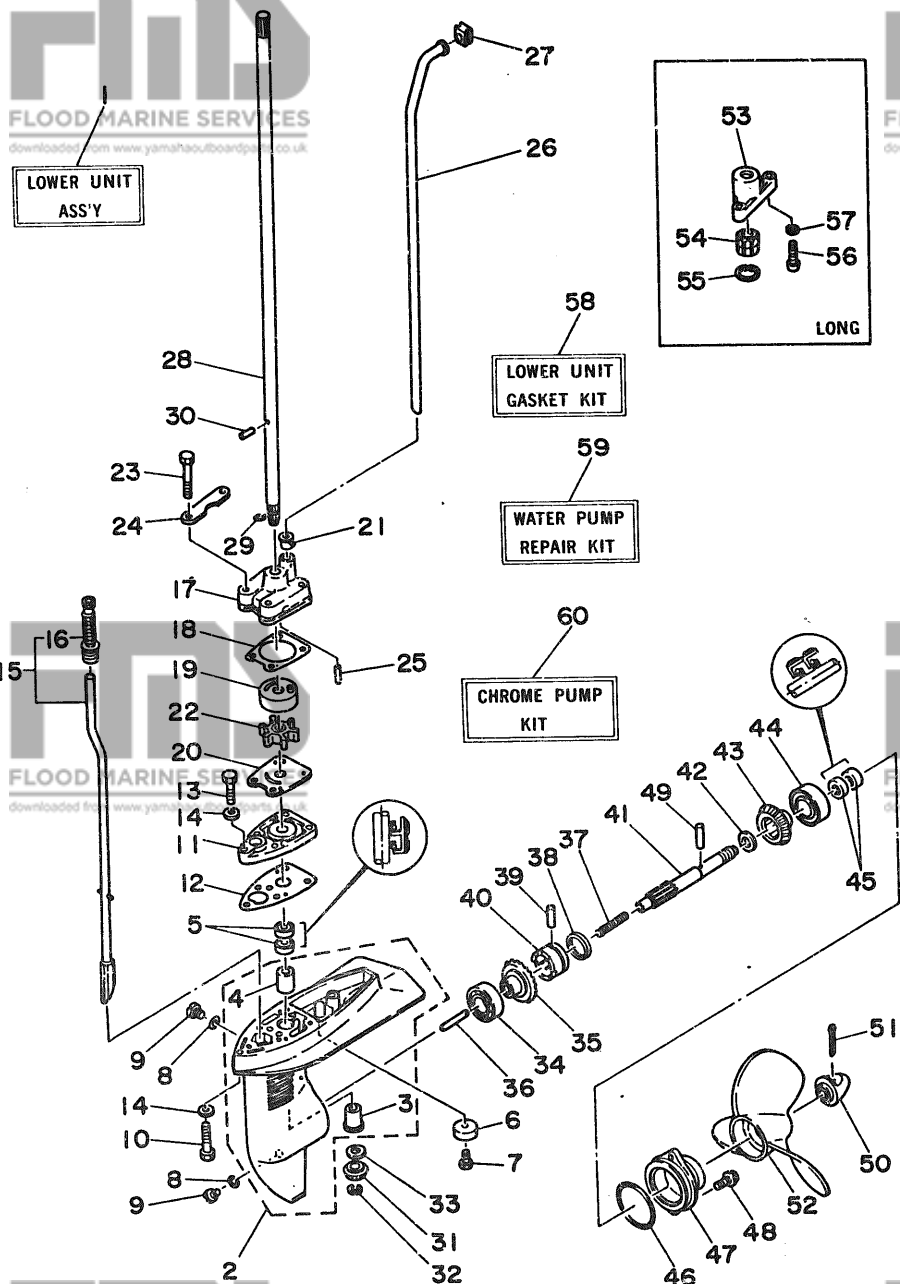


Fig. 7 LOWER & DRIVE

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6E0-45300-00-EJ	LOWER UNIT ASS'Y (Short)	1 U.R.	31	6E0-45551-00	PINION	1
		(Ref. No. 2 to 25, 28 to 48)		32	93430-06005	CIRCLIP	1
*	6E0-45300-10-EJ	LOWER UNIT ASS'Y (Long)	1 U.R.	33	90201-11M49	WASHER	1
		(Ref. No. 2 to 25, 28 to 48)		34	93306-00401	BEARING (B6004)	1
2	6E0-45311-00-EJ	CASING, lower	1	35	6E0-45560-00	GEAR 1 ASS'Y	1
3	6E0-45317-09	. BUSHING, solid	1	36	654-45635-00	PLUNGER, shift	1
4	6E0-45316-09	. BUSHING, solid	1	37	90501-10064	SPRING, compression	1
5	93101-11M14	OIL SEAL	2	38	654-45633-00	RING, cross pin	1
6	6E0-45251-00	ANODE	1	39	90250-05046	PIN, cross	1
7	97395-06012	BOLT	1	40	6E0-45631-00	CLUTCH, dog	1
8	90430-08020	GASKET	3	41	6E0-45611-00	SHAFT, propeller	1
9	90340-08014	PLUG, straight screw	3	42	90201-13M50	WASHER	1
10	97395-06035	BOLT	2	43	6E0-45570-00	GEAR 2 ASS'Y	1
11	6E0-45321-01-9M	PLATE	1	44	93306-00400	BEARING (B6004)	1
12	6E0-45315-00	PACKING, lower casing	1	45	93101-13M12	OIL SEAL	2
13	97395-06025	BOLT	1	46	93210-48214	O-RING	1
14	92990-06600	WASHER	3	47	6E0-45361-00-EJ	CAP, lower casing	1
15	6E0-44150-00	SHIFT CAM ASS'Y (Short)	1 U.R.	48	95895-06016	BOLT	2
*	6E0-44150-10	SHIFT CAM ASS'Y (Long)	1 U.R.	49	90250-05009	PIN, straight	1
16	655-44147-00	. BOOT, shift rod	1	50	647-45616-02	NUT, propeller	1
17	6E0-44311-00	HOUSING, water pump	1	51	91490-30030	PIN, cotter	1
18	6E0-44315-00	GASKET, water pump	1	52	6E0-45941-00-36	PROPELLER ASS'Y 1(3x7/8"x8"-B)	1 U.R.
19	6E0-44322-01	INSERT, cartridge	1 U.R.		644-45941-01-36	PROPELLER ASS'Y 1(3x7/8"x5"-B)	1 U.R.
*	6E0-44322-40	INSERT, cartridge (Chromate)	1 U.R.		654-45941-01-36	PROPELLER ASS'Y 1(3x7/8"x6 1/2"-B)	1 U.R.
20	6E0-44323-00	OUTER PLATE, cartridge	1 U.R.		6E0-45943-00-36	PROPELLER ASS'Y 2(3x7/8"x7"-B)	1 U.R.
*	6E0-44323-40	OUTER PLATE, cartridge (Chromate)	1 U.R.		654-45943-01-36	PROPELLER ASS'Y 2(3x7/8"x7 1/4"-B)	1 U.R.
21	646-44366-01	RUBBER, water seal 2	1		6E0-45945-00-36	PROPELLER ASS'Y 3(3x7/8"x7 1/4"-B)	1 U.R.
22	6E0-44352-00	IMPELLER	1		6E0-45947-00-36	PROPELLER ASS'Y 4(3x7/8"x8 1/2"-B)	1 U.R.
23	97395-06045	BOLT	4	53	6E0-45331-00-9M	HOUSING, bearing (Long)	1
24	6E0-44328-00	PLATE	2	54	6E0-45318-00	BUSHING, drive shaft 3 (Long)	1
25	93604-18080	PIN, dowel B	2	55	93420-22M03	CIRCLIP (Long)	1
26	6E0-44361-00	TUBE, water (Short)	1 U.R.	56	97890-05025	SCREW, panhead (Long)	2
*	6E0-44361-10	TUBE, water (Long)	1 U.R.	57	92990-05600	WASHER (Long)	2
27	646-44365-00	RUBBER, water seal 1	1	▲ 58	6E0-W0001-20	LOWER UNIT GASKET KIT	1
28	6E0-45511-00	SHAFT, drive (Short)	1 U.R.	★ 59	6E0-W0078-00	WATER PUMP REPAIR KIT	1
*	6E0-45511-10	SHAFT, drive (Long)	1 U.R.	★ 60	6E0-W0078-0A	CHROME PUMP KIT	1
29	90467-08M01	CLIP	1				
30	93604-09066	PIN, dowel B	1				

* Not shown

▲ See Fig. 13 for detail service parts.

★

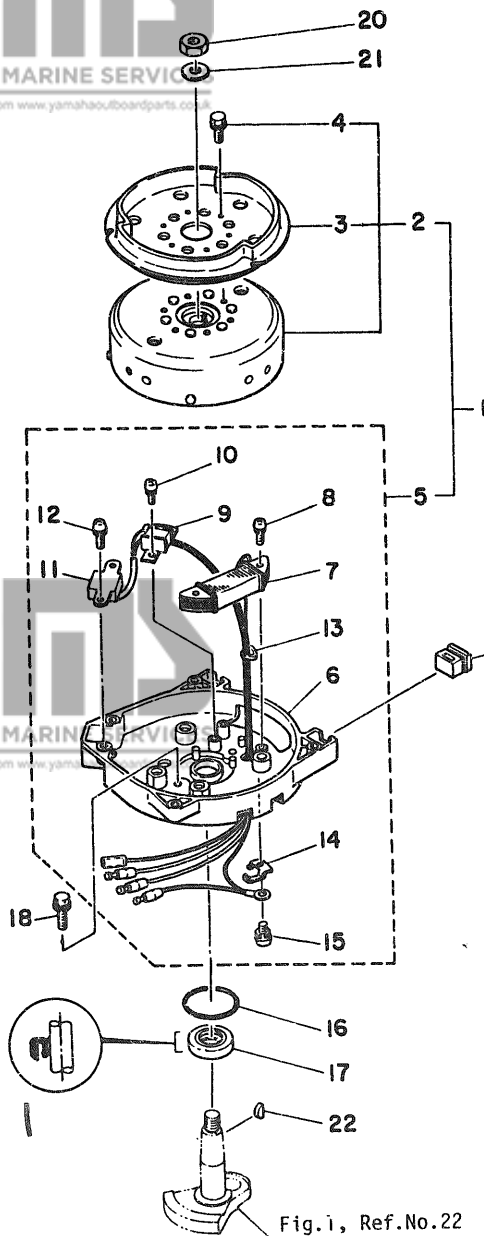


Fig. 8 C.D.I. MAGNETO

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6E0-85500-70	C.D.I. MAGNETO ASS'Y	1	13	6E0-81336-70	. . GROMMET	1
2	6E0-85550-70	. . ROTOR ASS'Y	1	14	6E0-81328-70	. . CLAMP	1
3	6E0-15723-00-94	. . PULLEY, starter	1	15	90159-04035	. . SCREW, with washer	1
4	90105-06M14	. . BOLT	3	16	93210-42159	O-RING	1
5	6E0-85560-70	. . BASE ASS'Y	1	17	93102-20M15	OIL SEAL	1
6	6E0-15359-00-94	. . HOUSING, oil seal 1	1	18	90105-06M14	BOLT	2
7	6E0-85520-70	. . CHARGE COIL ASS'Y	1	19	6E0-24183-00	DAMPER, locating 3	2
8	90159-05038	. . SCREW, with washer	2	20	90170-10113	NUT	1
9	6E0-85595-70	. . PULSER COIL ASS'Y 1	1	21	90201-10126	WASHER	1
10	90159-04036	. . SCREW, with washer	2	22	90280-04006	KEY, woodruff	1
11	6E0-85592-70	. . PULSER COIL ASS'Y 2	1	23	6E0-81303-80	LIGHTING COIL ASS'Y (60W)	1 A.P.
12	90159-05037	. . SCREW, with washer	2	24	90159-05040	. . SCREW, with washer	2

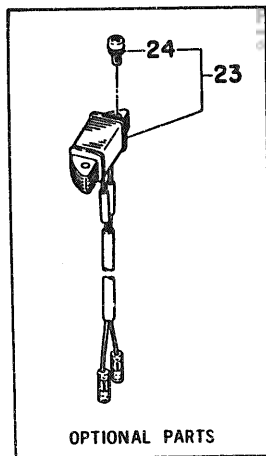


Fig.1, Ref.No.44

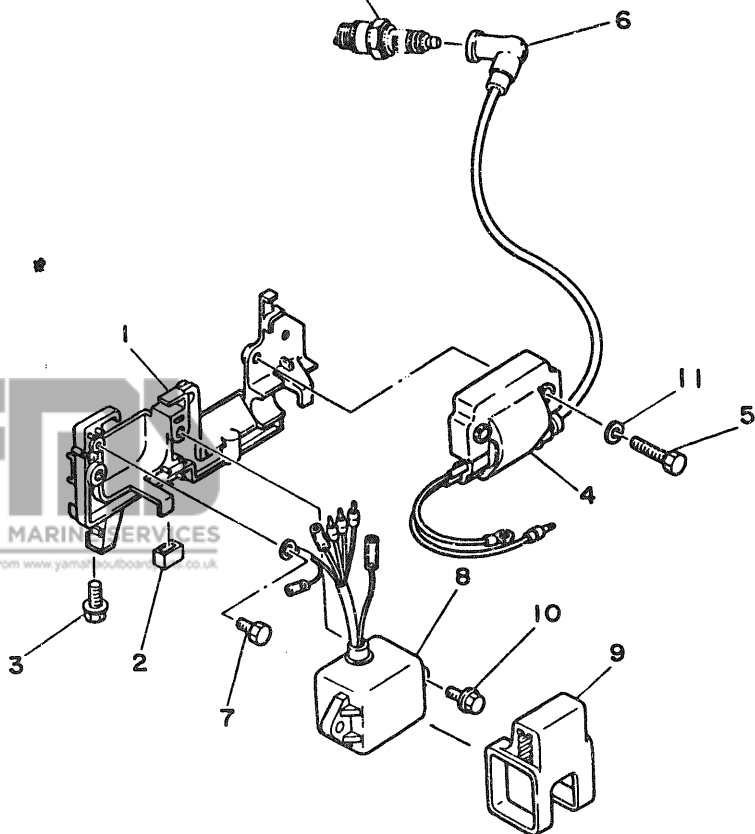


Fig. 9 ELECTRIC PARTS

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6E0-82316-00-94	BRACKET, Ignition coil	1	6	663-82370-01	PLUG CAP ASS'Y	1 U.R.
2	6E0-82317-00	DAMPER	2	*	6E3-82370-20	PLUG CAP ASS'Y (With Resistor)	1 U.R.
3	95895-06016	BOLT	2	7	97313-06010	BOLT	1
4	6E0-85570-11	IGNITION COIL ASS'Y	1 U.R.	8	6E0-85540-70	C.D.I. UNIT ASS'Y	1
*	6E0-85570-20	IGNITION COIL ASS'Y	1 U.R.	9	6E0-85548-00	HOLDER, wire harness	1
5	97313-06030	BOLT	2	10	90105-06M15	BOLT	2
				11	92903-06100	WASHER	2

* Not shown

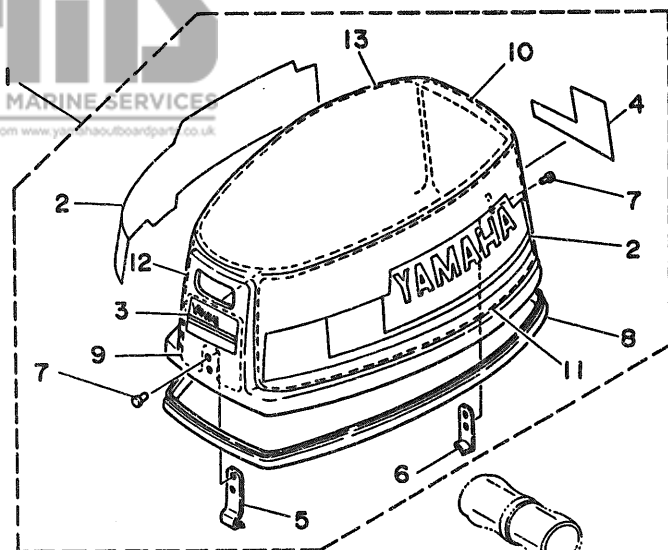


Fig. 10 COWLING (5CS MODEL)

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6E4-42610-E0-EJ	TOP COWLING ASS'Y	1	13	6E4-42665-80	. DAMPER 4	1
2	6E0-W0070-20	. GRAPHIC SIDE SET	1	14	6E1-42643-00	PLATE, clamp	1
3	6E0-42677-01	. GRAPHIC, front	1	15	6G1-2811G-00	BAND 1	1
4	6E3-42678-20	. GRAPHIC, rear	1	16	6E1-24182-00	DAMPER, locating	2
5	6E0-42651-00	. HOOK 1	1	17	6G1-24304-00	FUEL PIPE JOINT COMP.	1
6	6E0-42647-01	. HOLDER, clamp band	1	18	646-24251-01	STRAINER	1
7	90266-04M00	. RIVET	4	19	90445-09057	HOSE	1
8	6E0-42615-00	. SEAL	1	20	90445-09068	HOSE	1
9	6E3-42662-80	. DAMPER 1	1	21	90467-08004	CLIP	4
10	6E3-42663-80	. DAMPER 2	1	22	6E4-42711-80-EJ	COWLING, bottom	1
11	6E3-42664-80	. DAMPER 3	1	23	90480-14M18	GROMMET	1
12	6E3-42666-80	. DAMPER 5	1	24	90480-06M19	GROMMET	1

Fig.3, Ref.No.2

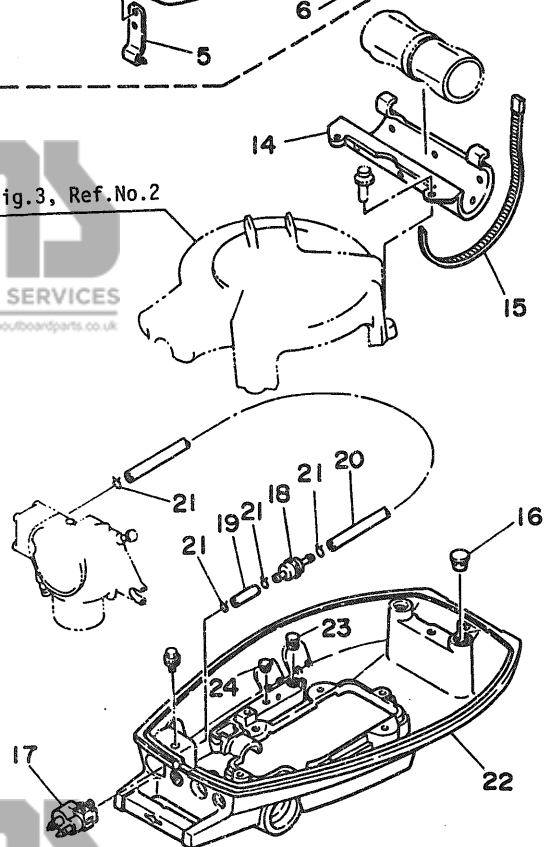


Fig.10, Ref.No.17

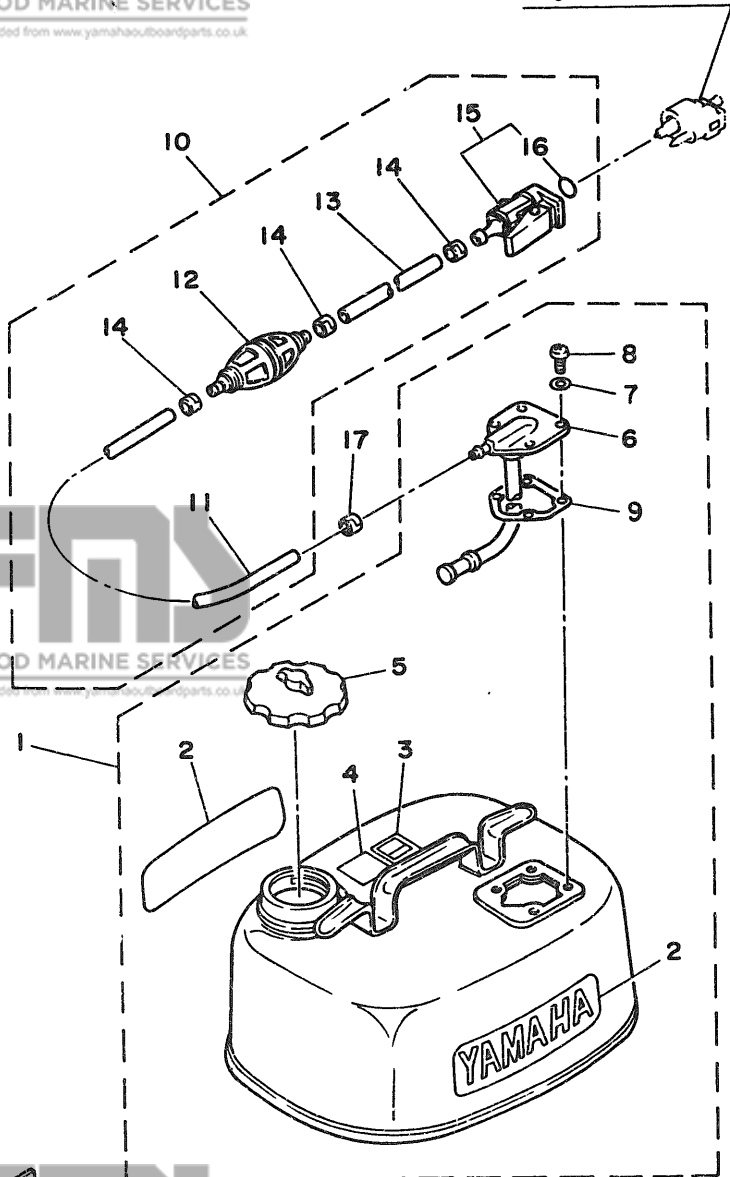


Fig. 11 FUEL (5CS MODEL)

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6Y0-24203-80-24	FUEL TANK ASS'Y	1	10	6Y0-24306-01	FUEL PIPE ASS'Y	1
2	6Y1-24246-00	. GRAPHIC, side	2	+11	90445-11M79	. HOSE (1500mm)	1
3	6Y1-24255-80	. GRAPHIC	1	12	6Y1-24360-00	. PRIMARY PUMP ASS'Y	1
4	6Y1-24257-00	. GRAPHIC	1	+13	90445-11M78	. HOSE (1000mm)	1
5	647-24610-03	. CAP ASS'Y	1	14	650-24351-00	. BAND, fuel pipe 1	3
6	6Y0-24275-00	. FUEL METER COMP.	1	15	655-24305-01	. FUEL PIPE JOINT COMP. 2	1
7	630-24329-00	. SEAL	4	16	93210-08287	. O-RING	1
8	98580-05015	. SCREW, panhead	4	17	650-24351-00	BAND, fuel pipe 1	1
9	663-24268-00	. GASKET, fuel meter housing	1				

+ Also available in 30m rolls (Parts No. 90890-56878)

Fig.4, Ref.No.22


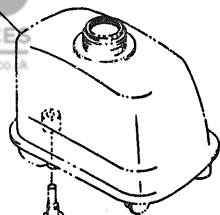


Fig.4, Ref.No.30

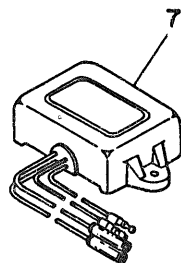

5C MODEL

Fig.11, Ref.No.15

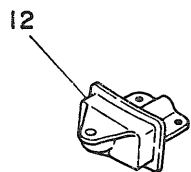


Fig.9, Ref.No.1

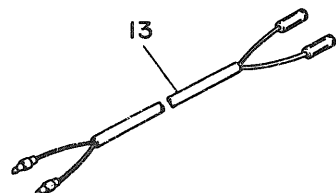
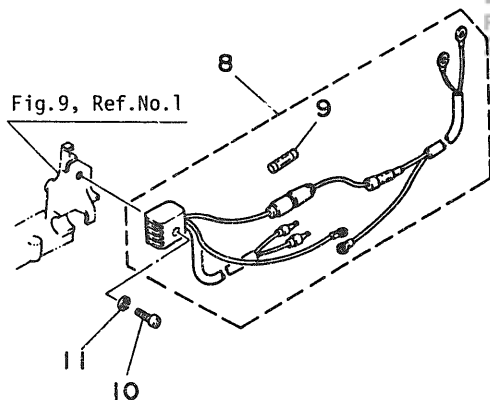


Fig. 12 OPTIONAL PARTS

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
FUEL PIPE JOINT (5C Model)				RECTIFIER			
1	661-24304-00	FUEL PIPE JOINT COMP.	1	8	676-81970-00	RECTIFIER ASS'Y	1
2	646-24251-01	STRAINER	1	9	663-82151-00	FUSE (12V-20A)	1
3	688-24378-00	PIPE, joint	1	10	97803-05025	SCREW, panhead	1
4	90445-09068	HOSE	1	11	92903-05600	WASHER	1
5	90445-09220	HOSE	2	VERTICAL STARTER			
6	90467-08004	CLIP	6	12	6E0-15758-80-EJ	GUIDE, wire	1
VOLTAGE REGULATOR				LEAD WIRE			
7	663-81910-00	VOLTAGE REGULATOR ASS'Y	1	13	6E0-83553-20	WIRE, lead	1

Fig. 13 REPAIR KIT

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6E3-W0001-01	POWER HEAD GASKET KIT	1	25	6E0-14227-00	. PACKING	1
2	93210-42159	. O-RING	1	26	647-14323-00	. SCREW, air adjusting	1
3	93102-20M15	. OIL SEAL	1	27	6E0-24471-00	. DIAPHRAGM	1
4	6E3-41112-01	. GASKET, exhaust inner cover	1	28	6E0-24411-00	. DIAPHRAGM	1
5	6E3-41114-01	. GASKET, exhaust outer cover	1	29	6E0-W0001-20	LOWER UNIT GASKET KIT	1
6	6E3-11193-01	. GASKET, head cover	1	30	93101-11M14	. OIL SEAL	2
7	93102-20M06	. OIL SEAL	1	31	90430-08020	. GASKET	3
8	93101-11M25	. OIL SEAL	1	32	6E0-45315-00	. PACKING, lower casing	1
9	93210-31114	. O-RING	1	33	6E0-44315-00	. GASKET, water pump	1
10	6E0-13621-00	. PACKING, valve seat	1	34	93101-13M12	. OIL SEAL	2
11	6E0-14198-00	. GASKET	1	35	93210-48214	. O-RING	1
12	654-14384-00	. GASKET, float chamber	1	36	6E0-W0078-00	WATER PUMP REPAIR KIT	1
13	6A1-14398-00	. GASKET	1	37	6E0-44311-00	. HOUSING, water pump	1
14	6E0-45113-00	. GASKET, upper casing	1	38	6E0-44315-00	. GASKET, water pump	1
15	646-44365-00	. RUBBER, water seal 1	1	39	6E0-44322-00	. INSERT, cartridge	1
16	6E0-W0093-00	CARBURETOR REPAIR SET	1	40	6E0-44323-00	. OUTER PLATE, cartridge	1
17	6E0-14198-00	. GASKET	1	41	646-44366-01	. RUBBER, water seal 2	1
18	654-14384-00	. GASKET, float chamber	1	42	6E0-44352-00	. IMPELLER	1
19	97803-04016	. SCREW	1	43	97395-06045	. BOLT	4
20	6A1-14398-00	. GASKET	1	44	93604-090C6	. PIN, dowel B	1
21	647-14385-00	. FLOAT	1	45	6E0-W0078-0A	CHROME PUMP KIT	1
22	6E0-14387-00	. ARM	1	46	6E0-44322-40	. INSERT, cartridge	1
23	647-14386-00	. PIN, float	1	47	6E0-44323-40	. OUTER PLATE, cartridge	1
24	6E0-14392-00	. VALVE, needle	1				

NUMERICAL INDEX

REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.
7-58	6E0-W0001-20	2-16	6E0-14381-00	12-1	6E0-42138-01	6-17	6E0-43614-00-EJ	5-42	6E0-45318-00	7-54	6E0-45318-00
13-29	677-14383-00	2-19	677-14383-00	11-15	6E0-42159-00	6-18	6E0-43632-00	5-29	6E0-45321-01-9M	7-11	6E0-45321-01-9M
1-45	654-14384-00	2-17	654-14384-00	11-10	6E0-42528-02	5-38	6E0-44111-01	6-21	6E0-45331-00-9M	7-53	6E0-45331-00-9M
13-1		13-12	630-24329-00	11-7	6E0-42529-01	5-35	6E0-44116-00	6-24	6E0-45361-00-EJ	7-47	6E0-45361-00-EJ
2-7	6E0-W0004-00	13-18	650-24351-00	11-14	6E0-42537-01	5-45	6E0-44121-00	6-28	6E0-45511-00	7-28	6E0-45511-00
4-2	6E0-W0070-20	2-21		11-17	6E0-42538-01	5-46	6E0-44143-00	6-30	6E0-45511-10	7-28	6E0-45511-10
10-2		13-21	647-14385-00	11-12	6E0-42542-00	4-28	6E0-44143-10	6-30	6E0-45551-00	7-31	6E0-45551-00
7-60	6E0-W0078-0A	2-23	647-14386-00	1-8	606-42591-00	4-40	6E0-44145-00	6-33	6E0-45560-00	7-35	6E0-45560-00
13-45		13-23	6E0-14387-00	12-3	6E3-42610-E0-EJ	4-1	6E0-44146-00	6-34	6E0-45570-00	7-43	6E0-45570-00
7-59	6E0-W0078-00	2-22		2-42	6E4-42610-E0-EJ	10-1	655-44147-00	7-16	6E0-45611-00	7-41	6E0-45611-00
13-36		13-22	6E0-14392-00	13-28	6E0-42615-00	4-8	6E0-44150-00	7-15	647-45616-02	7-50	647-45616-02
1-1	6E3-W0090-01-EJ	2-26		2-39		10-8	6E0-44150-10	7-15	6E0-45631-00	7-40	6E0-45631-00
1-1	6E3-W0090-21-EJ	13-24	6E0-14398-00	2-36	6E1-42643-00	10-14	6E0-44311-00	7-17	654-45633-00	7-38	654-45633-00
2-49	6E0-W0093-00	2-20		2-40	6E0-42647-01	4-6		13-37	654-45635-00	7-36	654-45635-00
13-16		13-13		2-43		10-6	6E0-44315-00	7-18	6E0-45941-00-36	7-52	6E0-45941-00-36
1-34	6E3-11191-01-9M	13-20		2-38	6E0-42651-00	4-5		13-33	644-45941-01-36	7-52	644-45941-01-36
1-35	6E3-11193-01	2-44	6E0-14417-00	2-37		10-5		13-38	654-45941-01-36	7-52	654-45941-01-36
13-6		2-45	6E0-14418-00	13-27	6E3-42662-80	4-9	6E0-44322-00	13-39	6E0-45943-00-36	7-52	6E0-45943-00-36
1-3	650-11370-00	1-5	624-14485-00	4-29		10-9	6E0-44322-01	7-19	654-45943-01-36	7-52	654-45943-01-36
1-4	6E5-11372-00	1-2	6E3-15100-01-94	4-33	6E3-42663-80	4-10	6E0-44322-40	7-19	6E0-45945-00-36	7-52	6E0-45945-00-36
1-21	6E3-11400-00	8-6	6E0-15359-00-94	4-32		10-10		13-46	6E0-45947-00-36	7-52	6E0-45947-00-36
1-22	6E3-11412-00	1-39	6E0-15396-00-9M	4-36	6E3-42664-80	4-11	6E0-44323-00	7-20	6E0-81303-80	8-23	6E0-81303-80
1-23	6E3-11422-00	3-10	6E0-15705-00	4-34		10-11		13-40	6E0-81328-70	8-14	6E0-81328-70
1-30	6J1-11610-00	3-1	6E3-15710-02-94	4-24	6E3-42665-80	4-13	6E0-44323-40	7-20	6E0-81336-70	8-13	6E0-81336-70
1-29	6E3-11631-00-98	3-2	6E0-15711-01-94	11-5	6E4-42665-80	10-13		13-47	663-81910-00	12-7	663-81910-00
1-32	6G1-11633-00	3-3	6E0-15714-01	4-23	6E3-42666-80	4-12	6E0-44328-00	7-24	676-81970-00	12-8	676-81970-00
1-24	6E0-11651-00	3-5	6E0-15717-00-94	6-20		10-12	6E0-44352-00	7-22	663-82151-00	12-9	663-82151-00
1-26	6G1-11681-00	8-3	6E0-15723-00-94	4-41	6E0-42677-01	4-3		13-42	6E0-82316-00-94	9-1	6E0-82316-00-94
1-20	6E5-12411-00	3-8	677-15741-01	10-15		10-3	6E0-44361-00	7-26	6E0-82317-00	9-2	6E0-82317-00
2-6	6E0-13610-00	3-12	6G1-15755-00	5-50	6E3-42678-20	4-4	6E0-44361-10	7-26	6E3-82370-20	9-6	6E3-82370-20
2-8	6E0-13621-00	12-12	6E0-15758-80-EJ	1-14		10-4	646-44365-00	7-27	663-82370-01	9-6	663-82370-01
13-10		3-13	6E3-15758-01	1-15	6E0-42711-02-EJ	4-14		13-15	6E0-82550-00	4-39	6E0-82550-00
2-27	6E0-14157-00	3-14	6E0-15761-00	13-4	6E4-42711-80-EJ	10-22	646-44366-01	7-21	6E0-83553-20	12-13	6E0-83553-20
2-14	6E0-14198-00	3-17	689-15779-01	1-16	6A1-42792-01	4-15		13-41	6E0-85500-70	8-1	6E0-85500-70
13-11		4-22	6E0-24110-00-EJ	1-17	6E0-42815-00-EJ	4-16	6E0-45111-01-EJ	5-1	6E0-85520-70	8-7	6E0-85520-70
13-17		4-25	6E0-24181-00	13-5	6E0-42816-00	4-18	6E0-45111-11-EJ	5-1	6E0-85540-70	9-8	6E0-85540-70
2-31	646-14212-01	10-16	6E1-24182-00	2-4	6E0-43111-00-EJ	5-11	6E0-45113-00	5-2	6E0-85548-00	9-9	6E0-85548-00
2-28	6E0-14227-00	4-26	6E3-24182-00	2-5	6E0-43112-00-EJ	5-12		13-14	6E0-85550-70	8-2	6E0-85550-70
13-25		8-19	6E0-24183-00	2-1	648-43114-01	5-13	663-45119-00	5-49	6E0-85560-70	8-5	6E0-85560-70
2-15	6E3-14301-01	11-1	6Y0-24203-80-24	2-3	6E0-43116-00	5-14	647-45151-01	5-9	6E0-85570-11	9-4	6E0-85570-11
2-32	648-14321-00	11-2	6Y1-24246-00	6-1	6E0-43118-00	5-15	6E0-45251-00	7-6	6E0-85570-20	9-4	6E0-85570-20
2-30	647-14323-00	10-18	646-24251-01	6-11	6E0-43160-00	5-39	6E0-45300-00-EJ	7-1	6E0-85592-70	8-11	6E0-85592-70
13-26		12-2		6-10	656-43165-01	5-40	6E0-45300-10-EJ	7-1	6E0-85595-70	8-9	6E0-85595-70
2-34	647-14326-00	11-3	6Y1-24255-80	6-6	6E0-43181-00	5-28	6E0-45311-00-EJ	7-2	90101-06335	5-21	90101-06335
2-24	6E0-14341-00	11-4	6Y1-24257-00	6-2	620-43189-00	5-31	6E0-45315-00	7-12	90101-08M68	5-17	90101-08M68
2-33	648-14342-23	11-9	663-24268-00	6-4	6E0-43311-02-EJ	5-25		13-32	90105-06M14	1-19	90105-06M14
2-25	648-14343-43	11-6	6Y0-24275-00	6-7	6E0-43312-02-EJ	5-26	6E0-45316-09	7-4		1-36	
2-41	6E0-14346-00	10-17	6G1-24304-00	6-12	6E0-43313-00-EJ	5-30	6E0-45317-09	7-3		2-9	

PART NO.	REF. NO.	PART NO.	REF. NO.
90105-06M14	3-15	90445-09068	12- 4
	8- 4	90445-09220	12- 5
	8-18	90445-11M78	11-13
90105-06M15	3-18	90445-11M79	11-11
	4-37	90467-06016	1- 7
	9-10	90467-08M01	7-29
	1-12	90467-08004	4-31
90105-06M16	1-13		10-21
90105-06M17	2-11		12- 6
90116-06M08	8-15	90480-06M19	10-24
90159-04035	8-10	90480-10M13	5-10
90159-04036	8-12	90480-14M14	4-38
90159-05037	8- 8	90480-14M18	10-23
90159-05038	8-24	90501-10064	7-37
90159-05040	8-20	90501-23215	6-14
90170-10113	5-20	90508-14M10	5-43
90185-08M00	3-16	90508-14M11	5-44
90201-06M30	5-18	90508-16020	5-33
90201-08M47	6-15	90508-16021	5-34
90201-10119	8-21	90510-08M03	3- 4
90201-10126	7-33	90560-06088	5-22
90201-11M49	7-42	90890-44372	3-11
90201-13M50	1-37	91490-12008	6- 9
90201-32M48	6-38	91490-16010	6-32
90202-07M22	2- 2	91490-30030	7-51
90202-12M16	4-35	91690-20010	5-36
90202-12M17	4-19	91690-30008	5-41
90206-12052	6-23	92903-05600	2-47
90206-16M06	1-27		6-37
90209-18112	7-49		12-11
90250-05009	7-39	92903-06100	9-11
90250-05046	5-16	92903-06600	2-13
90254-04M00	4- 7		6-25
90266-04M00	10- 7	92990-05600	6-31
	6-13		7-57
90269-02001	8-22	92990-06600	1-41
90280-04006	7- 9		5- 5
90340-08014	4-17		5- 7
90386-12069	6- 3		5-23
90386-26M30	6-36		7-14
90386-26M33	7- 8	92990-08600	5-19
90430-08020	13-31	93101-11M14	7- 5
	1-10		13-30
90445-07M00	1- 6	93101-11M25	1-42
90445-07M28	1- 9		13- 8
90445-07M51	4-30	93101-13M12	7-45
90445-09M37	10-19		13-34
90445-09057	10-20	93102-20M06	1-38
90445-09068			

NUMERICAL	INDEX	REF. NO.	PART NO.
13- 7	97313-06035	3- 6	
8-17	97395-06012	6-27	
13- 3		7- 7	
11-16	97395-06016	1-40	
6-22		5- 6	
1-43	97395-06025	7-13	
13- 9	97395-06030	5- 4	
8-16	97395-06035	7-10	
13- 2	97395-06045	7-23	
7-46		13-43	
13-35	97780-40720	2-48	
7-44	97803-04007	2-29	
7-34	97803-04016	2-18	
1-28		13-19	
1-31	97803-05025	2-46	
1-25		12-10	
7-55	97890-05012	6- 8	
3- 9		6-19	
7-32	97890-05025	7-56	
1-33	97890-06030	4-20	
7-30	98180-05025	6-16	
13-44	98503-04020	2-35	
7-25	98580-05015	11- 8	
1-11			
5- 3			
5-48			
1-44			
1-44			
3- 7			
2-12			
4-21			
5-24			
5- 8			
6-26			
5-37			
2-10			
5-47			
7-48			
9- 3			
5-32			
6-35			
1-18			
4-27			
6-29			
5-27			
6- 5			
9- 7			
9- 5			

PART NO.	REF. NO.	PART NO.	REF. NO.
----------	----------	----------	----------