

4A

4AC(6E0)
4AS(6E1)



CONTENTS

Fig. 1	CYLINDER. CRANKCASE	54
Fig. 2	INTAKE	56
Fig. 3	STARTER	58
Fig. 4	COWLING. FUEL	60
Fig. 5	UPPER CASING. BRACKET	62
Fig. 6	CONTROL	64
Fig. 7	LOWER CASING. DRIVE 1	66
Fig. 8	GENERATOR	68
Fig. 9	ELECTRICAL 1	70
Fig. 10	ALTERNATE 1 (4AS MODEL)	72
Fig. 11	ALTERNATE 2 (4AS MODEL)	74
Fig. 12	REPAIR KIT	76

Fig. 1 CYLINDER. CRANKCASE

FLOOD MARINE SERVICES


downloaded from www.yamahaoutboardparts.co.uk

FLOOD MARINE SERVICES


downloaded from www.yamahaoutboardparts.co.uk

FLOOD MARINE SERVICES

downloaded from www.yamahaoutboardparts.co.uk

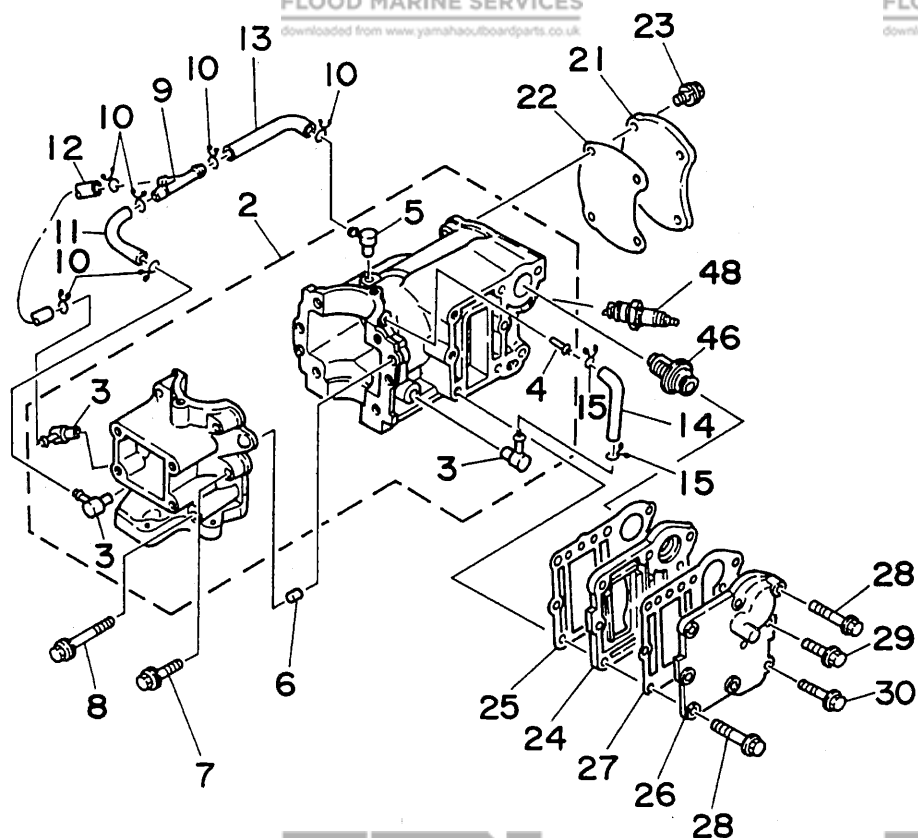

CRANK CYLINDER
ASSY

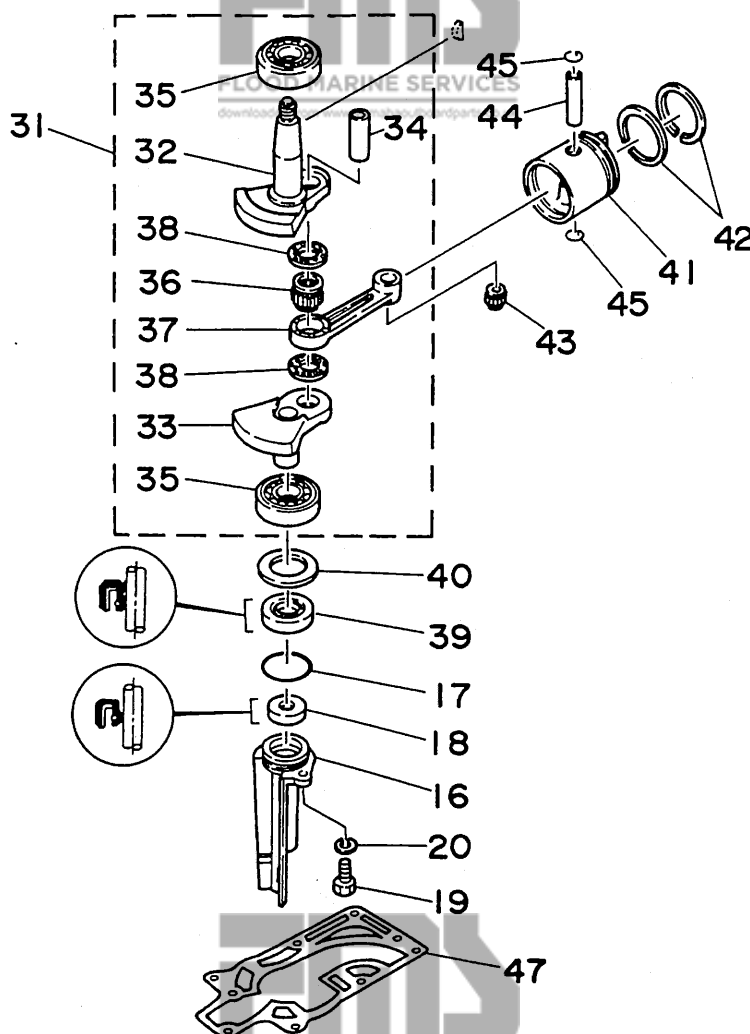

FWD

FLOOD MARINE SERVICES

downloaded from www.yamahaoutboardparts.co.uk

FLOOD MARINE SERVICES

downloaded from www.yamahaoutboardparts.co.uk

FLOOD MARINE SERVICES

downloaded from www.yamahaoutboardparts.co.uk

Fig. 1 CYLINDER. CRANKCASE

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6E0-W0090-03-EJ	CRANK CYLINDER ASSY (Ref.No. 2 to 47)	1	26	6E0-41113-01-9M	OUTER COVER, exhaust	1
2	6E0-15100-01-94	CRANKCASE ASSY	1	27	6E0-41114-01	GASKET, exhaust outer cover	1
3	650-11370-00	.CHECK VALVE ASSY	3	28	90105-06M24	BOLT, washer based	7
4	624-14485-00	.PIPE, joint	1	29	90105-06M16	BOLT, washer based	1
5	6E5-11372-00	.NIPPLE, hose	1	30	90105-06M14	BOLT, washer based	1
6	93604-08062	PIN, dowel	2	31	6E0-11400-00	CRANKSHAFT ASSY	1
7	90105-06M16	BOLT, washer based	4	32	6E0-11412-00	.CRANK 1	1
8	90105-06M17	BOLT, washer based	2	33	6E0-11422-00	.CRANK 2	1
9	6E0-24378-00	PIPE, joint 4	1	34	6G1-11681-00	.PIN, crank 1	1
10	90467-06016	CLIP	6	35	93306-204U0	.BEARING	2
11	90445-07M00	HOSE	1	36	93310-418V1	.BEARING, cylindrical	1
12	90445-07M28	HOSE	1	37	6E0-11651-01	.ROD, connecting	1
13	90445-07M51	HOSE	1	38	90209-18112	.WASHER	2
14	90445-07M28	HOSE	1	39	93101-20M29	OIL SEAL	1
15	90467-06016	CLIP	2	40	90201-32M48	WASHER, plate	1
16	6E0-15396-02-9M	HOUSING, oil seal	1	41	6E0-11631-00-98	PISTON (STD)	1
17	93210-31114	O-RING	1	42	6G1-11610-00	PISTON RING SET (STD)	1
18	93101-10M25	OIL SEAL	1	43	93310-112V0	BEARING, cylindrical	1
19	97395-06016	BOLT	1	44	6G1-11633-00	PIN, piston	1
20	92990-06600	WASHER, plate	1	45	93450-13022	CIRCLIP	2
21	6E0-11191-01-9M	COVER, cylinder head 1	1	46	6E5-12411-01	THERMOSTAT	1
22	6E0-11193-01	GASKET, head cover 1	1	47	6E0-45113-00	GASKET, upper casing	1
23	90105-06M14	BOLT, washer based	4	48	94702-00272	PLUG, spark (NGK BR7HS)	1
24	6E0-41111-01-9M	INNER COVER, exhaust	1				
25	6E0-41112-01	GASKET, exhaust inner cover	1				

Fig. 2 INTAKE

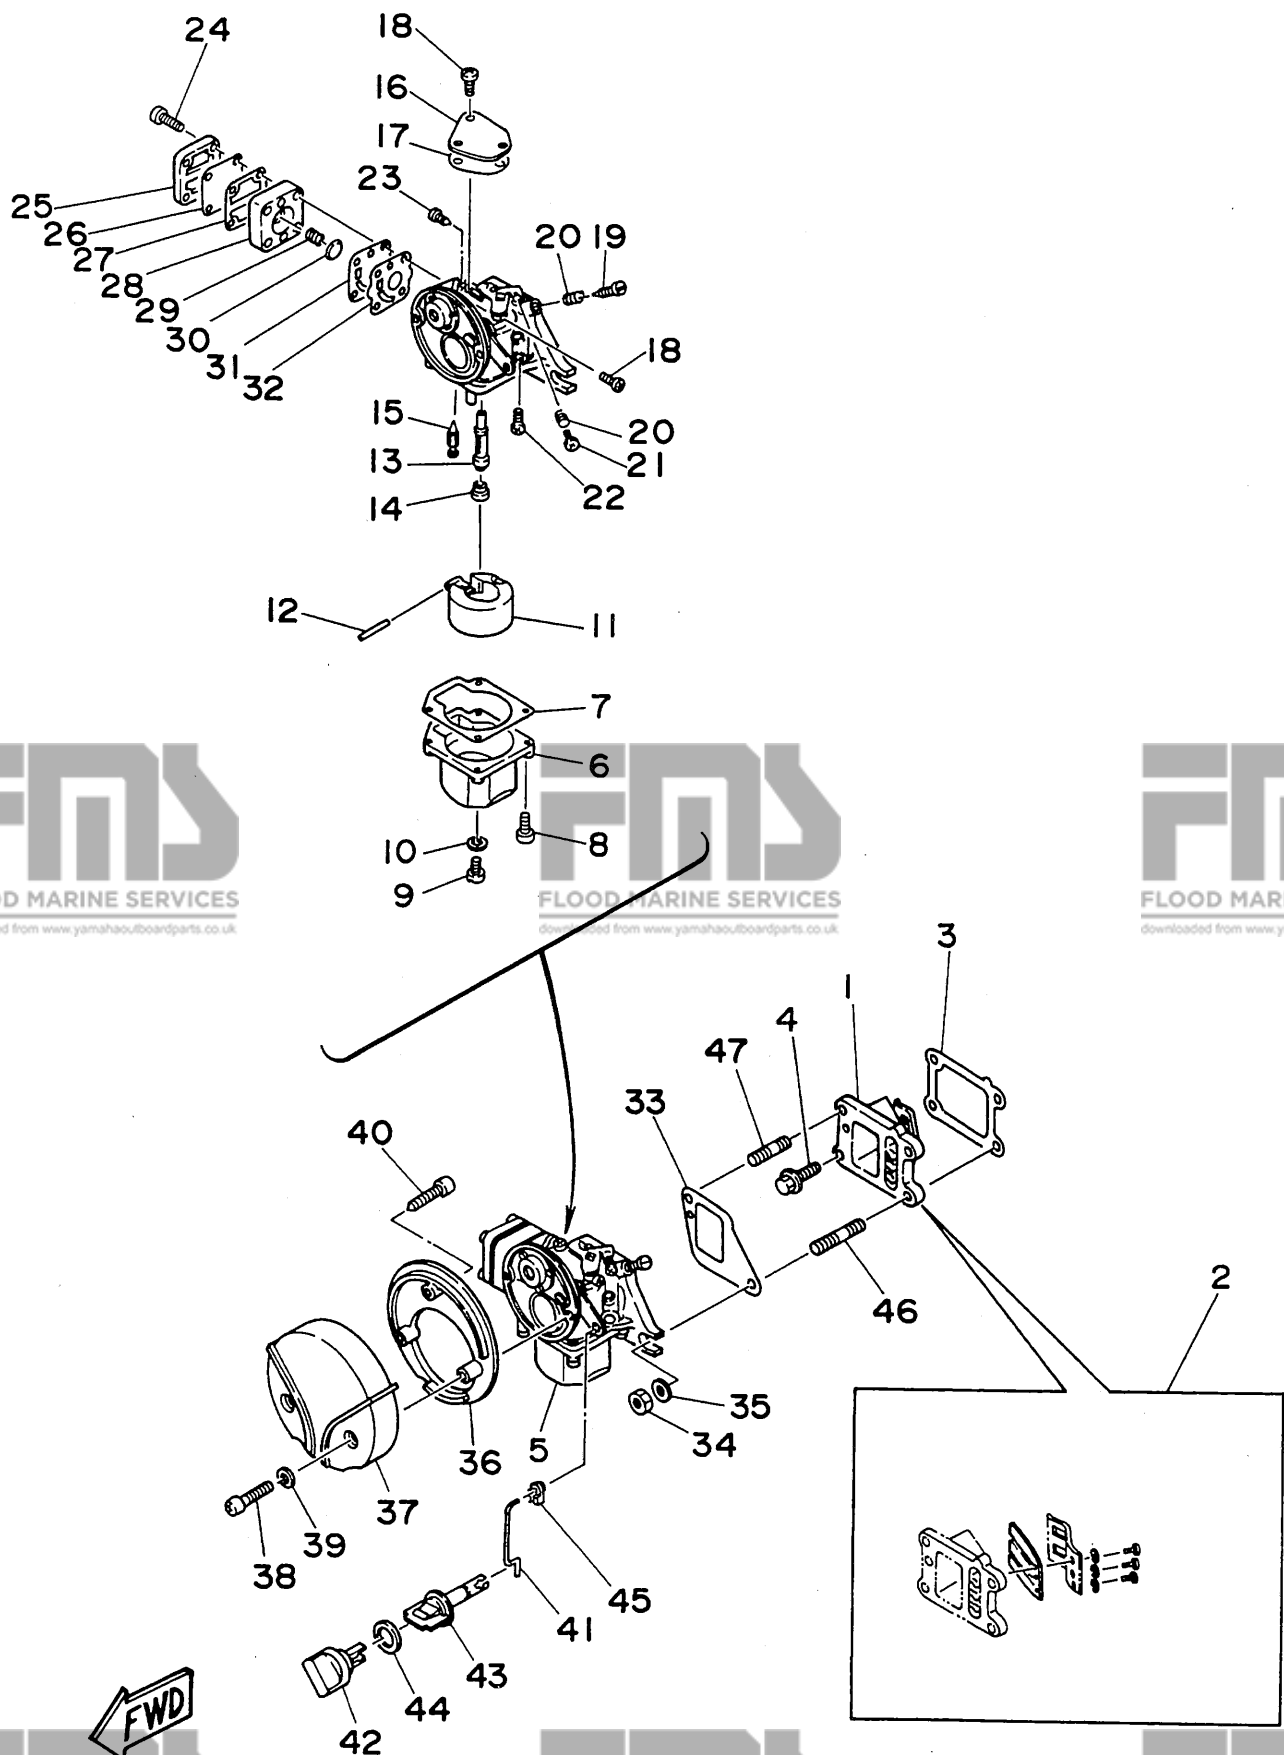


Fig. 2 INTAKE


Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6E0-13610-00	REED VALVE ASSY	1	25	6E0-24413-00	.COVER	1
2	6E0-W0004-00	.REED SET	1	26	6E0-24471-00	.DIAPHRAGM	1
3	6E0-13621-00	GASKET, valve seat	1	27	6E0-24435-00	.GASKET, body 2	1
4	90105-06M14	BOLT, washer based	2	28	6E0-24412-00	.BODY 1	1
5	6E0-14301-03	CARBURETOR ASSY 1	1	29	6E0-24423-00	.SPRING, diaphragm	1
6	6E0-14381-01	.BODY, float chamber	1	30	6E0-14346-00	.PLATE	1
7	6E0-14384-00	.GASKET, float chamber	1	31	6E0-24411-00	.DIAPHRAGM	1
8	97603-04116	.SCREW, pan head with washer	4	32	6E0-24434-00	.GASKET, body	1
9	677-14383-01	.SCREW, drain	1	33	6E0-14198-00	GASKET	1
10	6A1-14398-00	.GASKET	1	34	95380-06700	NUT	2
11	6E7-14385-00	.FLOAT	1	35	92990-06600	WASHER, plate	2
12	647-14386-00	.PIN, float	1	36	6E0-14417-00	COVER 1	1
13	6E0-14341-01	.NOZZLE, main	1	37	6E0-14418-00	COVER 2	1
14	648-14343-40	.JET, main (# 80)	1	38	98580-05025	SCREW, pan head	2
15	6E0-14392-00	.VALVE, needle	1	39	92990-05600	WASHER, plate	2
16	6E0-14157-00	.COVER, plate	1	40	97780-40720	SCREW, tapping	1
17	6E0-14227-00	.GASKET	1	41	6E0-41256-00	ROD, choke 1	1
18	98580-04008	.SCREW, pan head	4	42	6E0-41271-00	KNOB, choke	1
19	647-14323-00	.SCREW, air adjusting	1	43	6E0-41272-00	KNOB, choke	1
20	646-14212-01	.SPRING, pilot adjusting	2	44	90202-12M16	WASHER, plate	1
21	98503-04014	.SCREW, pan head	1	45	661-41262-02	JOINT, choke lever	1
22	648-14342-23	.JET, pilot (# 46)	1	46	95621-06325	BOLT, stud	1
23	647-14326-00	.SCREW, guide	1	47	90116-06M08	BOLT, stud	1
24	98580-04020	.SCREW, pan head	4				

Fig. 3 STARTER

FLOOD MARINE SERVICES
downloaded from www.yamahaoutboardparts.co.uk

FMS
FLOOD MARINE SERVICES
downloaded from www.yamahaoutboardparts.co.uk

FMS
FLOOD MARINE SERVICES
downloaded from www.yamahaoutboardparts.co.uk

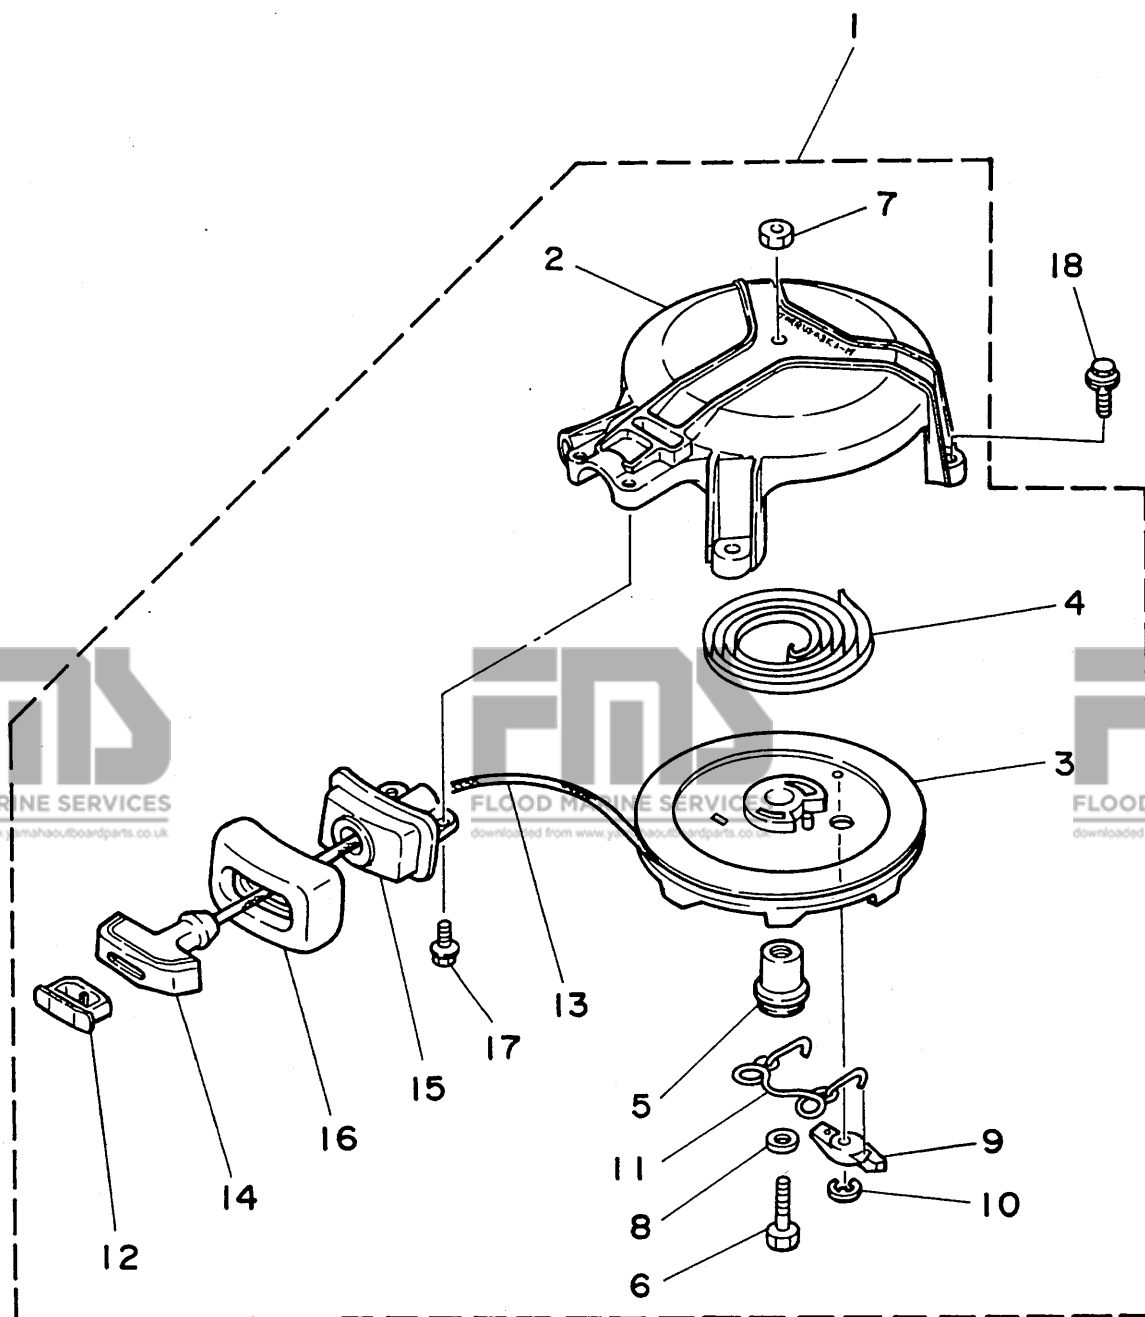

4A
FMS
FLOOD MARINE SERVICES
downloaded from www.yamahaoutboardparts.co.uk

FMS
FLOOD MARINE SERVICES
downloaded from www.yamahaoutboardparts.co.uk

FMS
FLOOD MARINE SERVICES
downloaded from www.yamahaoutboardparts.co.uk

Fig. 3 STARTER

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6E0-15710-03-94	STARTER ASSY	1	10	93430-06M02	.CIRCLIP	1
2	6E4-15711-71-94	.CASE, starter	1	11	6E0-15705-00	.SPRING, drive pawl	1
3	6E0-15714-01	.DRUM, sheave	1	12	6G1-15779-00	.COVER	1
4	90510-08M03	.SPRING, spiral	1	13	*	.WIRE (L1850)	1
5	6E0-15717-00	.SHAFT, starter	1	14	6G1-15755-00	.HANDLE, starter	1
6	97013-06035	.BOLT	1	15	6E0-15758-01	.GUIDE, rope	1
7	95303-06600	.NUT	1	16	6E0-15761-00	.SEAL, rubber 1	1
8	90201-06M30	.WASHER, plate	1	17	95895-06016	.BOLT, flange	2
9	677-15741-01	.PAWL, drive	1	18	95895-06020	BOLT, flange	3

* Cut from 50m rolls, Parts No. 90890-44372, cutting length 1.85m.

Fig. 4 COWLING. FUEL

FLOOD MARINE SERVICES


downloaded from www.yamahaoutboardparts.co.uk

FLOOD MARINE SERVICES

downloaded from www.yamahaoutboardparts.co.uk

FLOOD MARINE SERVICES

downloaded from www.yamahaoutboardparts.co.uk

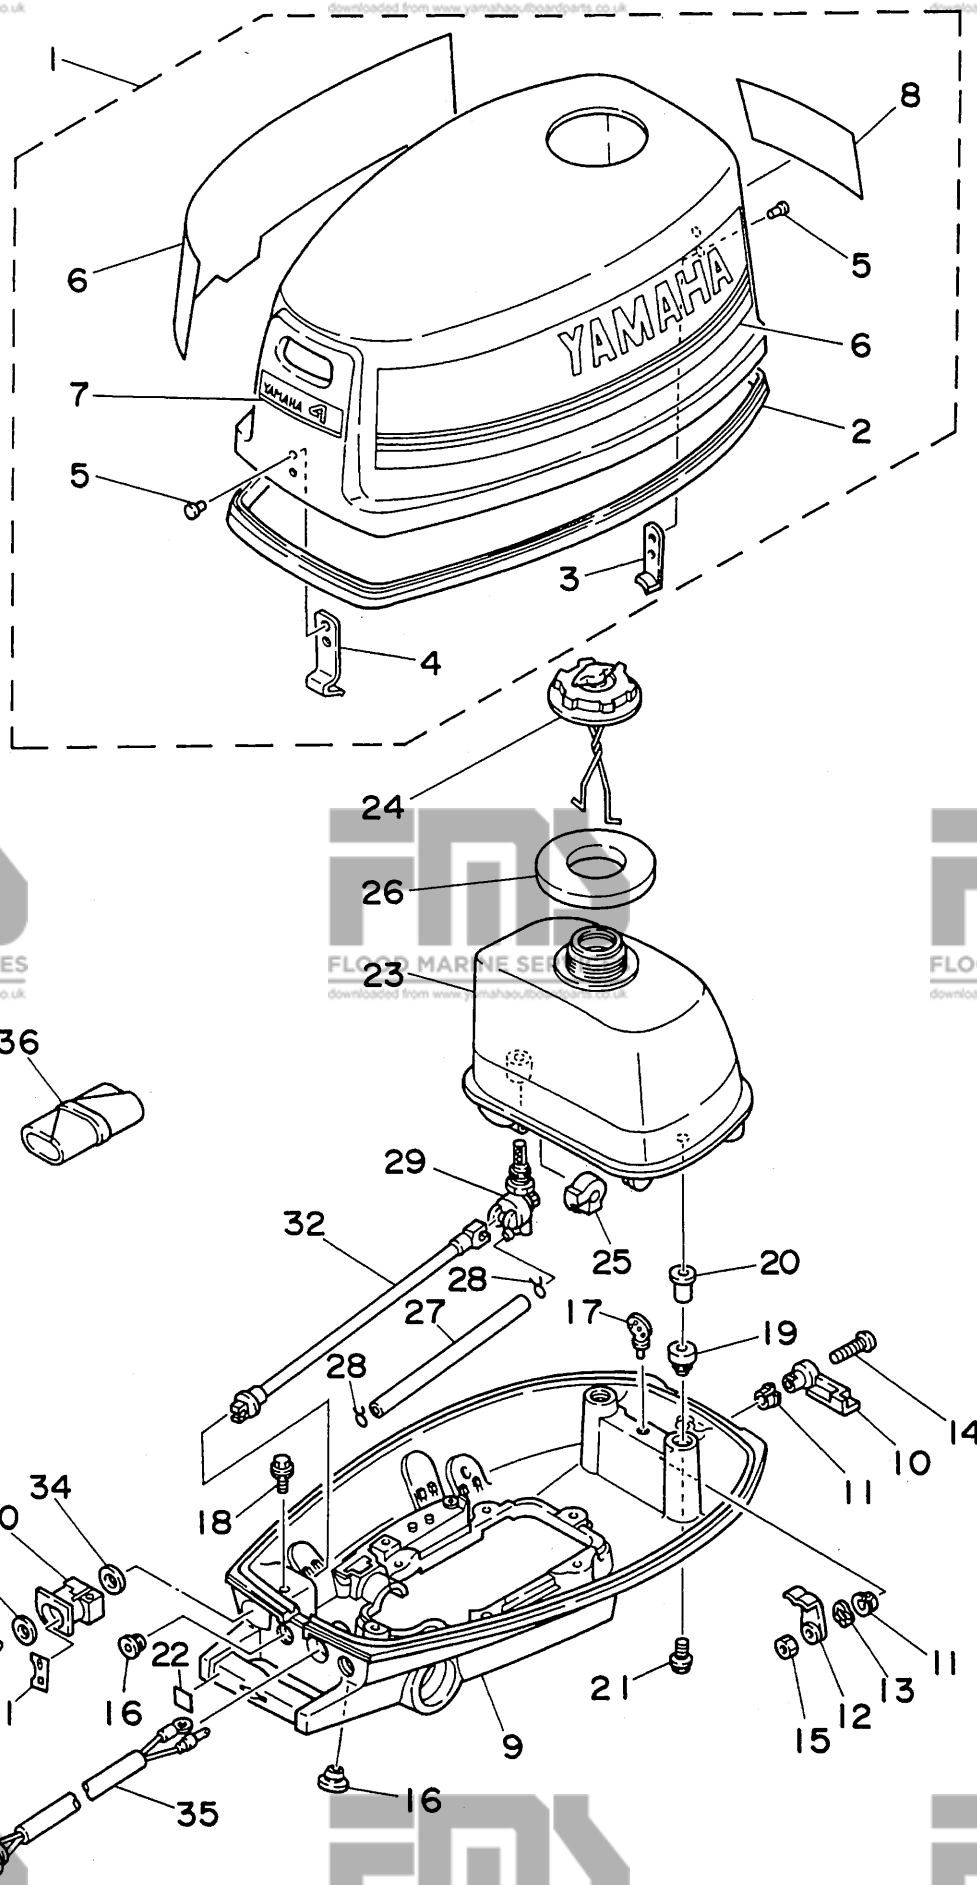

FLOOD MARINE SERVICES

downloaded from www.yamahaoutboardparts.co.uk

FLOOD MARINE SERVICES

downloaded from www.yamahaoutboardparts.co.uk

FLOOD MARINE SERVICES

downloaded from www.yamahaoutboardparts.co.uk

FLOOD MARINE SERVICES

downloaded from www.yamahaoutboardparts.co.uk

FLOOD MARINE SERVICES

downloaded from www.yamahaoutboardparts.co.uk

FLOOD MARINE SERVICES

downloaded from www.yamahaoutboardparts.co.uk

Fig. 4 COWLING. FUEL

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6E0-42610-25-EJ	TOP COWLING ASSY	1	19	6E0-24182-00	DAMPER, locating 2	2
2	6E0-42615-00	.SEAL	1	20	6E0-42542-00	PIPE	2
3	6E0-42647-01	.HOLDER, clamp band	1	21	95895-06025	BOLT, flange	2
4	6E0-42651-02	.HOOK	1	22	6A1-42792-01	MARK	1
5	90266-04M00	.RIVET	4	23	6E0-24110-00-EJ	FUEL TANK COMP.	1
6	6E0-W0070-23	.GRAPHIC SET	1	24	6E0-24610-02	CAP ASSY	1
7	6E0-42677-10	.GRAPHIC, front	1	25	6E0-24181-00	DAMPER, locating 1	2
8	6E0-42678-11	.GRAPHIC, rear	1	26	6E0-24641-00	GASKET, cap 1	1
9	6E0-42711-03-EJ	COWLING, bottom	1	27	90445-09M37	HOSE	1
10	6E0-42815-00-EJ	LEVER, clamp	1	28	90467-08004	CLIP	2
11	90386-12069	BUSH	2	29	6E0-24500-00	FUEL COCK ASSY 1	1
12	6E0-42816-00	LEVER, clamp	1	30	6E0-24571-00	BUSHING	1
13	90206-12052	WASHER, wave	1	31	6E0-24591-00	GRAPHIC	1
14	97895-06030	SCREW, pan head	1	32	6E0-24572-00	SHAFT, fuel change	1
15	95303-06700	NUT	1	33	6E0-24575-01	LEVER, fuel change	1
16	90480-14M14	GROMMET	2	34	90202-12M17	WASHER, plate	2
17	606-42591-00	HOLDER, shear pin	1	35	6E0-82550-00	ENGINE STOP SWITCH ASSY	1
18	95895-06020	BOLT, flange	1	36	656-W2810-01	TOOL KIT	1

Fig. 5 UPPER CASING. BRACKET

FLOOD MARINE SERVICES
downloaded from www.yamahaoutboardparts.co.uk

FLOOD MARINE SERVICES
downloaded from www.yamahaoutboardparts.co.uk

FLOOD MARINE SERVICES
downloaded from www.yamahaoutboardparts.co.uk

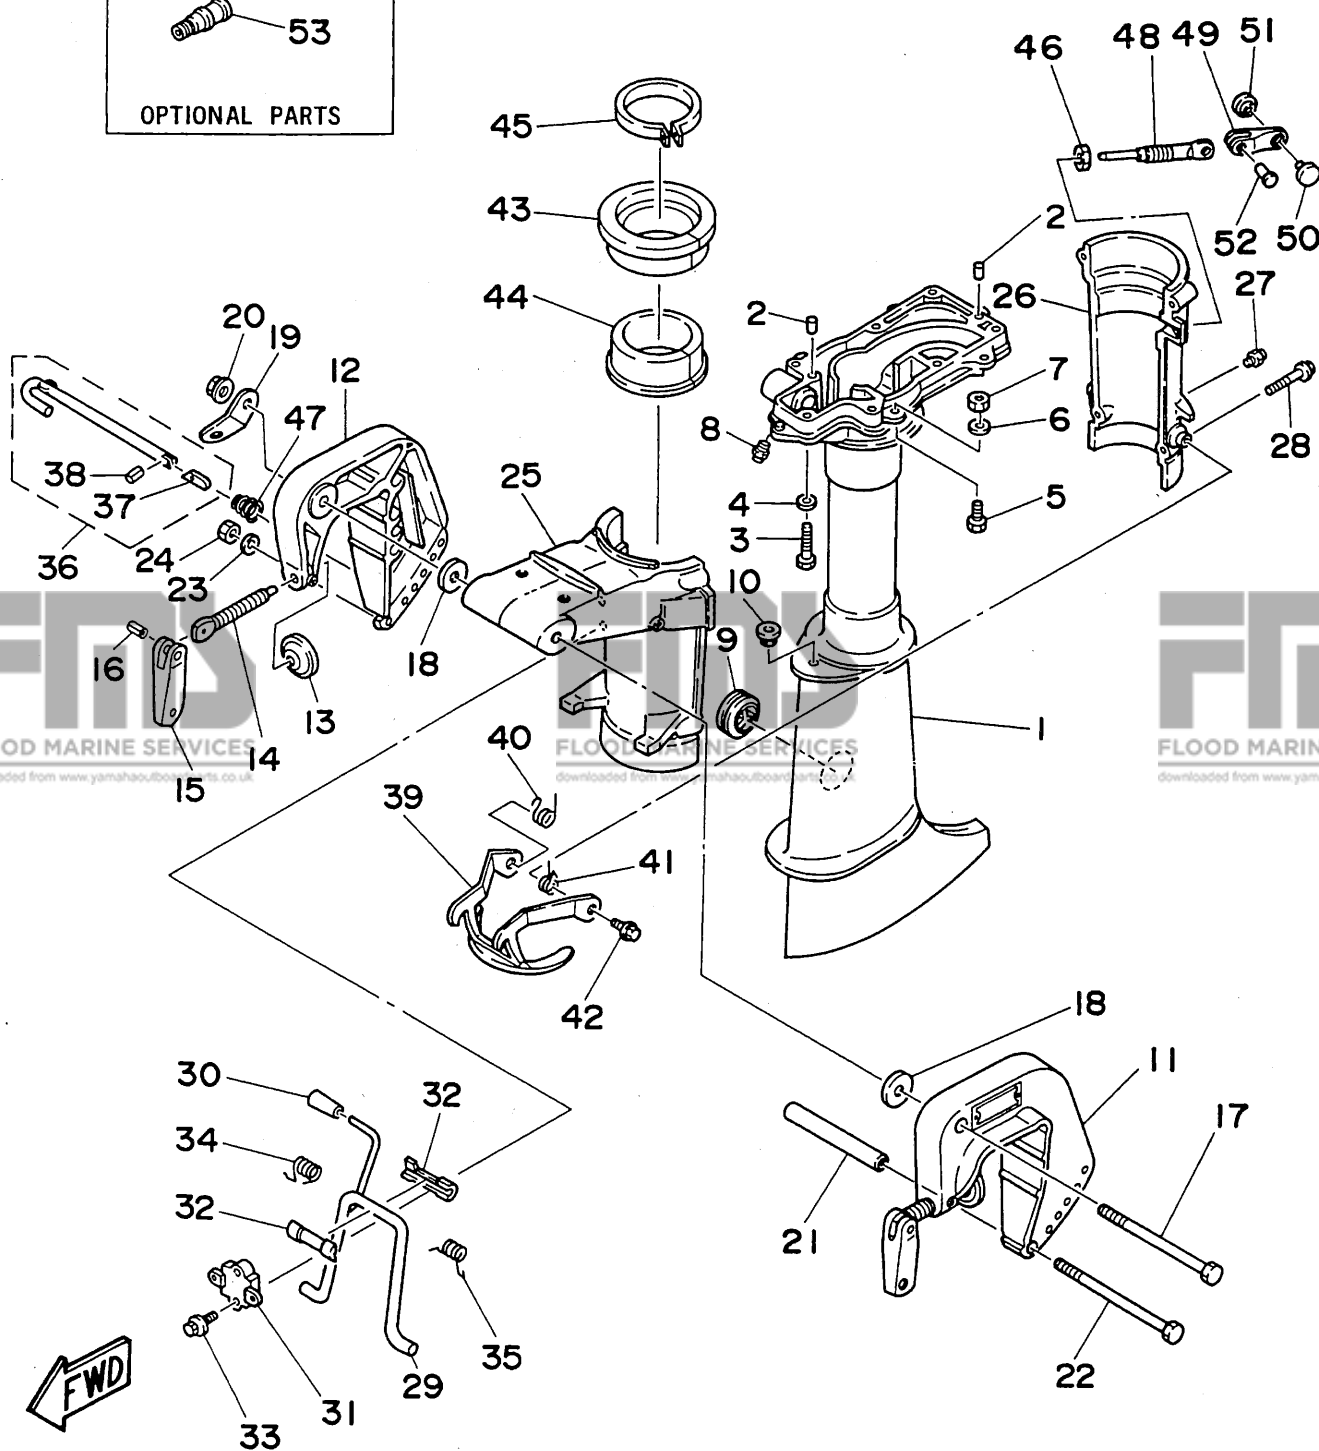
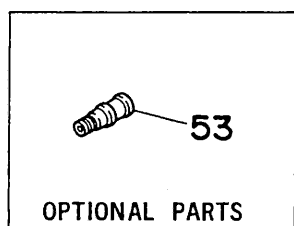


Fig. 5 UPPER CASING. BRACKET

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6E0-45111-02-EJ	CASING, upper (Short)	1 UR	27	93700-06004	NIPPLE, grease	1
	6E0-45111-12-EJ	CASING, upper (Long)	1 UR	28	95895-06035	BOLT, flange	4
2	93606-12019	PIN, dowel	2	29	6E0-43181-00	LEVER, tilt stop	1
3	97395-06030	BOLT	7	30	6E0-43632-00	KNOB, tilt	1
4	92990-06600	WASHER, plate	7	31	6E0-43313-00-94	BRACKET, swivel	1
5	97395-06016	BOLT	4	32	620-43189-00	BUSHING	2
6	92990-06600	WASHER, plate	4	33	95895-06020	BOLT, flange	2
7	95380-06700	NUT	4	34	90508-16020	SPRING, torsion	1
8	93700-06004	NIPPLE, grease	1	35	90508-16021	SPRING, torsion	1
9	647-45151-01	COVER, upper casing	1	36	6E0-43160-01	TILT ROD ASSY	1
10	90480-10M13	GROMMET	1	37	656-43165-01	.PLATE, tilt lock	1
11	6E0-43111-01-EJ	BRACKET, clamp	1	38	91690-30008	.PIN, spring	1
12	6E0-43112-01-EJ	BRACKET, clamp	1	39	6E0-43614-00-5B	PLATE, tilt lock	1
13	648-43114-01	PAD, transom clamp	2	40	90508-14M10	SPRING, torsion	1
14	6E0-43116-00	SCREW, transom clamp	2	41	90508-14M11	SPRING, torsion	1
15	6E0-43118-00	HANDLE, transom clamp	2	42	95895-06010	BOLT, flange	2
16	90254-04M00	PIN, spring	2	43	6E0-42537-01	BUSHING, pivot shaft	1
17	90101-08M07	BOLT	1	44	6E0-42538-01	BUSHING, pivot shaft	1
18	90201-08M03	WASHER, plate	2	45	6E0-42528-03	PLATE, friction	1
19	6A1-43113-01	PLATE, clamp bracket	1	46	95380-08600	NUT	1
20	95780-08300	NUT, flange	1	47	90502-08M05	SPRING, conical	1
21	90387-06M11	COLLAR	1	48	6L5-42529-01	SCREW, friction piece	1
22	90101-06335	BOLT	1	49	6L5-42561-00	KNOB, steering lock	1
23	92990-06600	WASHER, plate	1	50	6L5-44196-00	INDICATOR 3	1
24	95380-06600	NUT	1	51	6L5-44197-00	INDICATOR 4	1
25	6E0-43311-04-EJ	BRACKET, swivel	1	52	90266-04M05	RIVET	1
26	6E0-43312-02-EJ	BRACKET, swivel	1	53	6E0-28193-00-94	PLUG, water check	1 AP

Fig. 6 CONTROL

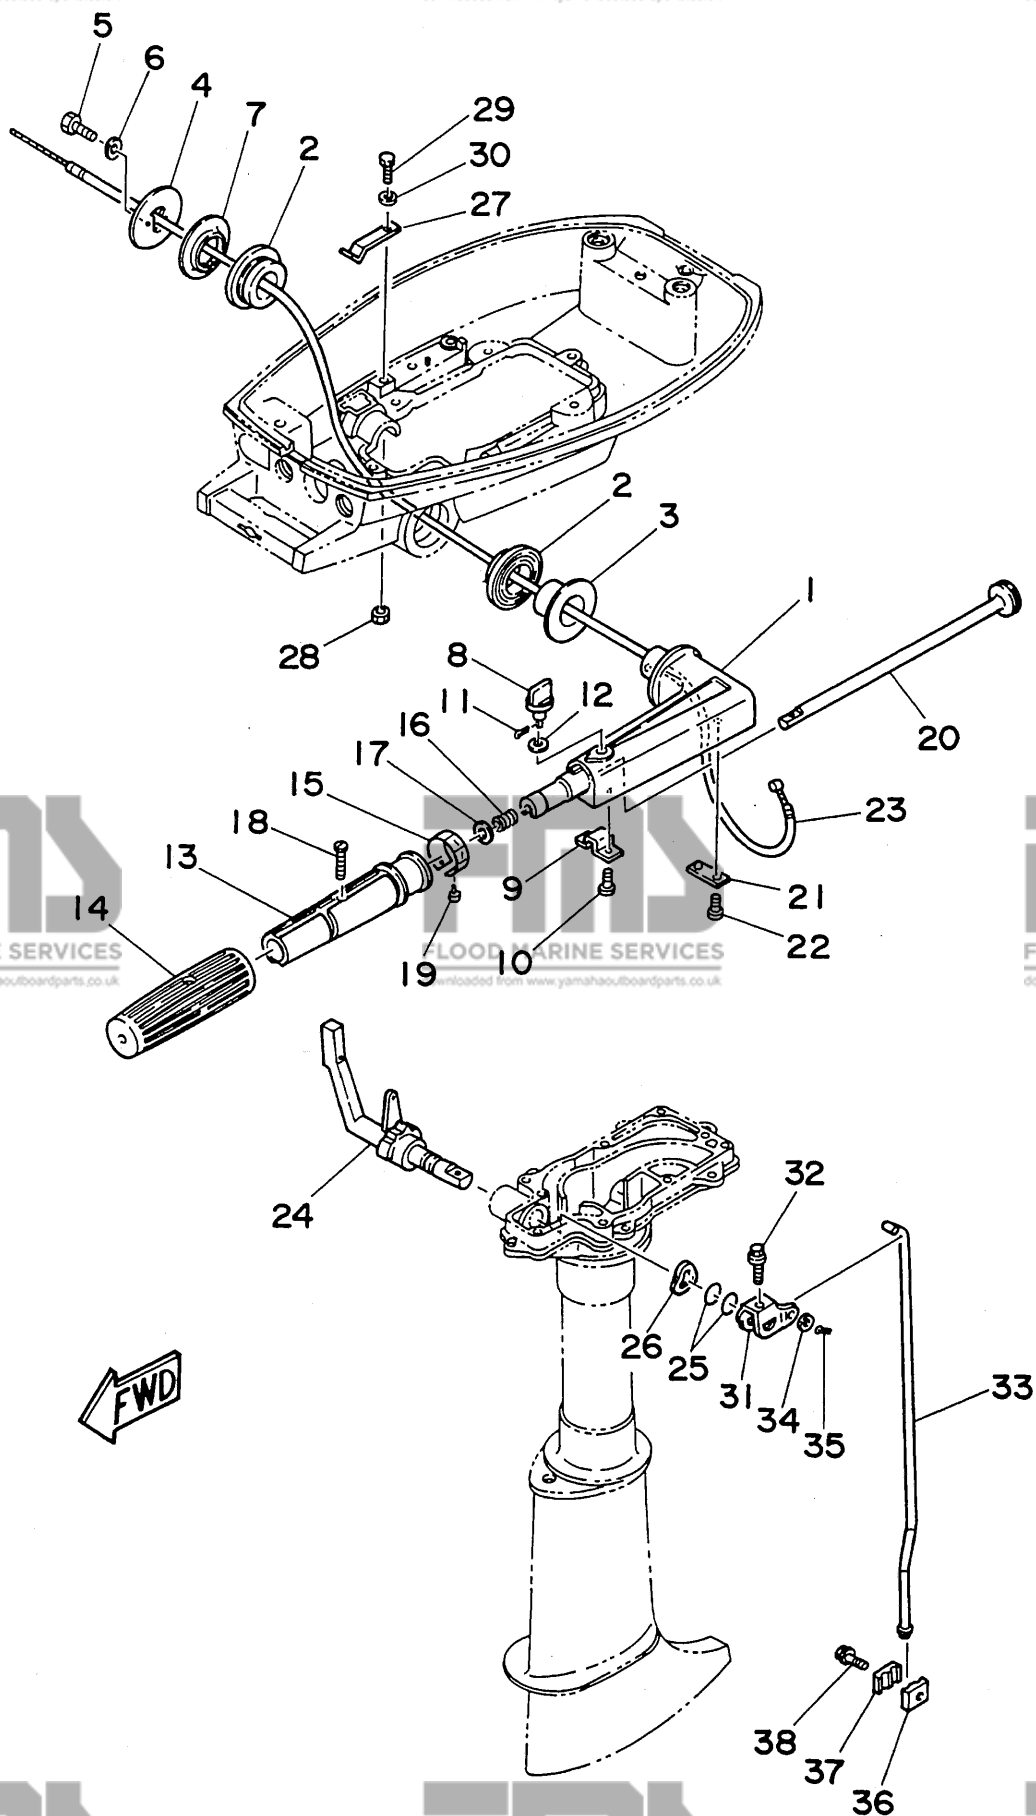


Fig. 6 CONTROL

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6E0-42111-01-EJ	HANDLE, steering	1	21	6E0-42159-02	STAY	1
2	6E0-42129-02	BUSHING, rubber	2	22	97895-05012	SCREW, pan head	2
3	90386-26M30	BUSH	1	23	6E0-26301-01	THROTTLE CABLE ASSY	1
4	6E0-42131-02-94	COVER, handle steering	1	24	6E0-44111-01	HANDLE, gear shift	1
5	97313-05020	BOLT	2	25	93210-12327	O-RING	2
6	92990-05600	WASHER, plate	2	26	90206-16M06	WASHER, wave	1
7	90386-26M33	BUSH	1	27	6E0-44116-00	SPRING	1
8	6E0-42125-00	BOLT, friction adjusting	1	28	95380-06700	NUT	1
9	6E0-42134-02	COVER, throttle lever	1	29	97395-06012	BOLT	1
10	97895-05012	SCREW, pan head	2	30	92990-06600	WASHER, plate	1
11	91490-12010	PIN, cotter	1	31	6E0-44121-00	LEVER, shift rod	1
12	90202-07M22	WASHER, plate	1	32	95895-06025	BOLT, flange	1
13	6E0-42119-00	GRIP, steering handle	1	33	6E0-44143-00	ROD, shift (Short)	1 UR
14	6E0-42177-00	RUBBER, handle	1	34	6E0-44143-10	ROD, shift (Long)	1 UR
15	6E0-42137-10	INDICATOR, throttle	1	35	92990-05600	WASHER, plate	1
16	90501-23215	SPRING, compression	1	36	91490-16010	PIN, cotter	1
17	90201-10119	WASHER, plate	1	37	6E0-44145-00	CONNECTOR, shift rod	1
18	90149-05M06	SCREW	1	38	6E0-44146-00	CONNECTOR, shift rod	1
19	90269-02M09	RIVET	1		95895-06020	BOLT, flange	1
20	6E0-42138-01	LEVER, throttle	1				

Fig. 7 LOWER CASING. DRIVE I

LOWER UNIT
ASSY

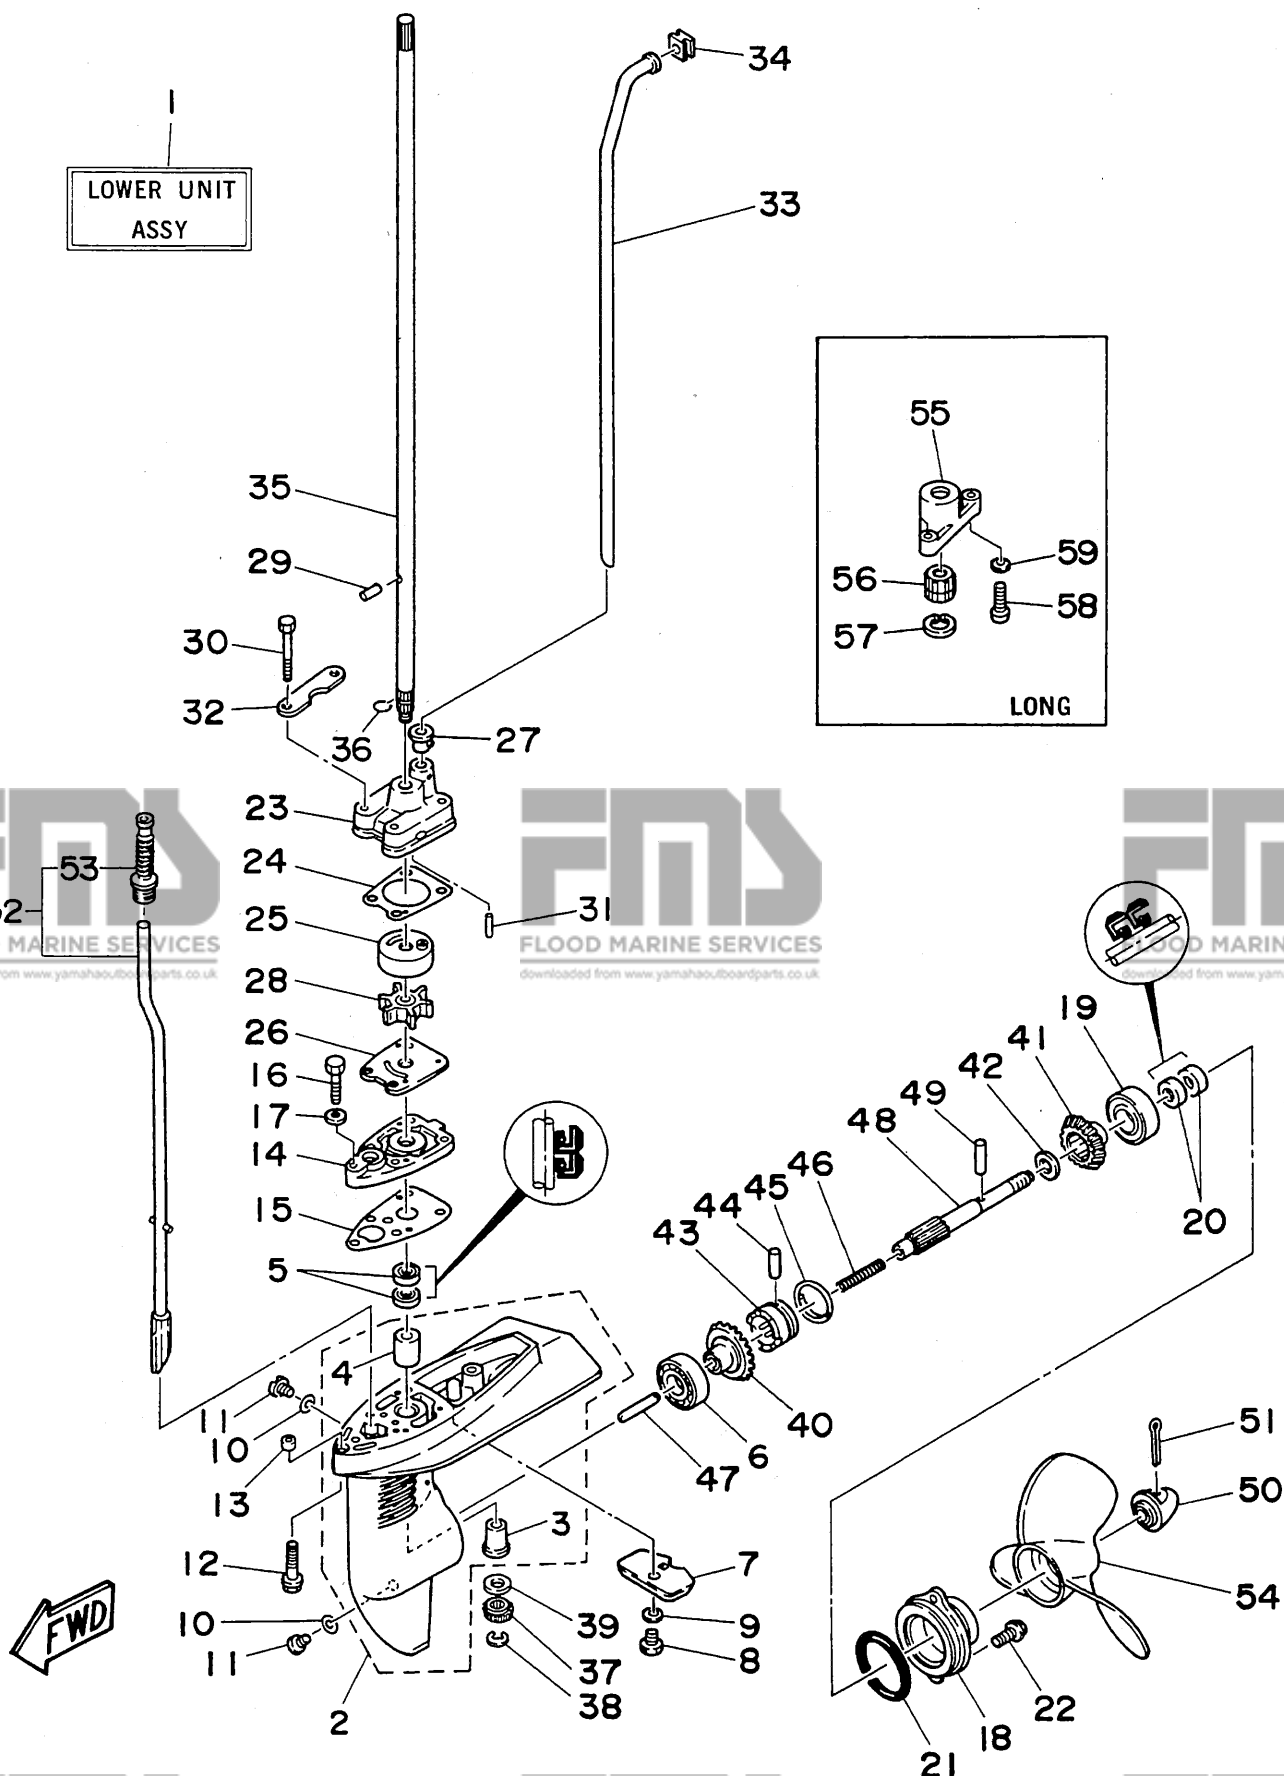
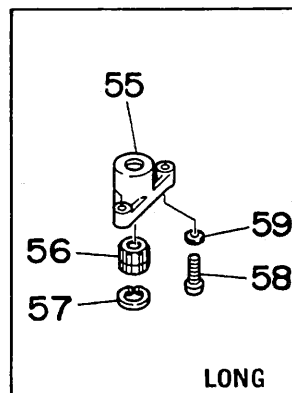


Fig. 7 LOWER CASING. DRIVE 1

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6E0-45300-02-EJ	LOWER UNIT ASSY (Short) (Ref.No. 2 to 11, 14 to 32, 35 to 48 and 52, 53)	1 UR	32	6E0-44328-00	PLATE	2
	6E0-45300-12-EJ	LOWER UNIT ASSY (Long) (Ref.No. 2 to 11, 14 to 32, 35 to 48 and 52, 53)	1 UR	33	6E0-44361-00	TUBE, water (Short)	1 UR
2	6E0-45311-02-EJ	CASING, lower	1		6E0-44361-10	TUBE, water (Long)	1 UR
3	6E0-45317-09	.BUSHING, drive shaft	1	34	646-44365-00	DAMPER, water seal	1
4	6E0-45316-09	.BUSHING, drive shaft	1	35	6E0-45511-00	SHAFT, drive (Short)	1 UR
5	93101-10M14	OIL SEAL	2		6E0-45511-10	SHAFT, drive (Long)	1 UR
6	93306-004U0	BEARING	1	36	90467-08M01	CLIP	1
7	6L5-45251-02	ANODE	1	37	6E0-45551-00	PINION	1
8	97395-06012	BOLT	1	38	99001-06600	CIRCLIP	1
9	92990-06600	WASHER, plate	1	39	90201-11M49	WASHER, plate	1
10	90430-08020	GASKET	3	40	6E0-45560-00	GEAR	1
11	90340-08M04	PLUG, straight screw	3	41	6E0-45570-00	GEAR	1
12	90119-06M40	BOLT, with washer	2	42	90201-13M50	WASHER, plate	1
13	90387-06M14	COLLAR	2	43	6E0-45631-00	CLUTCH, dog	1
14	6E0-45321-01-5B	PLATE	1	44	90250-05046	PIN, straight	1
15	6E0-45315-00	PACKING, lower casing	1	45	654-45633-00	RING, cross pin	1
16	97395-06025	BOLT	1	46	90501-10064	SPRING, compression	1
17	92990-06600	WASHER, plate	1	47	654-45635-00	PLUNGER, shift	1
18	6E0-45361-00-EJ	CAP, lower casing	1	48	6E0-45611-00	SHAFT, propeller	1
19	93306-004U0	BEARING	1	49	6E0-45615-00	PIN, share	1
20	93101-13M12	OIL SEAL	2	50	647-45616-02	NUT, propeller	1
21	93210-48214	O-RING	1	51	91490-30030	PIN, cotter	1
22	95895-06016	BOLT, flange	2	52	6E0-44150-00	SHIFT CAM ASSY (Short)	1 UR
23	6E0-44311-00	HOUSING, water pump	1		6E0-44150-10	SHIFT CAM ASSY (Long)	1 UR
24	6E0-44315-00	GASKET, water pump	1	53	6G1-44147-00	.BOOT, shift rod	1
25	6E0-44322-02	INSERT, cartridge	1 UR	54	6E0-45943-00-EL	PROPELLER (3X7-1/2"X7"-B)	1 UR
	6E0-44322-40	INSERT, cartridge (Chromate)	1 AP		6E0-45941-00-EL	PROPELLER (3X7-1/4"X8"-B)	1 UR
26	6E0-44323-00	OUTER PLATE, cartridge	1 UR		6E0-45945-00-EL	PROPELLER (3X7-1/4"X7-1/4"-B)	1 UR
	6E0-44323-40	OUTER PLATE, cartridge (Chromate)	1 AP		6E0-45947-00-EL	PROPELLER (3X7-1/4"X8-1/4"-B)	1 UR
27	6E0-44366-00	DAMPER, water seal	1		654-45941-01-EL	PROPELLER (3X7-1/4"X6-1/2"-B)	1 UR
28	6E0-44352-00	IMPELLER	1		654-45943-01-EL	PROPELLER (3X7-1/4"X7-1/4"-B)	1 UR
29	93604-09066	PIN, dowel	1		644-45941-01-EL	PROPELLER (3X7-1/4"X5"-B)	1 UR
30	97395-06045	BOLT	4	55	6E0-45331-00-5B	HOUSING, bearing (Long)	1
31	93604-18080	PIN, dowel	2	56	6E0-45318-01	BUSHING, drive shaft (Long)	1
				57	93420-22M03	CIRCLIP (Long)	1
				58	98580-05525	SCREW, pan head (Long)	2
				59	92990-05600	WASHER, plate (Long)	2

Fig. 8 GENERATOR

FLOOD MARINE SERVICES



downloaded from www.yamahaoutboardparts.co.uk

FLOOD MARINE SERVICES

downloaded from www.yamahaoutboardparts.co.uk

FLOOD MARINE SERVICES

downloaded from www.yamahaoutboardparts.co.uk

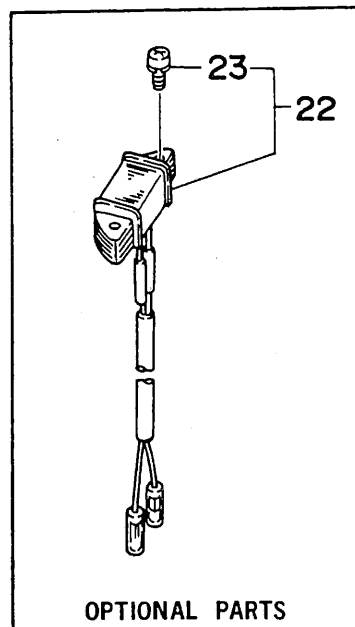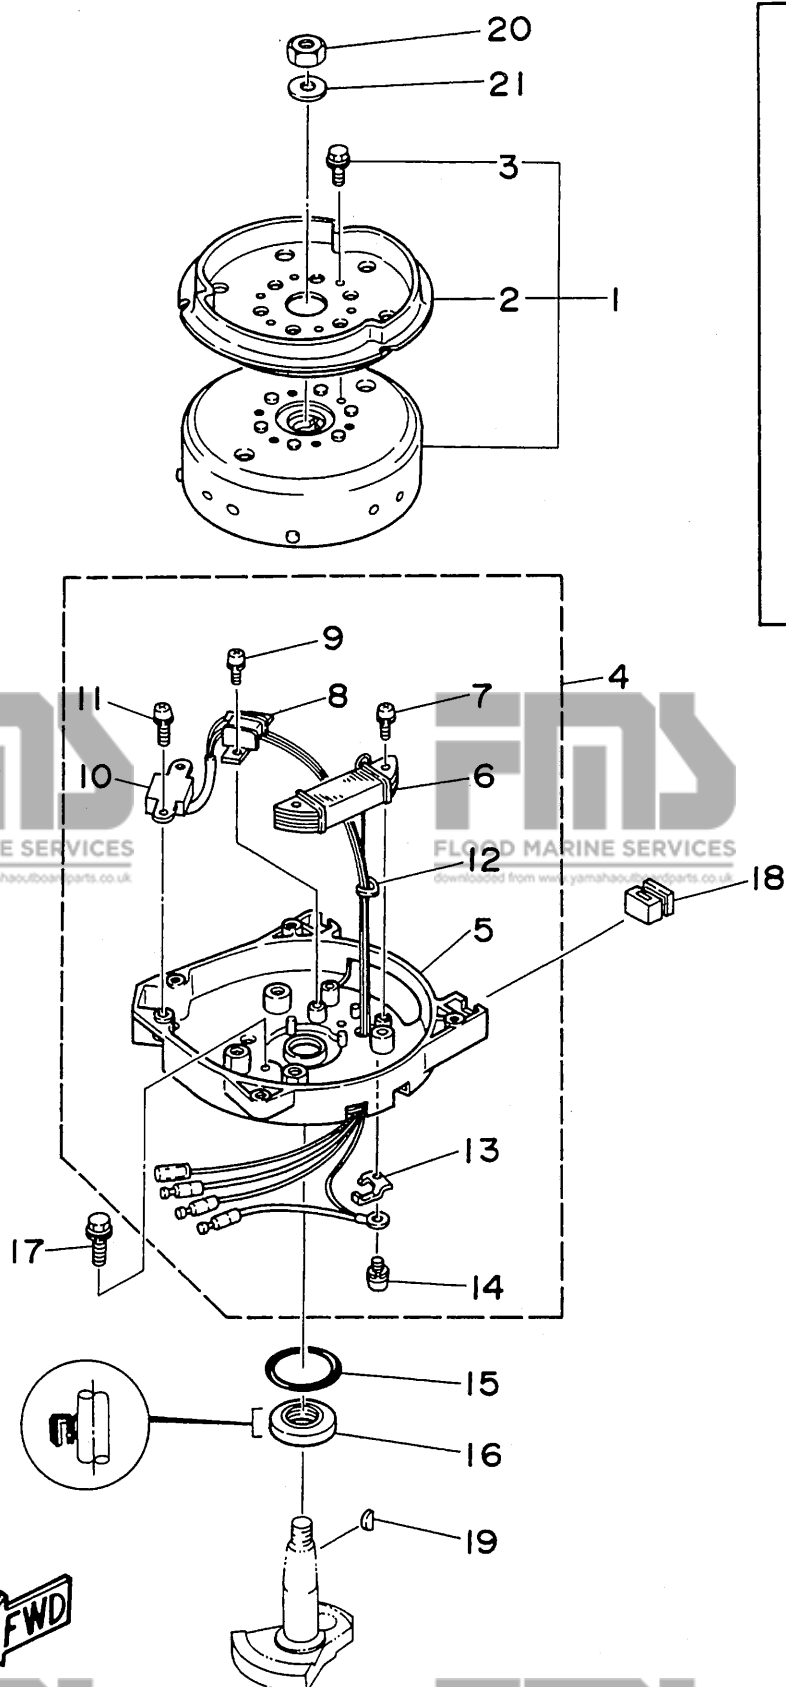

OPTIONAL PARTS

FLOOD MARINE SERVICES

downloaded from www.yamahaoutboardparts.co.uk

FLOOD MARINE SERVICES

downloaded from www.yamahaoutboardparts.co.uk

FLOOD MARINE SERVICES

downloaded from www.yamahaoutboardparts.co.uk

Fig. 8 GENERATOR

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6E0-85550-71	ROTOR ASSY	1	13	6E0-81328-70	.CLAMP	1
2	6E0-15723-00-94	.PULLEY, starter	1	14	90159-04035	.SCREW, with washer	1
3	90105-06M14	.BOLT, washer based	3	15	93210-42159	O-RING	1
4	6E0-85560-70	BASE ASSY	1	16	93102-20M25	OIL SEAL	1
5	6E0-15359-00-94	.HOUSING, oil seal	1	17	90105-06M14	BOLT, washer based	2
6	6E0-85520-70	.COIL, charge	1	18	6E0-24183-00	DAMPER, locating 3	2
7	90159-05038	.SCREW, with washer	2	19	90280-04M06	KEY, woodruff	1
8	6E0-85595-70	.COIL, pulser	1	20	90170-10113	NUT	1
9	90159-04036	.SCREW, with washer	2	21	90201-102G9	WASHER, plate	1
10	6E0-85592-70	.PULSER COIL ASSY	1	22	6E0-81303-80	LIGHTING COIL ASSY (60W)	1 AP
11	90159-05037	.SCREW, with washer	2	23	90159-05040	.SCREW, with washer	2
12	6E0-81336-70	.GROMMET	1				

Fig. 9 ELECTRICAL I

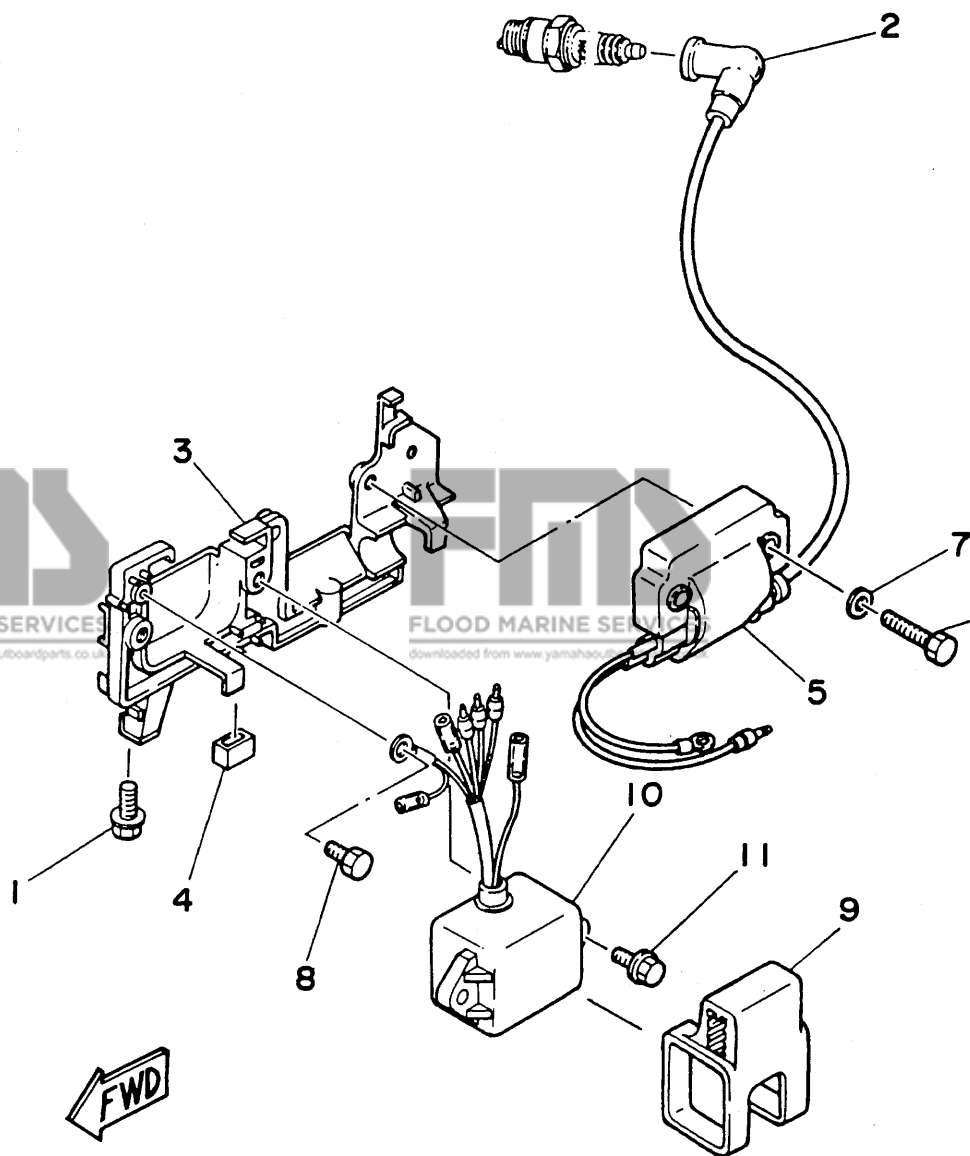


Fig. 9 ELECTRICAL 1

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	95895-06016	BOLT, flange	2	7	92990-06600	WASHER, plate	2
2	661-82370-20	PLUG CAP ASSY	1	8	97313-06010	BOLT	1
3	6E0-82316-00-94	BRACKET, ignition coil	1	9	6E0-85548-00	HOLDER	1
4	6E0-82317-00	DAMPER, ignition coil	2	10	6E0-85540-71	C.D.I. UNIT ASSY	1
5	6E0-85570-20	IGNITION COIL ASSY	1	11	95895-06020	BOLT, flange	2
6	97313-06030	BOLT	2				

downloaded from www.yamahaculaboards.co.uk



Fig. 10 ALTERNATE 1 (4AS MODEL)

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6Y4-W2420-80-24	FUEL TANK ASSY	1	10	6Y4-24306-80	FUEL PIPE COMP. 1	1
2	6Y1-24246-00	.GRAPHIC, side	2	11	6G1-24305-00	.FUEL PIPE JOINT COMP. 2	1
3	6Y1-24257-00	.GRAPHIC	1	12	93210-08287	..O-RING	1
4	6Y1-24610-12	.CAP ASSY	1	13	650-24351-01	.BAND 1	3
5	6Y4-24275-80	.FUEL METER COMP.	1	# 14	90445-11M05	.HOSE (L850)	1
6	6Y1-24268-00	.GASKET, fuel meter	1	15	6Y1-24360-02	.PRIMER PUMP ASSY	1
7	98586-05016	.SCREW, pan head	4	# 16	90445-11M06	.HOSE (L2050)	1
8	6Y1-24329-00	.SEAL	4	17	650-24351-01	BAND 1	1
9	6Y1-24255-80	.GRAPHIC, fuel tank 8	1				

Also available in 30m rolls. (Parts No. 90890-56878)

Fig. 11 ALTERNATE 2 (4AS MODEL)

FLOOD MARINE SERVICES




downloaded from www.yamahamotorparts.co.uk

FLOOD MARINE SERVICES

downloaded from www.yamahamotorparts.co.uk

FLOOD MARINE SERVICES

downloaded from www.yamahamotorparts.co.uk

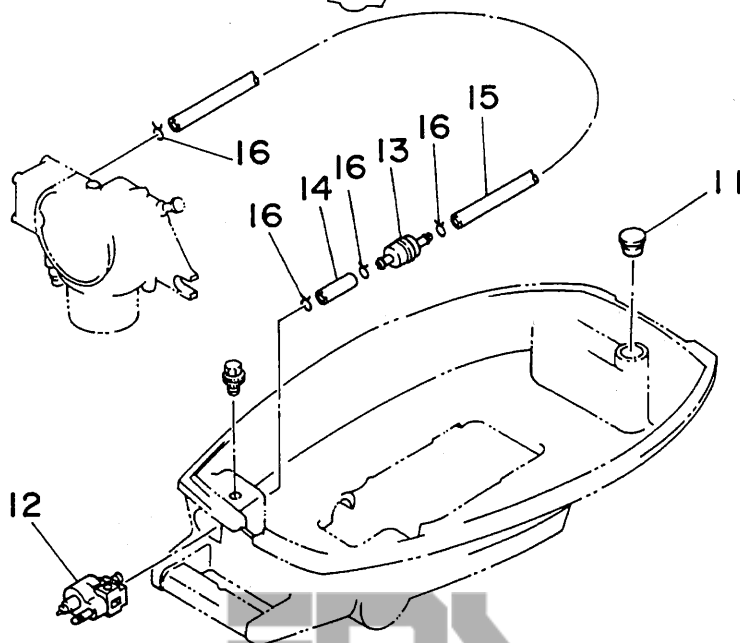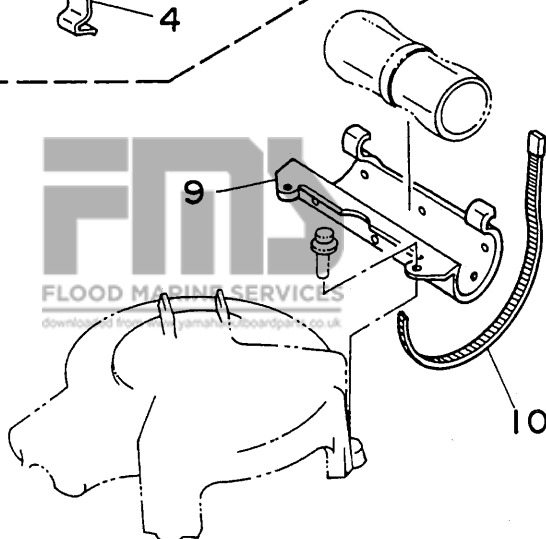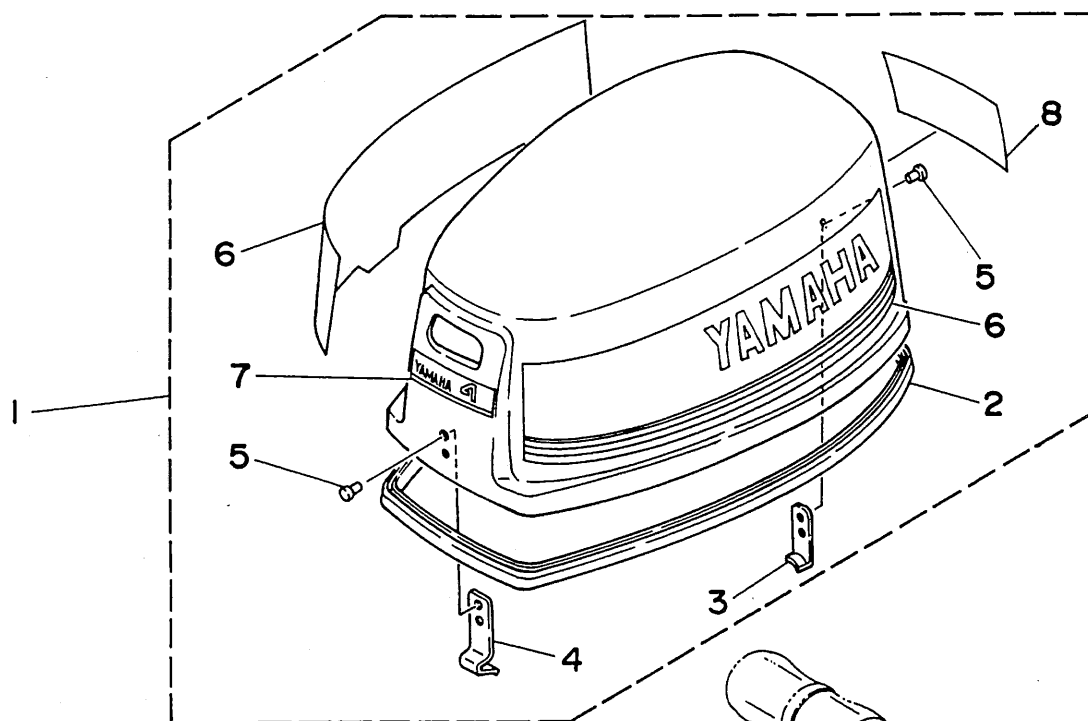

FLOOD MARINE SERVICES

downloaded from www.yamahamotorparts.co.uk

FLOOD MARINE SERVICES

downloaded from www.yamahamotorparts.co.uk

FLOOD MARINE SERVICES

downloaded from www.yamahamotorparts.co.uk

Fig. 11 ALTERNATE 2 (4AS MODEL)

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6E1-42610-24-EJ	TOP COWLING ASSY	1	9	6E1-42643-00	PLATE, clamp	1
2	6E0-42615-00	.SEAL	1	10	90465-13154	CLAMP	1
3	6E0-42647-01	.HOLDER, clamp band	1	11	6E1-24182-00	DAMPER, locating 2	2
4	6E0-42651-02	.HOOK	1	12	6G1-24304-02	FUEL PIPE JOINT COMP. 1	1
5	90266-04M00	.RIVET	4	13	646-24251-02	STRAINER 1	1
6	6E0-W0070-23	.GRAPHIC SET	1	14	90445-09057	HOSE	1
7	6E0-42677-10	.GRAPHIC, front	1	15	90445-09068	HOSE	1
8	6E0-42678-11	.GRAPHIC, rear	1	16	90467-08004	CLIP	4

Fig. 12 REPAIR KIT

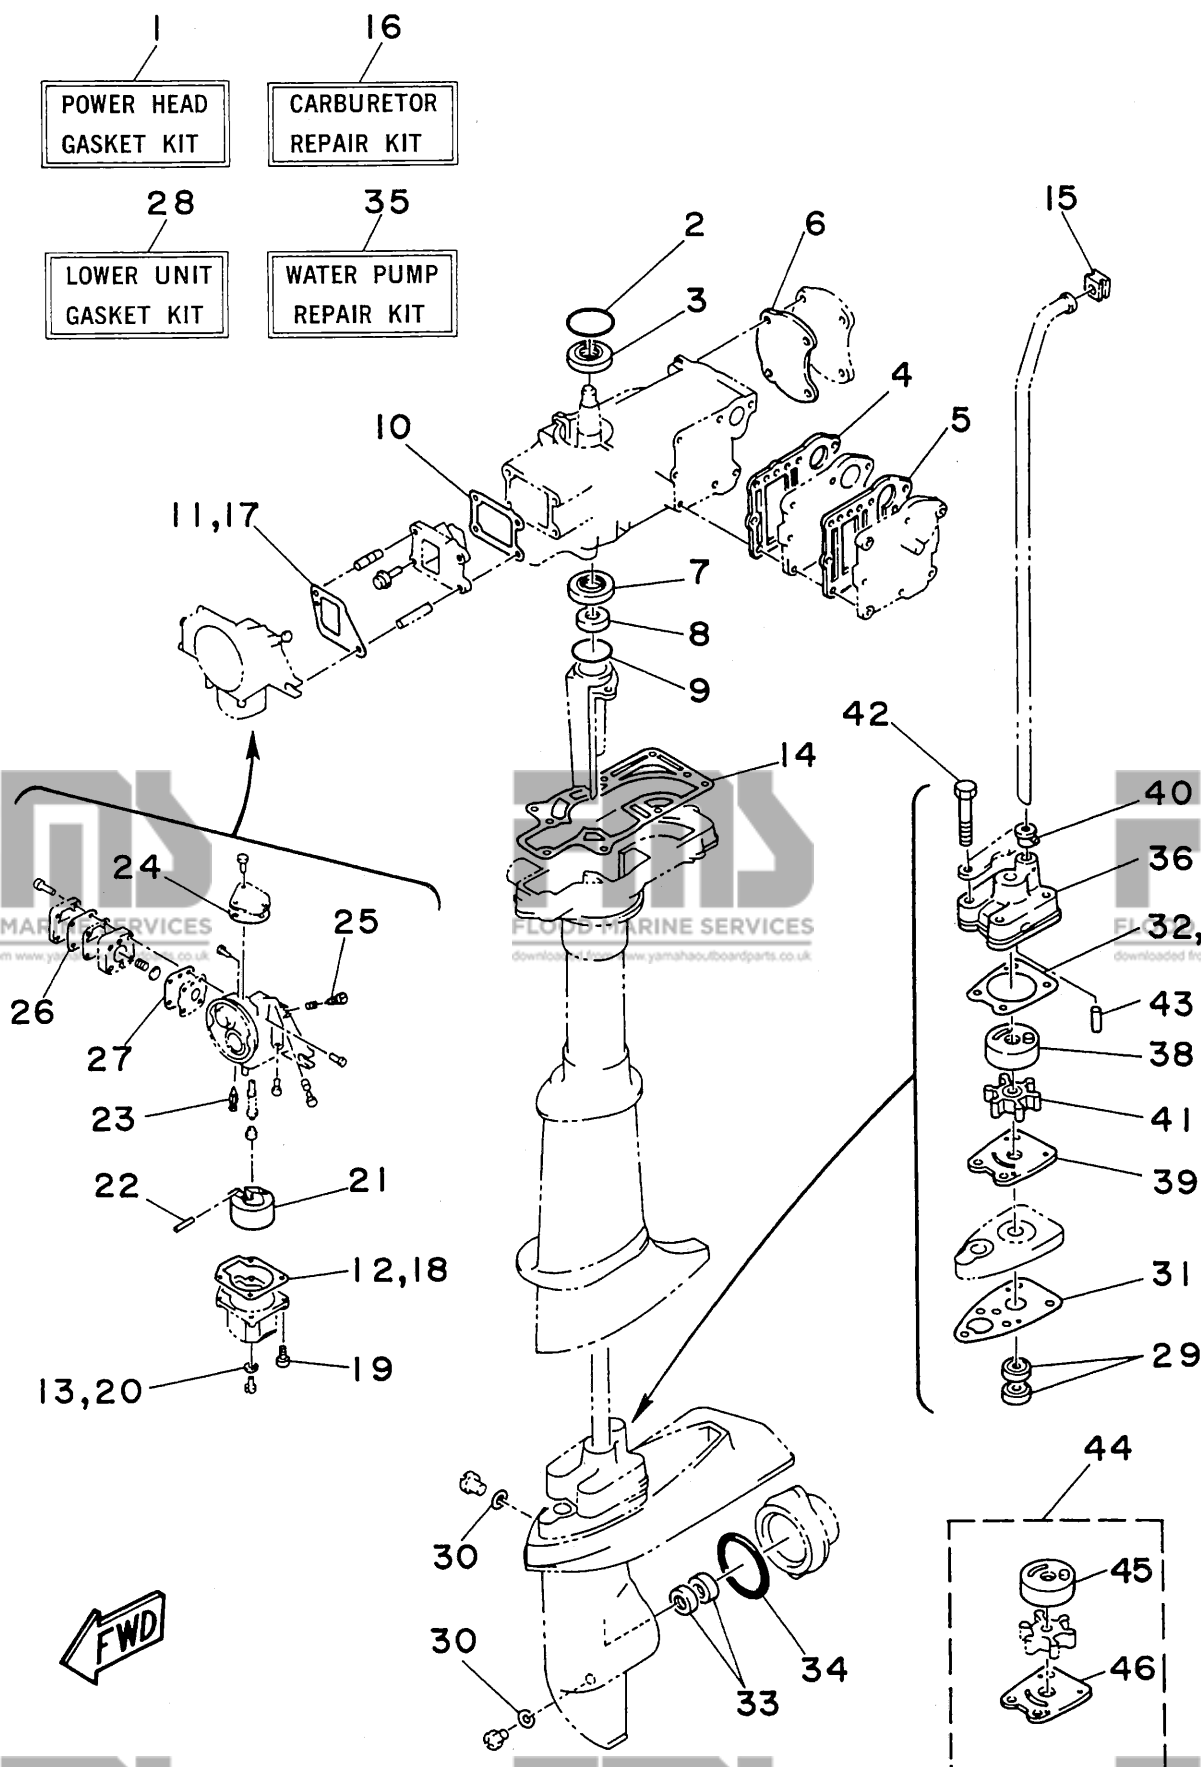


Fig. 12 REPAIR KIT

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6E0-W0001-02	POWER HEAD GASKET KIT	1	24	6E0-14227-00	.GASKET	1
2	93210-42159	.O-RING	1	25	647-14323-00	.SCREW, air adjusting	1
3	93102-20M25	.OIL SEAL	1	26	6E0-24471-00	.DIAPHRAGM	1
4	6E0-41112-01	.GASKET, exhaust inner cover	1	27	6E0-24411-00	.DIAPHRAGM	1
5	6E0-41114-01	.GASKET, exhaust outer cover	1	28	6E0-W0001-20	LOWER UNIT GASKET KIT	1
6	6E0-11193-01	.GASKET, head cover 1	1	29	93101-10M14	.OIL SEAL	2
7	93101-20M29	.OIL SEAL	1	30	90430-08020	.GASKET	3
8	93101-10M25	.OIL SEAL	1	31	6E0-45315-00	.PACKING, lower casing	1
9	93210-31114	.O-RING	1	32	6E0-44315-00	.GASKET, water pump	1
10	6E0-13621-00	.GASKET, valve seat	1	33	93101-13M12	.OIL SEAL	2
11	6E0-14198-00	.GASKET	1	34	93210-48214	.O-RING	1
12	6E0-14384-00	.GASKET, float chamber	1	35	6E0-W0078-01	WATER PUMP REPAIR KIT	1
13	6A1-14398-00	.GASKET	1	36	6E0-44311-00	.HOUSING, water pump	1
14	6E0-45113-00	.GASKET, upper casing	1	37	6E0-44315-00	.GASKET, water pump	1
15	646-44365-00	.DAMPER, water seal	1	38	6E0-44322-02	.INSERT, cartridge	1
16	6E0-W0093-01	CARBURETOR REPAIR KIT	1	39	6E0-44323-00	.OUTER PLATE, cartridge	1
17	6E0-14198-00	.GASKET	1	40	6E0-44366-00	.DAMPER, water seal	1
18	6E0-14384-00	.GASKET, float chamber	1	41	6E0-44352-00	.IMPELLER	1
19	98580-04016	.SCREW, pan head	1	42	97395-06045	.BOLT	4
20	6A1-14398-00	.GASKET	1	43	93604-09066	.PIN, dowel	1
21	6E7-14385-00	.FLOAT	1	44	6E0-W0078-0A	CHROME PUMP KIT	1
22	647-14386-00	.PIN, float	1	45	6E0-44322-40	.INSERT, cartridge (Chromate)	1
23	6G8-14392-00	.VALVE, needle	1	46	6E0-44323-40	.OUTER PLATE, cartridge (Chromate)	1