

40H(6H4)

Fig. 1
Fig. 2
Fig. 3
Fig. 4
Fig. 5
Fig. 6
Fig. 7
Fig. 8
Fig. 9
Fig. 10
Fig. 11
Fig. 12
Fig. 13
Fig. 14
Fig. 15
Fig. 16
Fig. 17
Fig. 18
Fig. 19
Fig. 20
Fig. 21
Fig. 22
Fig. 23
Fig. 24
Fig. 25
Fig. 26
Fig. 27
Fig. 28
Fig. 29
Fig. 30
Fig. 31
Fig. 32
Fig. 33
Fig. 34
Fig. 35
Fig. 36
Fig. 37
Fig. 38
Fig. 39
Fig. 40
Fig. 41

CONTENTS

CYLINDER, CRANKCASE	A3
CRANKSHAFT, PISTON	A4
INTAKE	A5
CARBURETOR	A6
OIL PUMP	A7
STARTER	B1
FUEL	B2
FUEL 2	B3
TOP COWLING	B4
BOTTOM COWLING	B5
BRACKET 1	B6
BRACKET 2	B7
STEERING	C1
CONTROL	C2
UPPER CASING	C3
LOWER CASING, DRIVE 1	C4
LOWER CASING, DRIVE 2	C5
MAGNETO	C6
ELECTRICAL	C7
ALTERNATE 1 (40HEO/40HEPO/40HETO MODEL)	D1
ALTERNATE 2 (40HEO/40HEPO/40HETO MODEL)	D2
ALTERNATE 3 (40HEPO MODEL)	D3
ALTERNATE 4 (40HETO MODEL)	D4
ALTERNATE 5 (40HETO MODEL)	D5
ALTERNATE 6 (40HETO MODEL)	D6
ALTERNATE 7 (40HEPO MODEL)	D7
ALTERNATE 8 (40HEO/40HEPO/40HETO MODEL)	E1
ALTERNATE 9 (40HEO/40HEPO/40HETO MODEL)	E2
ALTERNATE 10 (40HEO/40HEPO MODEL)	E3
ALTERNATE 11 (40HETO MODEL)	E4
REMOTE CONTROL	E5
STEERING GUIDE ATTACHMENT	E6
REMOTE CONTROL ASSY 1	E7
REMOTE CONTROL ASSY 2	F1
OPTIONAL PARTS 1	F2
OPTIONAL PARTS 2	F3
OPTIONAL PARTS 3	F4
OPTIONAL PARTS 4	F5
OPTIONAL PARTS 5	F6
REPAIR KIT 1	F7
REPAIR KIT 2	G1
NUMERICAL INDEX	

This Parts Catalogue is related to the parts in use for the Yamaha outboard motor 40H'91 (6H4). When you are ordering replacement parts for the 40H'91(6H4), refer to this Parts Catalogue and quote both part numbers and part names correctly.

1. Modifications or additions which have been made after issue of the Parts Catalogue will be announced in the Yamaha Parts News.
It is advisable that according to the Yamaha Parts News you make necessary corrections to the Parts Catalogue on hand to keep it up-to-date.

2. Abbreviations

The following abbreviations are used in this Parts Catalogue.

- UR Use size (thickness) and/or number as required.
- UN Use as many as you need.
- AP Alternate Parts
- STD Standard
- O/S Over Size

3. Parts, which are to be supplied in the form of assemblies, are listed with an indention of one letter's space, and a dot (.) is put against the name of each part.

EXAMPLE

CARBURETOR ASS'Y
. JET, pilot
. NOZZLE, main

4. Indication of No. of constituent parts for assembly.



The numeral appearing to the right of each constituent part under the description indicates the quantity of such parts for each individual assembly unit.

EXAMPLE

Part No.	Description	Q'ty	Remarks
6E0-85500-70	C.D.I. MAGNETO ASS'Y	1	
6E0-85550-70	. ROTOR ASS'Y	1	
6E0-15723-00-94	. . PULLEY, starter	1	

5. Initial Serial No. and Color Code


Engine Serial No.	
40HMO	S: 184918 and following L: 483392 and following
40HEO	S: 104127 and following L: 421207 and following
40HRO	S: 280992 and following L: 590849 and following
40HEPO	S: 250709 and following L: 560605 and following
40HETO	S: 230101 and following L: 530101 and following

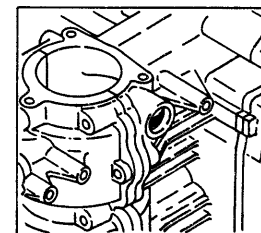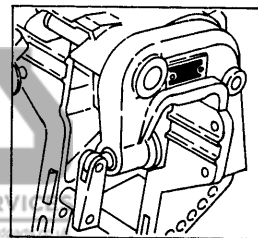

Color Code	Color Name	Abbreviate
EJ	METALLIC MARINE BLUE	MMB

Fig. 1 CYLINDER. CRANKCASE

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H4-W0090-14-EJ	CRANK CYLINDER ASSY		15	6H4-11193-00	GASKET, head cover 1	1
		(Ref.No. 2 to 29 and Fig. 2, Ref.No. 1 to 19)	1	16	90119-08M29	BOLT, with washer	14
2	6H4-15100-11-94	CRANKCASE ASSY	1	17	6E5-12411-10	THERMOSTAT	1
3	90119-08M19	BOLT, with washer	8	18	6H4-12413-00-9M	COVER, thermostat	1
4	90119-06M13	BOLT, with washer	6	19	6H4-12414-00	GASKET, cover	1
5	93606-12019	PIN, dowel	2	20	97313-06025	BOLT	2
6	6H4-11119-00	HANGER, engine	1	21	92990-06600	WASHER, plate	2
7	97313-06014	BOLT	2	22	6H4-41113-00-9M	OUTER COVER, exhaust	1
8	688-11325-00	ANODE	2	23	6H4-41111-00-9M	INNER COVER, exhaust	1
9	98680-04016	SCREW, oval head	2	24	6H4-41112-00	GASKET, exhaust inner cover	1
10	6H4-11111-00-94	HEAD, cylinder 1	1	25	6H4-41114-00	GASKET, exhaust outer cover	1
11	6H4-11181-00	GASKET, cylinder head 1	1	26	90445-09M37	HOSE	1
12	90340-14M00	PLUG, straight screw	1	27	90467-08004	CLIP	2
13	90430-14115	GASKET	1	28	97013-06035	BOLT	14
14	6H4-11191-00-9M	COVER, cylinder head 1	1	29	92990-06600	WASHER, plate	14
				30	94702-00271	PLUG, spark (NGK BR7HS 10)	3

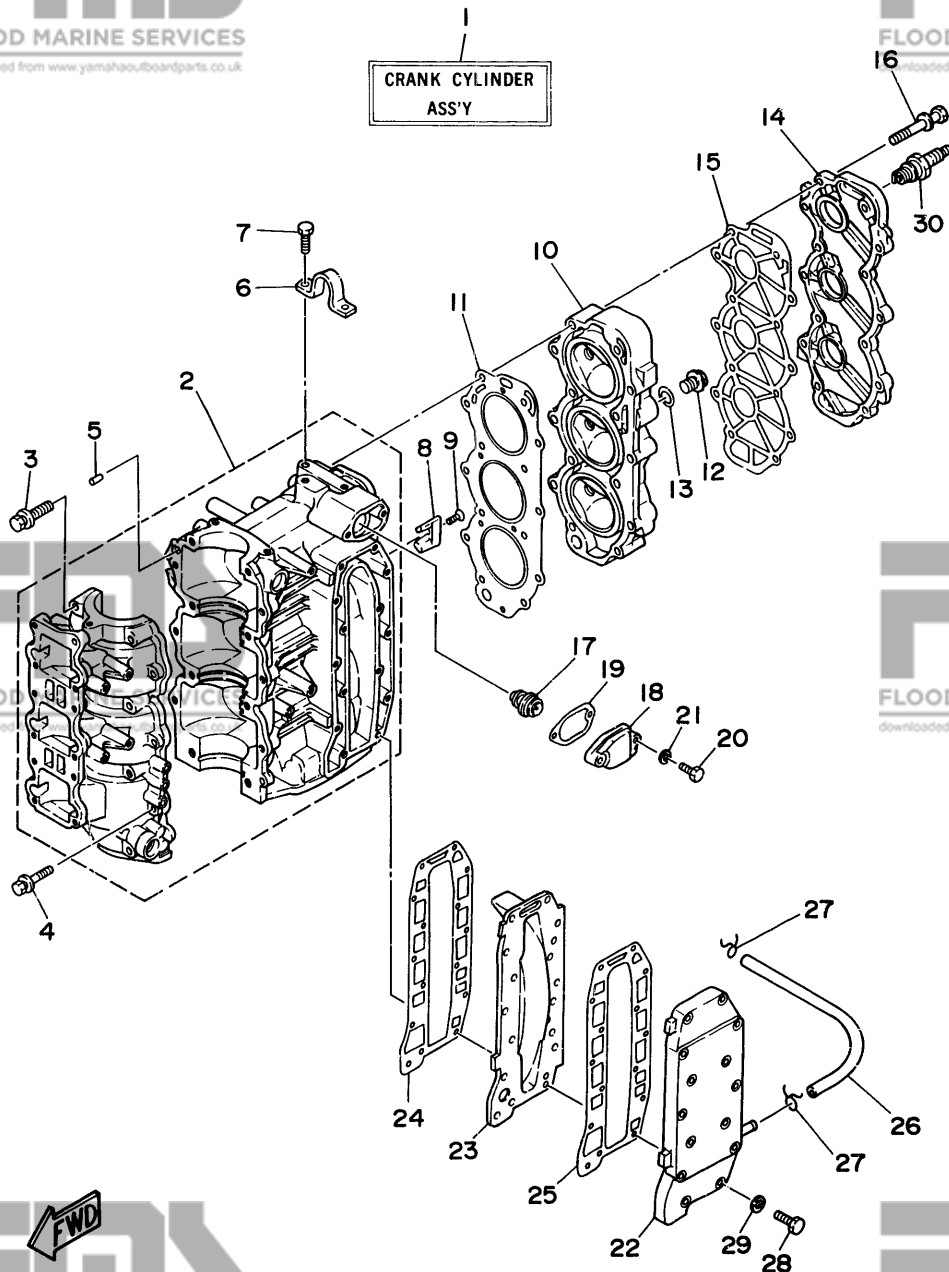

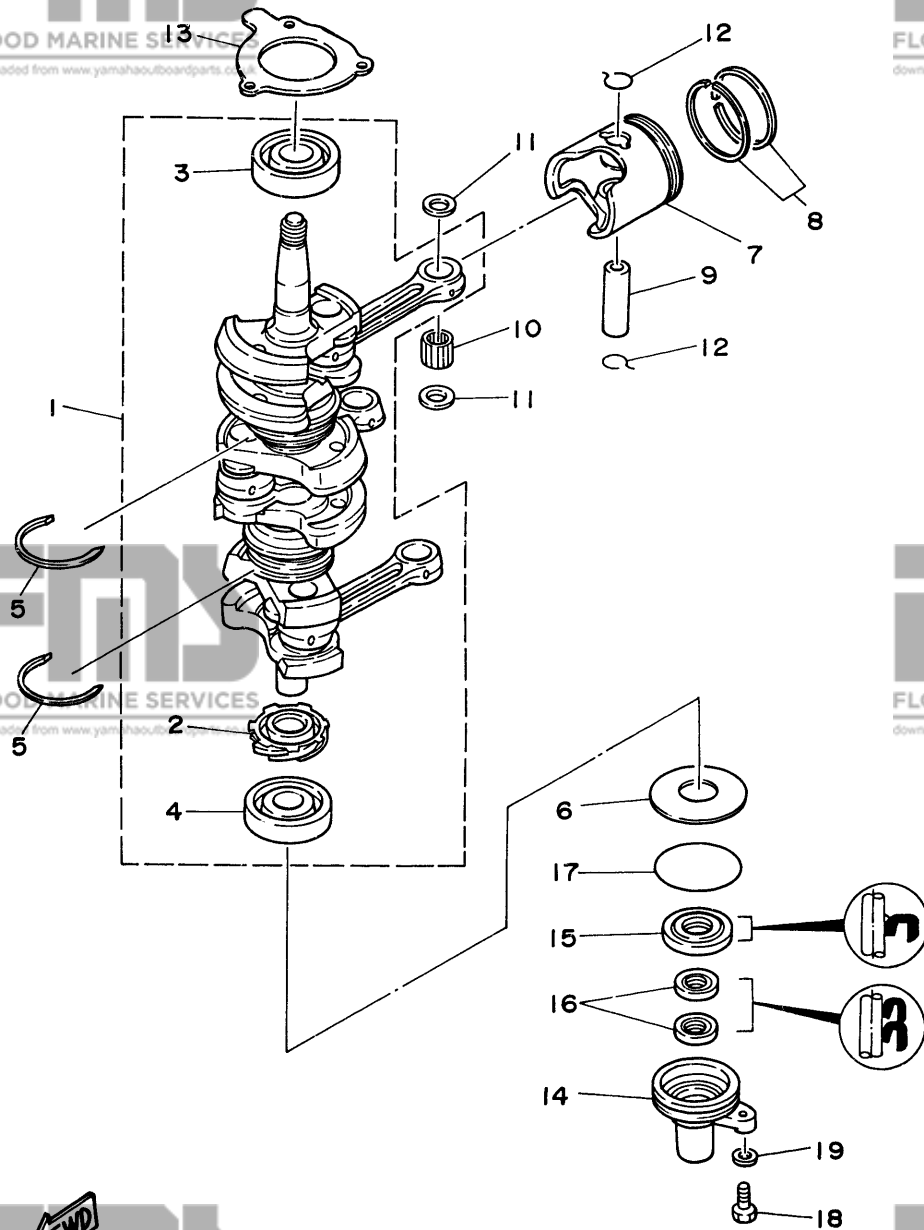


Fig. 2 CRANKSHAFT. PISTON

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H4-11400-13	CRANKSHAFT ASSY	1	9	648-11633-00	PIN, piston	3
2	6H4-11536-00	GEAR, drive	1	10	93602-20M02	PIN, dowel	93
3	93306-305U8	BEARING	1	11	6H4-11641-00	WASHER, piston pin	6
4	93306-305U8	BEARING	1	12	6H4-11634-01	CLIP, piston pin	6
5	93440-62057	CIRCLIP	2	13	6H4-15369-01	GASKET, oil seal housing	1
6	90201-50306	WASHER, plate	1	14	6H4-15396-02-5B	HOUSING, oil seal	1
7	6H4-11631-01-95	PISTON (STD)	3	15	93102-25M28	OIL SEAL	1
	6H4-11635-01	PISTON (0.25MM O/S)	3 AP	16	93104-16M04	OIL SEAL	2
	6H4-11636-01	PISTON (0.50MM O/S)	3 AP	17	93210-57M09	O-RING	1
8	6H4-11601-00	PISTON RING SET (STD)	3	18	97313-06020	BOLT	1
	6H4-11601-10	PISTON RING SET (1ST O/S)	3 AP	19	92990-06600	WASHER, plate	1
	6H4-11601-20	PISTON RING SET (2ND O/S)	3 AP				

Fig. 3 INTAKE

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H5-13610-00	REED VALVE ASSY	3	15	6H3-14457-01	SEAL	3
2	6H4-W0004-00	REED SET	1	16	97895-06040	SCREW, pan head	2
3	98580-05016	SCREW, pan head	6	17	97895-06055	SCREW, pan head	2
4	92990-05600	WASHER, plate	6	18	90209-06M05	WASHER	4
5	6H4-13641-30-94	MANIFOLD 1 (40HMO/40HRO Model)	1 UR	19	6H4-41257-00	ROD, choke 2 (40HMO/40HRO Model)	2
	6H4-13641-12-94	MANIFOLD 1 (40HEO/40HEPO/40HETO Model)	1 UR	20	661-41262-02	JOINT, choke lever (40HMO/40HRO Model)	4
6	6H1-14485-00	.PIPE, joint (40HMO/40HRO Model)	3 UR	21	6H4-41271-01	KNOB, choke (40HMO/40HRO Model)	1
	6H1-14485-00	.PIPE, joint (40HEO/40HEPO/40HETO Model)	4 UR	22	6H4-41259-01	ROD, choke 3 (40HMO/40HRO Model)	1
7	6H4-13624-01-94	PLATE, reed valve	1	23	6J8-41262-00	JOINT, choke lever (40HMO/40HRO Model)	1
8	6H4-13621-01	GASKET, valve seat	2	24	6J8-41274-00	GROMMET 2 (40HMC/40HRO Model)	1
9	97313-06020	BOLT	12	25	6H4-41217-01	ROD, accel. lever (40HMO/40HRO Model)	1
10	92990-06600	WASHER, plate	12	26	689-41273-00	GROMMET (40HMO/40HRO Model)	1 UR
11	6H4-14198-01	GASKET	3		661-42748-00	GROMMET (40HEO/40HEPO/40HETO Model)	1 UR
12	6H4-14406-00	HINGE	1	27	90464-06M19	CLAMP (40HMO/40HRO Model)	1
13	97313-06095	BOLT	6	28	90445-07M24	HLSE (40HEO/40HEPO/40HETO Model)	1
14	6H4-14431-01	SILENCER, intake 1 (40HEO/40HEPO/40HETO Model)	1 UR	29	90467-06016	CLIP (40HEO/40HEPO/40HETO Model)	2
	6H4-14431-11	SILENCER, intake 1 (40HMO/40HRO Model)	1 UR				

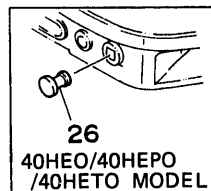
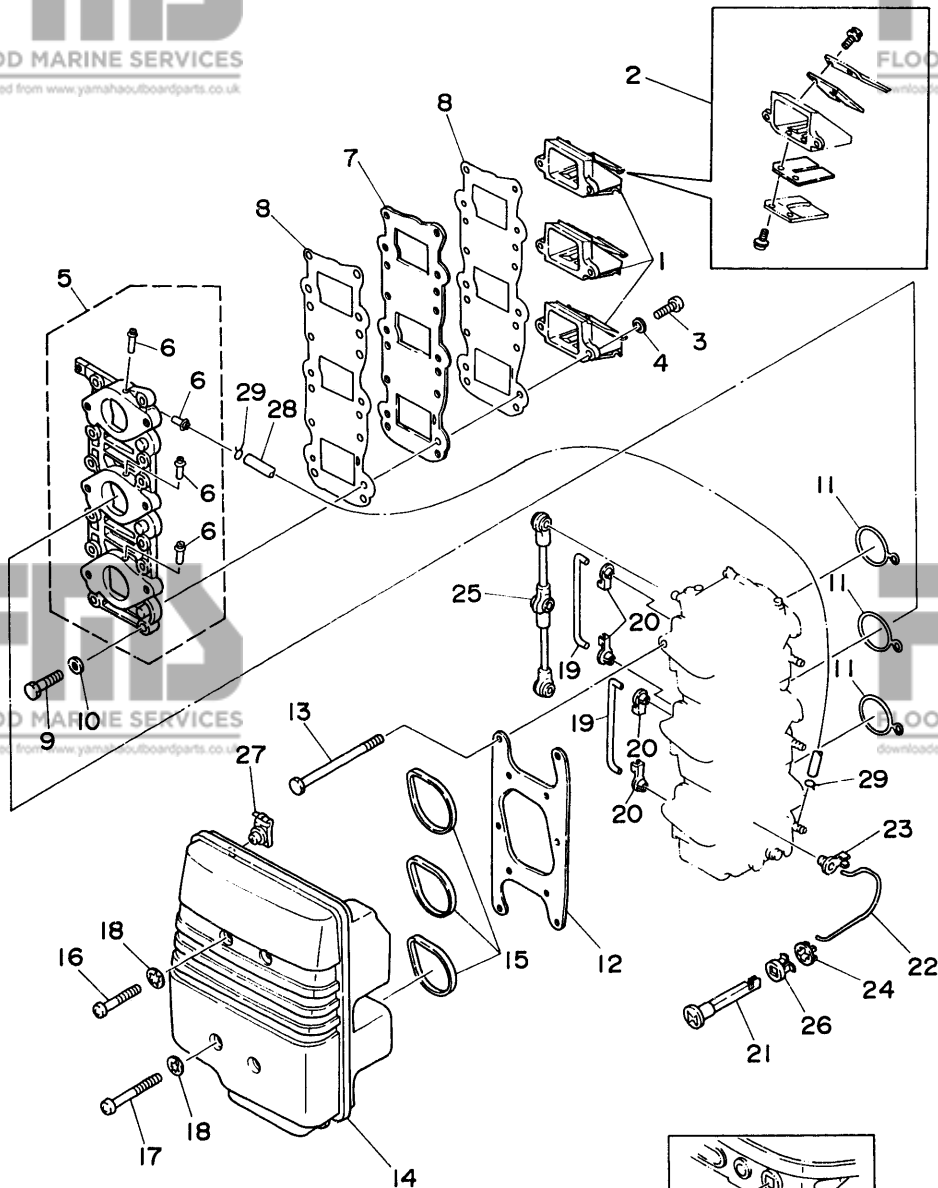
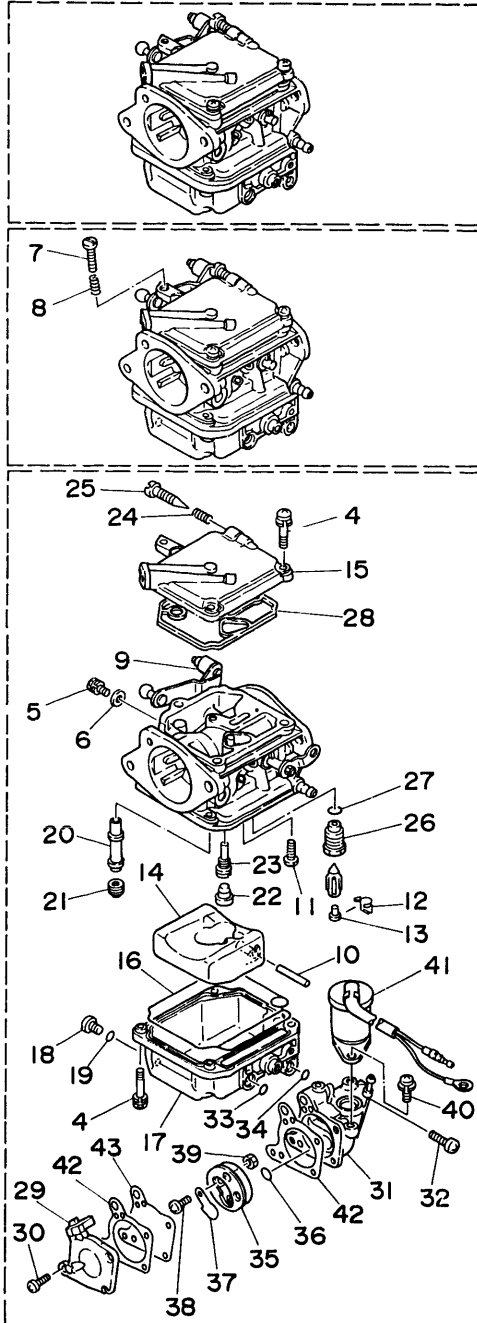


Fig. 4 CARBURETOR

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H4-14301-08	CARBURETOR ASSY 1 (40HMO/40HRO Model)	1 UR	21	676-14943-30	.JET, main (#115) (Upper/Lower) (40HMO/40HRO Model)	2 UR
	6H4-14301-11	CARBURETOR ASSY 1 (40HEO/40HEPO/40HETO Model)	1 UR		676-14943-31	.JET, main (#120) (Upper/Lower) (40HEO/40HEPO/40HETO Model)	2 UR
2	6H4-14302-08	CARBURETOR ASSY 2 (40HMO/40HRO Model)	1 UR		676-14943-31	.JET, main (#120) (Center) (40HMO/40HRO Model)	1 UR
	6H4-14302-11	CARBURETOR ASSY 2 (40HEO/40HEPO/40HETO Model)	1 UR		676-14943-32	.JET, main (#125) (Center) (40HEO/40HEPO/40HETO Model)	1 UR
3	6H4-14303-08	CARBURETOR ASSY 3 (40HMO/40HRO Model)	1 UR	22	676-14966-00	.CAP	3
	6H4-14303-11	CARBURETOR ASSY 3 (40HEO/40HEPO/40HETO Model)	1 UR	23	6H4-14948-11	.JET (#60)	3
4	97980-04114	.SCREW, with washer	21	24	679-14555-00	.SPRING	3
5	663-14592-00	.SCREW	3	25	692-14923-00	.SCREW, pilot	3
6	90201-05652	.WASHER, plate	3	26	6H3-14590-00	.NEEDLE VALVE ASSY	3
7	663-14523-00	.SCREW, stop	1	27	93210-04228	.O-RING	3
8	90501-10326	.SPRING, compression	1	28	6H4-14147-00	.O-RING	3
9	6H2-14578-00	.COLLAR	1	29	6H4-24452-01	.COVER (40HEO/40HEPO/40HETO Model)	1
10	6H4-14548-00	.PIN, float arm	3	30	6H4-14567-00	.SCREW (40HEO/40HEPO/40HETO Model)	4
11	98580-04008	.SCREW, pan head	3	31	6H4-24412-00	.BODY 1 (40HEO/40HEPO/40HETO Model)	1
12	663-14159-00	.CLIP	3	32	6H4-14592-10	.SCREW (40HEO/40HEPO/40HETO Model)	2
13	676-14186-00	.PIN, float	3	33	6H4-14561-00	.O-RING (40HEO/40HEPO/40HETO Model)	1
14	6H4-14985-00	.FLOAT	3	34	6H4-14562-00	.O-RING (40HEO/40HEPO/40HETO Model)	1
15	6H4-14146-00	.PLATE	3	35	6H4-24413-00	.BODY 2 (40HEO/40HEPO/40HETO Model)	1
16	6H4-14984-00	.GASKET, float chamber	3	36	6H4-24486-00	.O-RING (40HEO/40HEPO/40HETO Model)	1
17	6H4-14980-00	.BODY, float chamber (40HMO/40HRO Model)	3 UR	37	6L5-24421-00	.VALVE, check (40HEO/40HEPO/40HETO Model)	2
	6H4-14980-00	.BODY, float chamber (Upper/Center)	2 UR	38	98980-03006	.SCREW, bind (40HEO/40HEPO/40HETO Model)	2
	6H4-14980-10	.BODY, float chamber (Lower) (40HEO/40HEPO/40HETO Model)	1 UR	39	95380-03600	.NUT (40HEO/40HEPO/40HETO Model)	2
18	6H3-14992-00	.SCREW, drain	3	40	97980-05310	.SCREW, with washer (40HEO/40HEPO/40HETO Model)	2
19	93210-04230	.O-RING	3	41	6H4-86120-00	.SOLENOID VALVE ASSY (40HEO/40HEPO/40HETO Model)	1
20	6H4-14947-07	.JET, needle	3	42	6H5-24434-00	.GASKET, body (40HEO/40HEPO/40HETO Model)	2
				43	6H5-24411-00	.DIAPHRAGM (40HEO/40HEPO/40HETO Model)	1



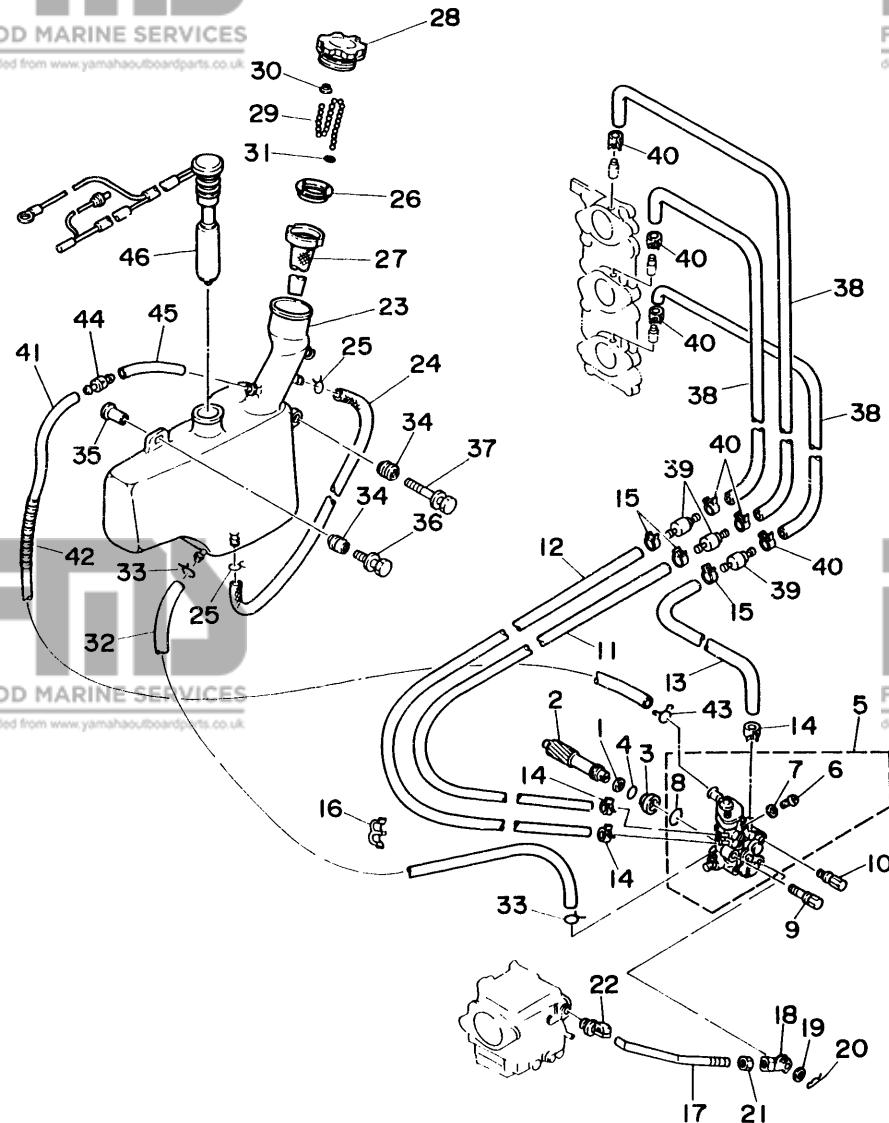



Fig. 5 OIL PUMP

Ref.No.	Parts No.	Description	Qty	Ref.No.	Parts No.	Description	Qty
1	90201-08M93	WASHER, plate	1	24	90446-09M08	HOSE	1
2	6H4-11537-01	GEAR, driven	1	25	90467-08004	CLIP	2
3	6H1-13117-01	COLLAR, distance	1	26	6H4-21773-00	GROMMET	1
4	93210-13595	O-RING	1	27	6H1-21756-00	NET, filter	1
5	6H4-13200-03	OIL INJECTION PUMP ASSY	1	28	6H4-21770-00	OIL TANK CAP ASSY	1
6	6R3-13471-00	.PLUG, drain	1	29	6H4-24633-00	CHAIN, ball	1
7	6L2-13475-00	.GASKET	1	30	6H4-24634-00	HOOK, chain ball	1
8	93210-19MA7	.O-RING	1	31	6H4-21757-00	WASHER, special 1	1
9	90109-06M39	BOLT	1	32	90445-09M37	HOSE	1
10	90109-06M40	BOLT	1	33	90467-08004	CLIP	2
11	90445-07M44	HOSE	1	34	6A0-82317-00	DAMPER, ignition coil	3
12	90445-07M23	HOSE	1	35	624-42542-00	PIPE	3
13	90445-07MA6	HOSE	1	36	90119-06M65	BOLT, with washer	2
14	90468-07M02	CLIP	3	37	90119-06M67	BOLT, with washer	1
15	90468-07M02	CLIP	3	38	90445-07M87	HOSE	3
16	90464-07M20	CLAMP	1	39	6J8-13183-00	VALVE, check	3
17	6H4-41241-01	ROD, link	1	40	90468-07M02	CLIP	6
18	6H1-41237-00	JOINT, link	1	41	90445-11M17	HOSE	1
19	90202-05088	WASHER, plate	1	42	90445-10M01	HOSE	2
20	90468-05M03	CLIP	1	43	90467-10M04	CLIP	1
21	95380-05600	NUT	1	44	6J8-21744-00	BREATHER	1
22	6R5-41237-00	JOINT, link	1	45	90445-11M23	HOSE	1
23	6H4-21707-12	OIL TANK COMP.	1	46	6H4-95720-20	OIL LEVEL GAUGE ASSY	1

Fig. 6 STARTER

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H4-15710-02-94	STARTER ASSY	1	25	93430-06M02	.CIRCLIP	1
2	6H4-15711-02-94	.CASE, starter	1	26	6H4-15705-00	.SPRING, drive pawl	1
3	91690-40018	.PIN, spring	1	27	97013-06035	BOLT	3
4	6H4-15758-00-94	.GUIDE, rope	1	28	92990-06600	WASHER, plate	3
5	97395-06016	.BOLT	2	29	99530-10014	PIN, dowel	1
6	92990-06600	.WASHER, plate	2	30	6H4-15771-01-94	STAY 1	1
7	6H4-15762-00	.SEAL, rubber 2	1	31	97313-08030	BOLT	2
8	6A0-15789-00	.DAMPER	1	32	92990-08600	WASHER, plate	2
9	6F5-15752-00	.ROLLER, wire	1	33	6H4-15772-02-94	STAY 2	1
10	90387-06M69	.COLLAR	1	34	97313-06025	BOLT	3
11	97313-06030	.BOLT	1	35	92990-06600	WASHER, plate	3
12	92990-06600	.WASHER, plate	1	36	6H4-15723-01-94	PULLEY, starter	1
13	95380-06600	.NUT	1	37	6J8-81365-00	GASKET, hole cover	1
14	6H4-15787-01	.ADAPTOR	1	38	97313-08020	BOLT	3
15	689-15755-01	.HANDLE, starter	1	39	92990-08600	WASHER, plate	3
16	6F5-15779-02	.COVER	1	40	6H4-15774-10	STAY 4	1
17	*	.WIRE (L:2095mm)	1	41	97013-06012	BOLT	1
18	6H4-15714-00	.DRUM, sheave	1	42	6H4-15746-00	ARM	1
19	90510-08002	.SPRING, spiral	1	43	90109-06M04	BOLT	1
20	6H4-15717-00	.SHAFT, starter	1	44	6H4-15770-10	CABLE COMP., starter stop	1
21	90201-06060	.WASHER, plate	1	45	656-15748-00	PLUNGER, starter stop	1
22	97313-06020	.BOLT	1	46	90501-10227	SPRING, compression	1
23	95303-06600	.NUT	1	47	6H4-15747-10	LINK	1
24	676-15741-03	.PAWL, drive	1	48	661-41262-02	JOINT, choke lever	2

* Cut from 50m rolls, parts No. 90890-44373, cutting length 2.095m.

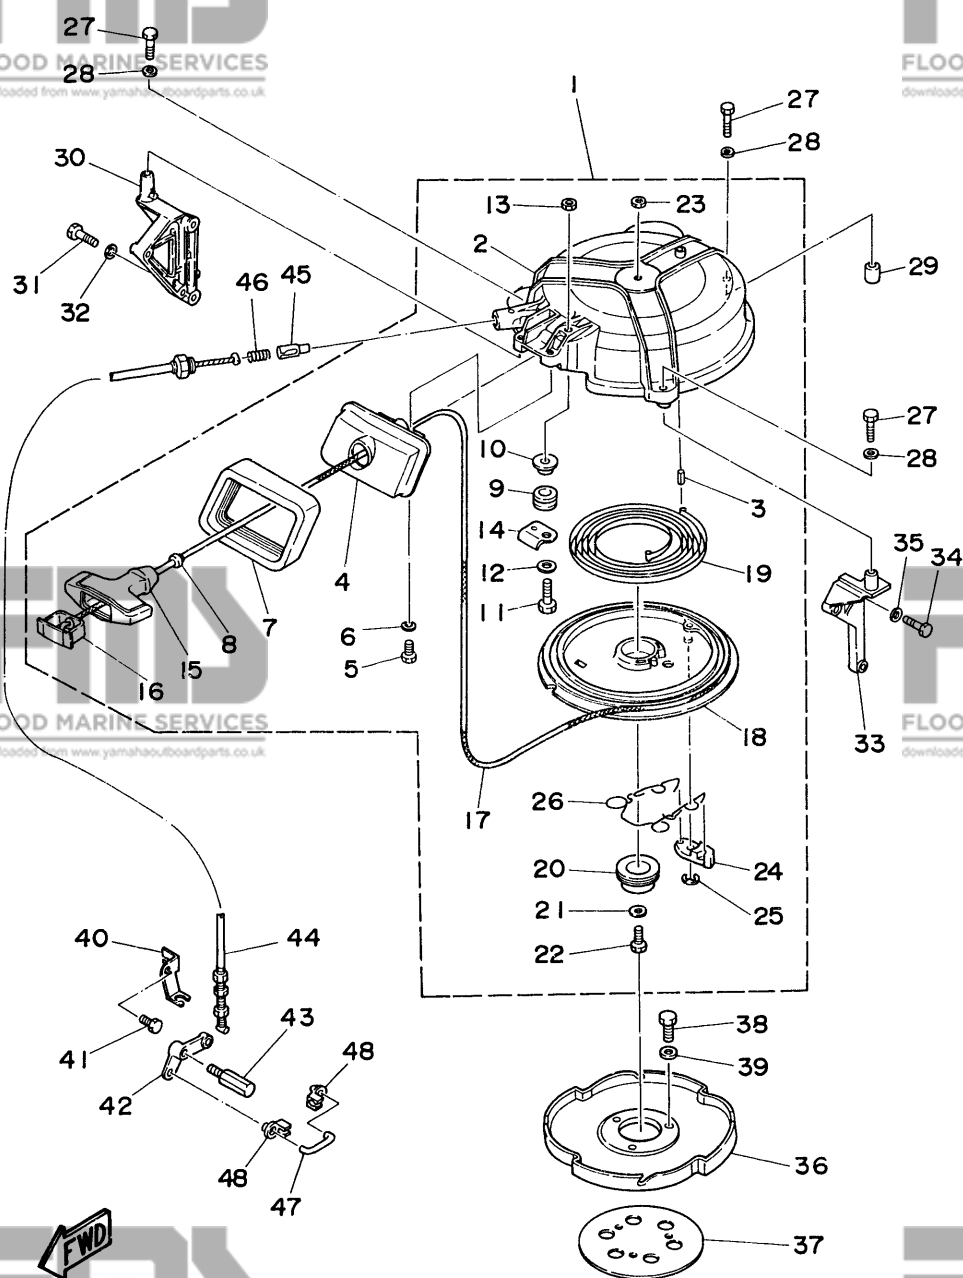

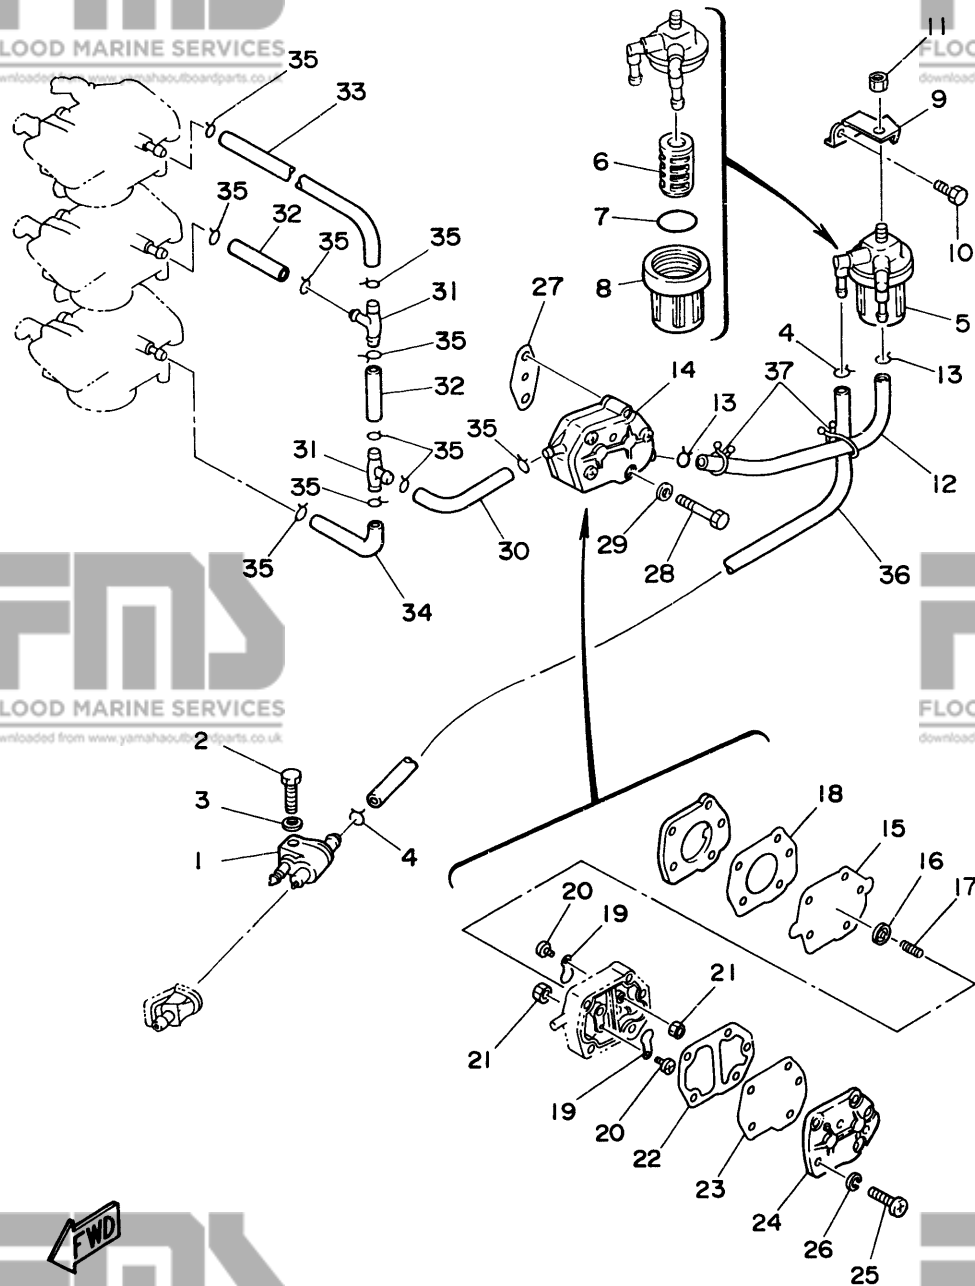


Fig. 7 FUEL

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	661-24304-02	FUEL PIPE JOINT COMP. 1	1	20	6A0-14325-00	.SCREW, pan head	2
2	97395-06025	BOLT	1	21	95380-03600	.NUT	2
3	92990-06600	WASHER, plate	1	22	648-24435-02	.GASKET, body 2	1
4	90467-08004	CLIP	2	23	663-24411-00	.DIAPHRAGM	1
5	655-24560-01	FILTER ASSY	1	24	648-24413-01	.BODY 2	1
6	6F5-24563-00	.ELEMENT, filter	1	25	98580-05530	.SCREW, pan head	3
7	93210-37M25	.O-RING	1	26	92990-05100	.WASHER, spring	3
8	655-24521-01	.CUP, filter	1	27	650-24431-00	GASKET, fuel pump 1	1
9	6H4-24566-01	BRACKET, filter	1	28	97395-06040	BOLT	2
10	97013-06012	BOLT	1	29	92990-06600	WASHER, plate	2
11	95380-08600	NUT	1	30	90445-09063	HOSE	1
12	6H4-24314-00	PIPE 4	1	31	688-24378-00	PIPE, joint 4	2
13	90467-08004	CLIP	2	32	90445-09057	HOSE	2
14	6A0-24410-04	FUEL PUMP ASSY	1	33	6H4-24313-00	PIPE 3	1
15	648-24411-00	.DIAPHRAGM	1	34	6H4-24312-00	PIPE 2	1
16	648-24424-00	.SEAT, spring	1	35	90467-08004	CLIP	10
17	648-24423-00	.SPRING, diaphragm	1	36	6H4-24311-00	PIPE, fuel 1	1
18	648-24434-01	.GASKET, body	1	37	90464-16039	CLAMP	3
19	6A0-24421-01	.VALVE, check	2				

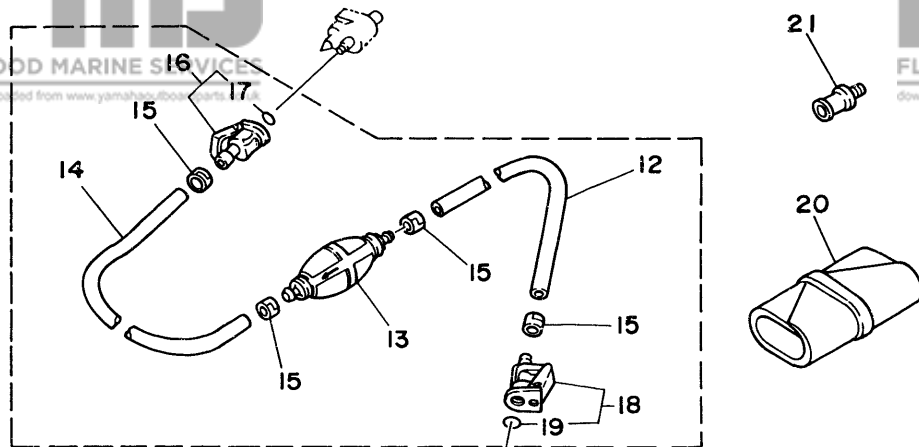


Fig. 8 FUEL 2

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6Y1-W2420-62-24	FUEL TANK ASSY	1	#12	90445-11M06	.HOSE (L:2050mm)	1
2	6Y1-24246-00	.GRAPHIC, side	2	13	6Y1-24360-02	.PRIMER PUMP ASSY	1
3	6Y1-24257-00	.GRAPHIC	1	#14	90445-11M05	.HOSE (L:850mm)	1
4	6Y1-24260-02	.FUEL METER ASSY	1	15	650-24351-01	.BAND 1	4
5	6Y1-24268-00	.GASKET, fuel meter	1	16	6G1-24305-00	.FUEL PIPE JOINT COMP. 2	1
6	98586-05016	.SCREW, pan head	4	17	93210-08287	.O-RING	1
7	6Y1-24329-00	.SEAL	4	18	6Y1-24305-01	.FUEL PIPE JOINT COMP. 2	1
8	6Y1-24610-00	.CAP ASSY	1	19	93210-08287	.O-RING	1
9	6Y1-24167-00	.STRAINER	1	20	656-W2810-01	TOOL KIT	1
10	6Y1-24256-80	.GRAPHIC, fuel tank 9	1	21	6E0-28193-00-94	PLUG, water check	1
11	6Y1-24306-05	FUEL PIPE COMP. 1	1				

Also available in 30m rolls. (Parts No. 90890-56878)

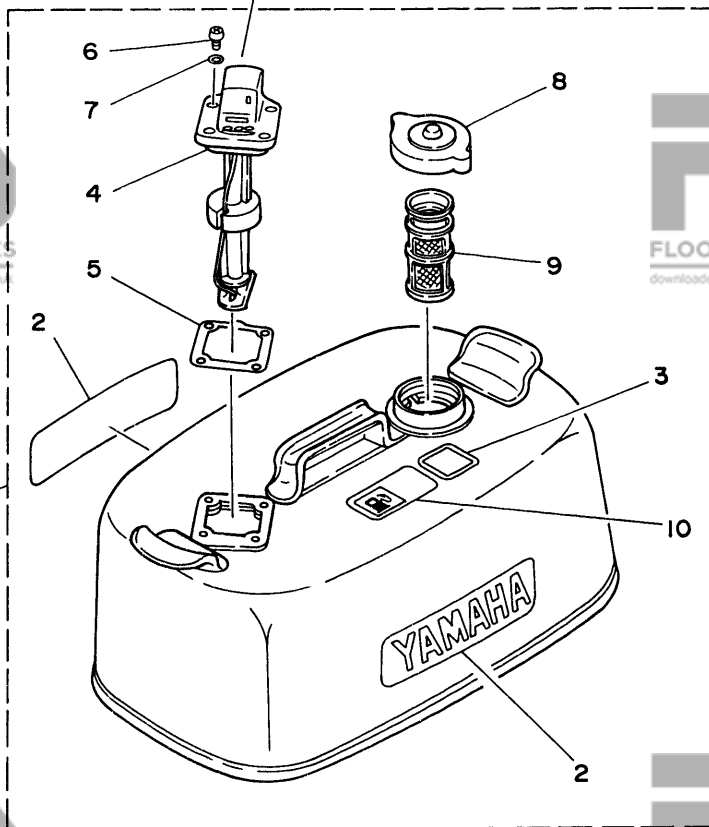


Fig. 9 TOP COWLING

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H4-42610-N3-EJ	TOP COWLING ASSY (40HRO Model)	1 UR	7	97395-06016	.BOLT	4
	6H4-42610-V2-EJ	TOP COWLING ASSY (40HMO Model)	1 UR	8	92990-06600	.WASHER, plate	4
2	6H4-42615-00	.SEAL	1	9	6H4-42686-02	.EMBLEM, front	1
3	6H4-42651-00	.HOOK	1	10	6H4-42687-01	.EMBLEM, rear	1
4	6H4-42652-00	.HOOK	1	11	6H4-W0070-N2	.GRAPHIC SET (40HRO Model)	1 UR
5	90266-04M01	.RIVET	4		6H4-W0070-V1	.GRAPHIC SET (40HMO Model)	1 UR
6	6H4-42613-00-EJ	.MOLDING, air duct	1	12	6H4-15761-00	.SEAL, rubber 1	1

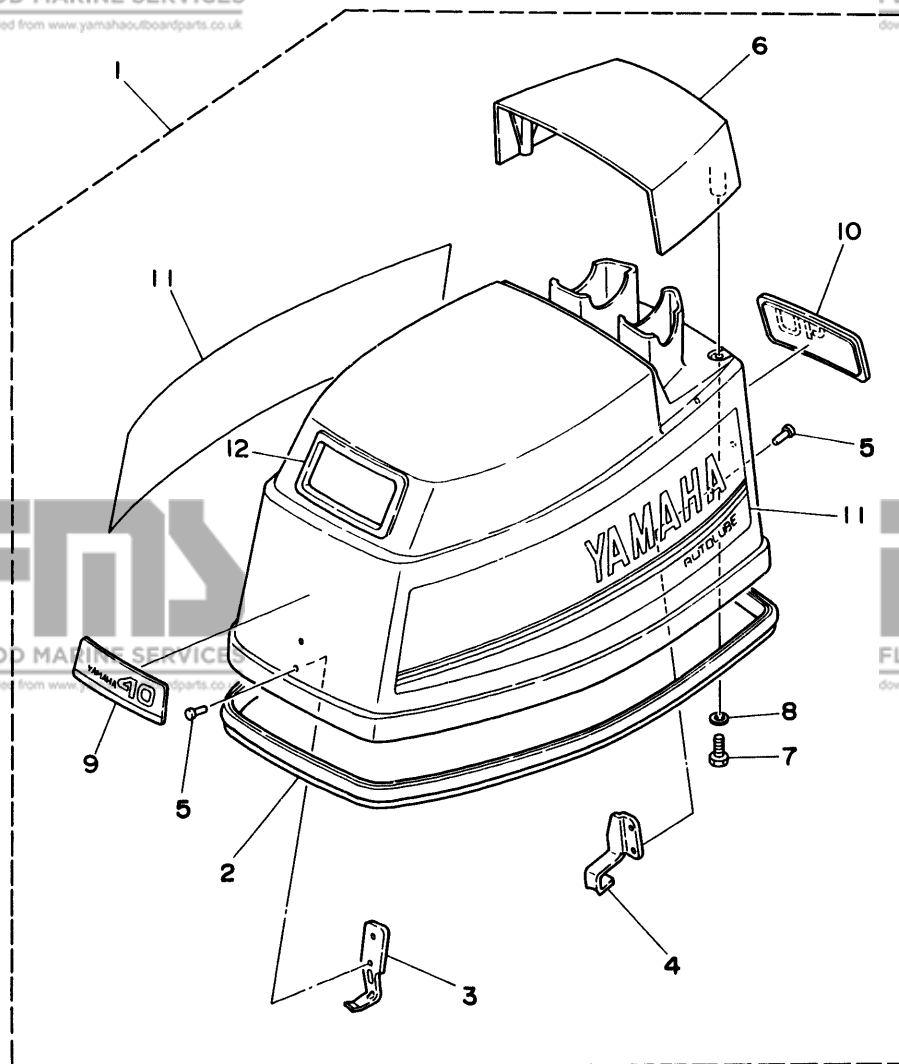
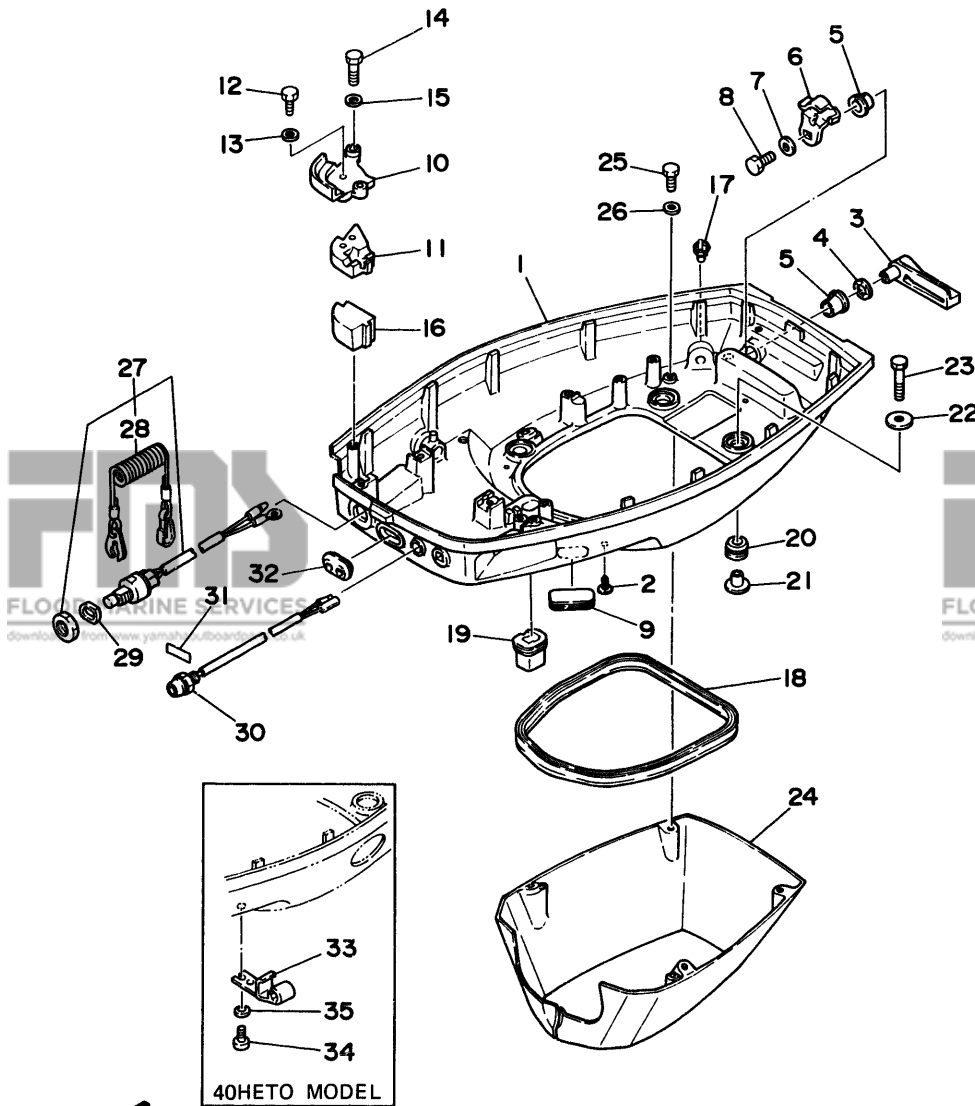


Fig. 10 BOTTOM COWLING

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H4-42711-05-EJ	COWLING, bottom	1 UR	15	92990-06600	WASHER, plate	2
	6H4-42711-23-EJ	COWLING, bottom (40HETO Model)	1 UR	16	6H4-42724-00	GROMMET	1
2	90338-05M03	PLUG	1	17	6E5-44391-00	NIPPLE, hose	1
3	6H4-42815-00	LEVER, clamp	1	18	6H4-42716-00	RUBBER, seal 1	1
4	90206-12052	WASHER, wave	1	19	682-42727-00	GROMMET	1
5	90386-12069	BUSH	2	20	90480-09M21	GROMMET	4
6	6H4-42816-00	LEVER, clamp	1	21	90387-06M41	COLLAR	4
7	90201-06M02	WASHER, plate	1	22	90201-06416	WASHER, plate	4
8	97313-06010	BOLT	1	23	97313-06030	BOLT	4
9	6H4-42726-00	GROMMET	1 UR	24	6H4-42741-20	APRON	1
	6H5-42726-00	GROMMET (40HEPO Model)	1 UR	25	97395-06016	BOLT	4
	688-42726-10	GROMMET (40HETO Model)	1 UR	26	92990-06600	WASHER, plate	4
10	6H4-48531-00-94	BRACKET, remote control 1	1 UR	27	6H4-82575-00	ENGINE STOP SWITCH ASSY	1
	6H4-48531-10-94	BRACKET, remote control 1 (40HETO Model)	1 UR	28	682-82556-00	.STOPPER	1
11	6H4-48532-00-94	BRACKET, remote control 2	1 UR	29	6H4-82537-00	ATTACHMENT, stop switch	1
	6H4-48532-10-94	BRACKET, remote control 2 (40HETO Model)	1 UR	30	6J8-85410-00	EMERGENCY SIGNAL LIGHT ASSY	1
12	97313-05016	BOLT	1	31	6H4-85415-10	MARK, signal lamp	1
13	92990-05600	WASHER, plate	1	32	6H3-42727-00	GROMMET	1
14	97313-06020	BOLT	2	33	6E5-24367-01	CLAMP, fuel pipe 2 (40HETO Model)	1
				34	90157-06M01	SCREW, pan head (40HETO Model)	1
				35	92990-06600	WASHER, plate (40HETO Model)	1



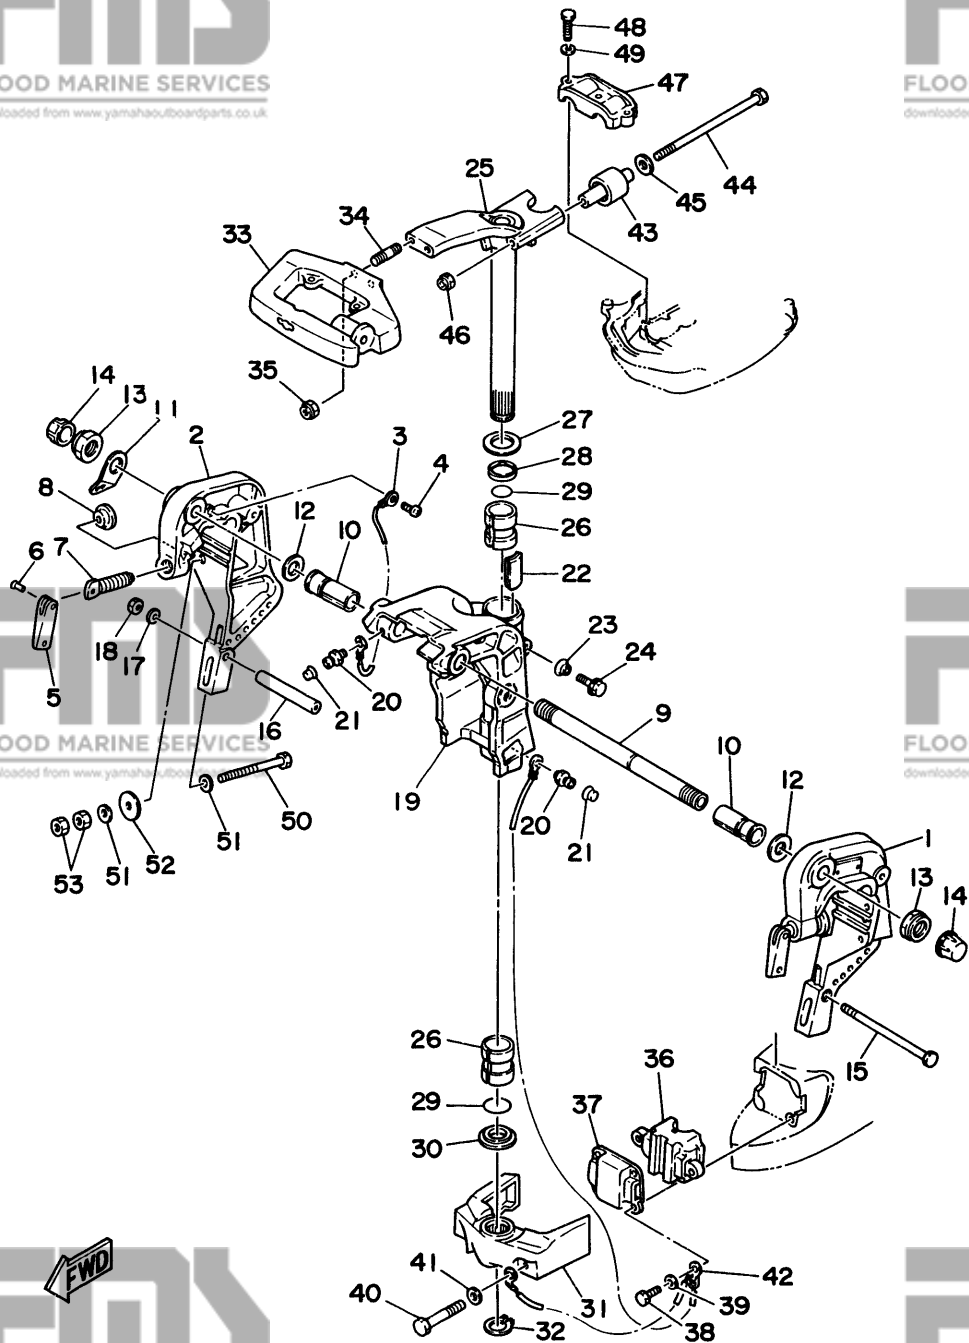


Fig. 11 BRACKET 1

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H4-43111-04-EJ	BRACKET, clamp	1	28	90386-30M78	BUSH	1
2	6H4-43112-04-EJ	BRACKET, clamp	1	29	93210-29M94	O-RING	2
3	6E5-82148-00	WIRE, lead 4	1	30	90386-30M60	BUSH	1
4	97895-06008	SCREW, pan head	1	31	6H4-44551-01-EJ	HOUSING, lower mount rubber	1
5	616-43118-00-EJ	HANDLE, transom clamp	2	32	93410-28M06	CIRCLIP	1
6	90243-04M00	PIN	2	33	6H4-42121-02-5B	BRACKET	1
7	90149-14M12	SCREW	2	34	90116-10175	BOLT, stud	2
8	648-43114-01	PAD, transom clamp	2	35	90185-10051	NUT, self-locking	2
9	6J8-43131-01	BOLT, clamp bracket	1	36	6H4-44557-00	MOUNT DAMPER, lower front (Short)	1 UR
10	90386-22M69	BUSH	2		6H4-44557-10	MOUNT DAMPER, lower front (Long)	1 UR
11	6J8-43113-01	PLATE, clamp bracket	1	37	6H4-44553-01	COVER, lower mount	1
12	90201-22428	WASHER, plate	2	38	97395-08025	BOLT	4
13	90185-22043	NUT, self-locking	2	39	92990-08600	WASHER, plate	4
14	663-43145-00	CAP, clamp bracket	2	40	97395-10060	BOLT	2
15	90101-08339	BOLT	1	41	92990-10600	WASHER, plate	2
16	90387-08M03	COLLAR	1	42	6H4-82127-00	WIRE, lead 2	1
17	92990-08600	WASHER, plate	1	43	6H4-44514-00	MOUNT DAMPER, upper side	2
18	95380-08600	NUT	1	44	90101-08M86	BOLT	2
19	6J8-43311-04-EJ	BRACKET, swivel	1	45	90201-09425	WASHER, plate	2
20	93700-06004	NIPPLE, grease	3	46	90185-08045	NUT, self-locking	2
21	663-45119-00	CAP, grease nipple	3	47	6H4-44511-00-94	COVER, upper mount	1
22	6J8-42528-00	PLATE, friction	1	48	97090-08035	BOLT	3
23	689-43373-01	SEAL, damper	1	49	92990-08100	WASHER, spring	3
24	90105-06M18	BOLT, washer based	1	50	90101-10M58	BOLT	4
25	6H4-42510-11-EJ	STEERING BRACKET ASSY	1	51	92995-10600	WASHER	8
26	90386-30M77	BUSH	2	52	90201-12426	WASHER, plate	4
27	90201-30M00	WASHER, plate	1	53	95380-10600	NUT	8


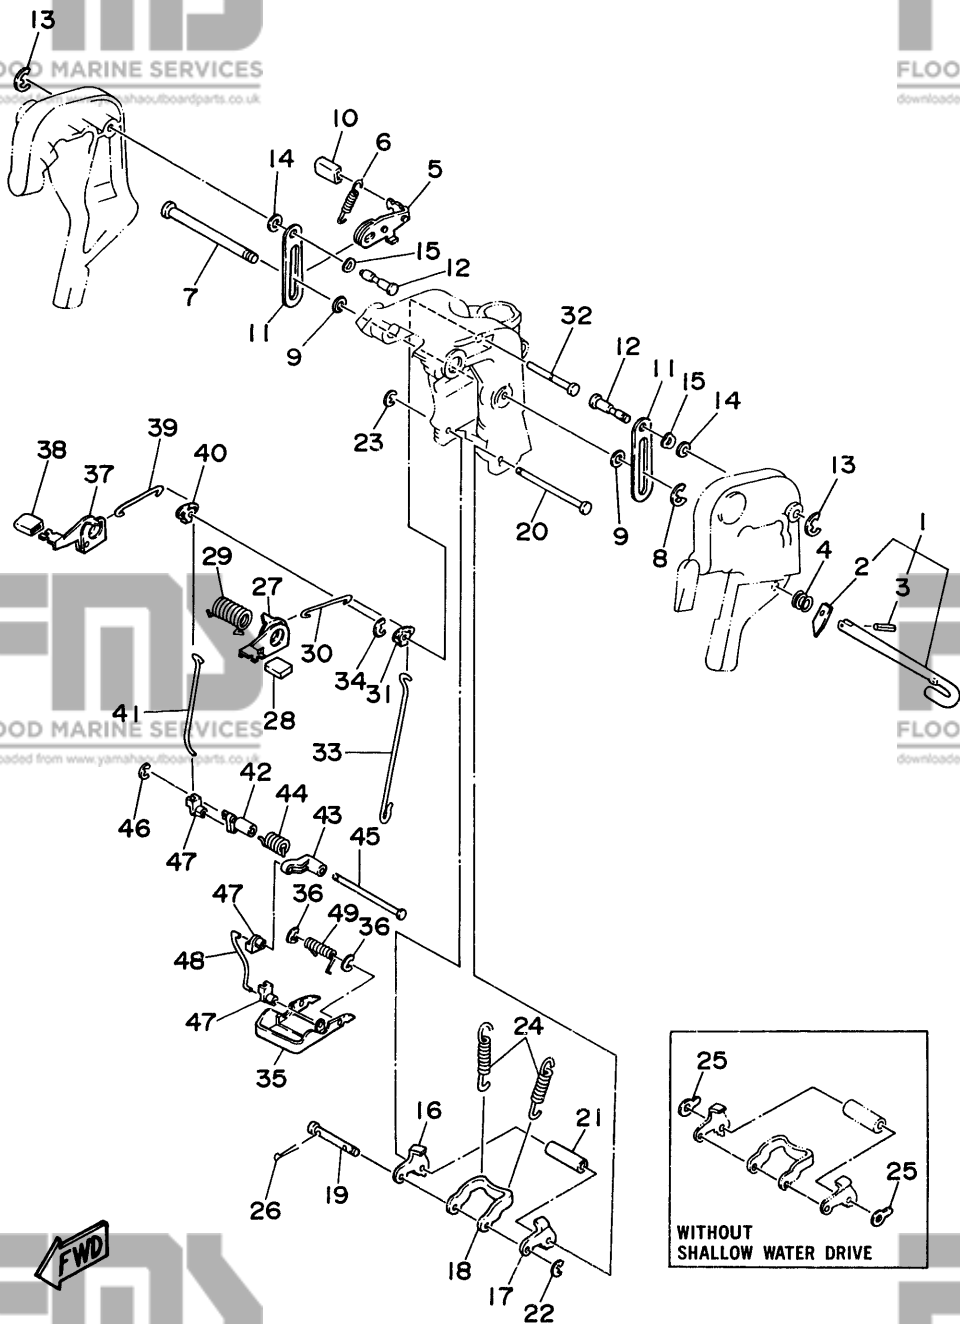


Fig. 12 BRACKET 2

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H4-43160-01	ROD ASSY	1	27	6J8-43631-00	LEVER, tilt	1
2	676-43165-00	PLATE, tilt lock	1	28	6J8-43633-00	COVER, tilt lever	1
3	91690-30010	PIN, spring	1	29	90508-18M24	SPRING, torsion	1 UR
4	90502-10M04	SPRING, conical	1		90508-18M23	SPRING, torsion (For Shallow Water Drive)	1 UR
5	6J8-43181-01	LEVER, tilt stop	1	30	6H4-43616-00	ROD, tilt lock	1
6	90506-12M25	SPRING, tension	1	31	6J8-43641-00	LEVER, tilt	1
7	90249-12M28	PIN	1	32	90249-06M23	PIN	1 UR
8	93430-10M00	CIRCLIP	1		90249-06M24	PIN (For Shallow Water Drive)	1 UR
9	90202-12031	WASHER, plate	2	33	6J8-43617-00	ROD, tilt lock	1
10	682-43318-01	COVER	1	34	99080-05600	CIRCLIP	1
11	6J8-43627-00	STOPPER	2	35	6J8-43681-01	LEVER, shallow water drive	1
12	90249-12M27	PIN	2	36	6J8-43673-00	WASHER 1	2
13	93430-10M00	CIRCLIP	2	37	6J8-43631-10	LEVER, tilt	1
14	90202-12031	WASHER, plate	2	38	6J8-43633-00	COVER, tilt lever	1
15	90206-12M16	WASHER, wave	2	39	6H4-43616-00	ROD, tilt lock	1
16	6J8-43614-00	PLATE, tilt lock	1	40	6J8-43641-00	LEVER, tilt	1
17	6J8-43615-00	PLATE, tilt lock	1	41	6J8-43617-10	ROD, tilt lock	1
18	6J8-43613-01	ARM, tilt lock	1	42	6J8-43186-00	LEVER	1
19	6H4-43659-00	SHAFT, reverse lock	1	43	6J8-43187-00	LEVER 2	1
20	6J8-43611-01	SHAFT, tilt lock	1	44	90508-25M21	SPRING, torsion	1
21	90387-07M64	COLLAR	1	45	90249-07M25	PIN	1
22	93430-06M02	CIRCLIP	1	46	99080-05600	CIRCLIP	1
23	99080-05600	CIRCLIP	1	47	6J8-41262-00	JOINT, choke lever	3
24	90506-32M22	SPRING, tension	2	48	6J8-43616-10	ROD, tilt lock	1
25	6H4-43674-00	WASHER (Without Shallow water Drive)	2	49	90508-20M22	SPRING, torsion	1
26	91490-20010	PIN, cotter	2				

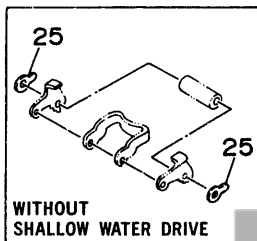

**HANDLE STEERING
ASS'Y**

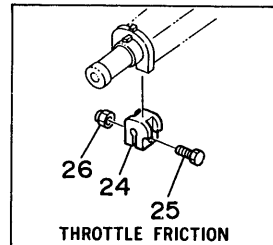
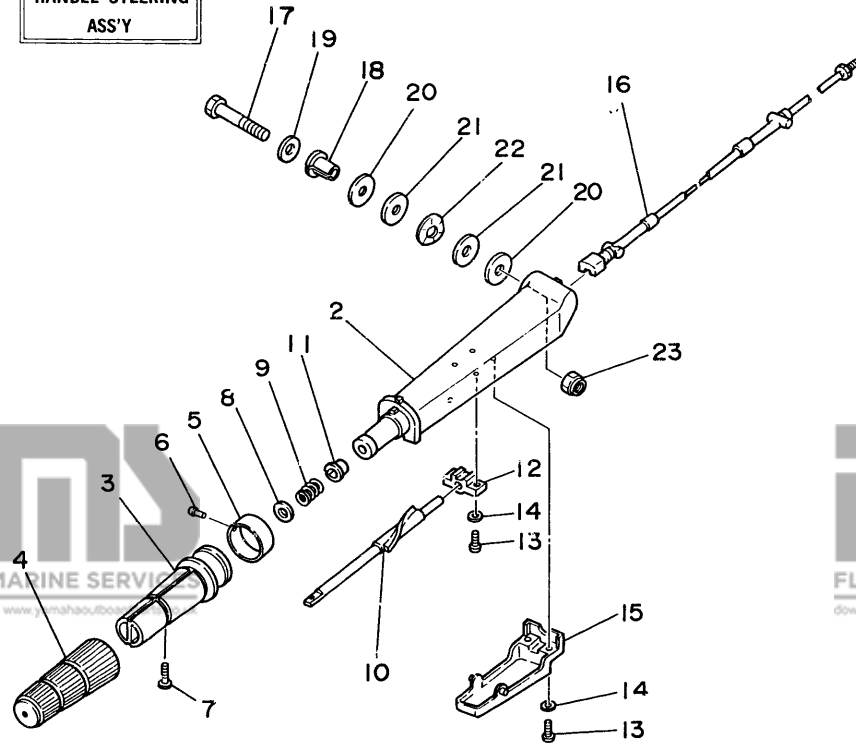


Fig. 13 STEERING

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H4-W0084-04-EJ	HANDLE STEERING ASSY (Ref. No. 2 to 26)	1	14	92901-05600	WASHER, plate	4
2	6H4-42111-01-EJ	HANDLE, steering	1	15	6H4-42131-00	COVER, handle steering	1
3	664-42119-00	GRIP, steering handle	1	16	6H4-26311-02	CABLE, throttle 1	1
4	661-42177-00	RUBBER, handle	1	17	90101-12M37	BOLT	1
5	6L2-42137-00	INDICATOR, throttle	1	18	90386-12089	BUSH	1
6	90269-02M09	RIVET	1	19	92990-12200	WASHER, plain	1
7	98680-05525	SCREW, oval head	1	20	90202-12092	WASHER, plate	2
8	92990-10600	WASHER, plate	1	21	90201-12537	WASHER, plate	2
9	90501-23215	SPRING, compression	1	22	90206-12054	WASHER, wave	1
10	6H4-42138-01	LEVER, throttle	1	23	90185-12058	NUT, self-locking	1
11	90386-08032	BUSHING	1	24	656-42126-01	FRICTION, steering handle grip	1
12	6H4-42159-00	STAY	1	25	97395-06020	BOLT	1
13	97880-05016	SCREW, pan head	4	26	90185-06062	NUT, self-locking	1

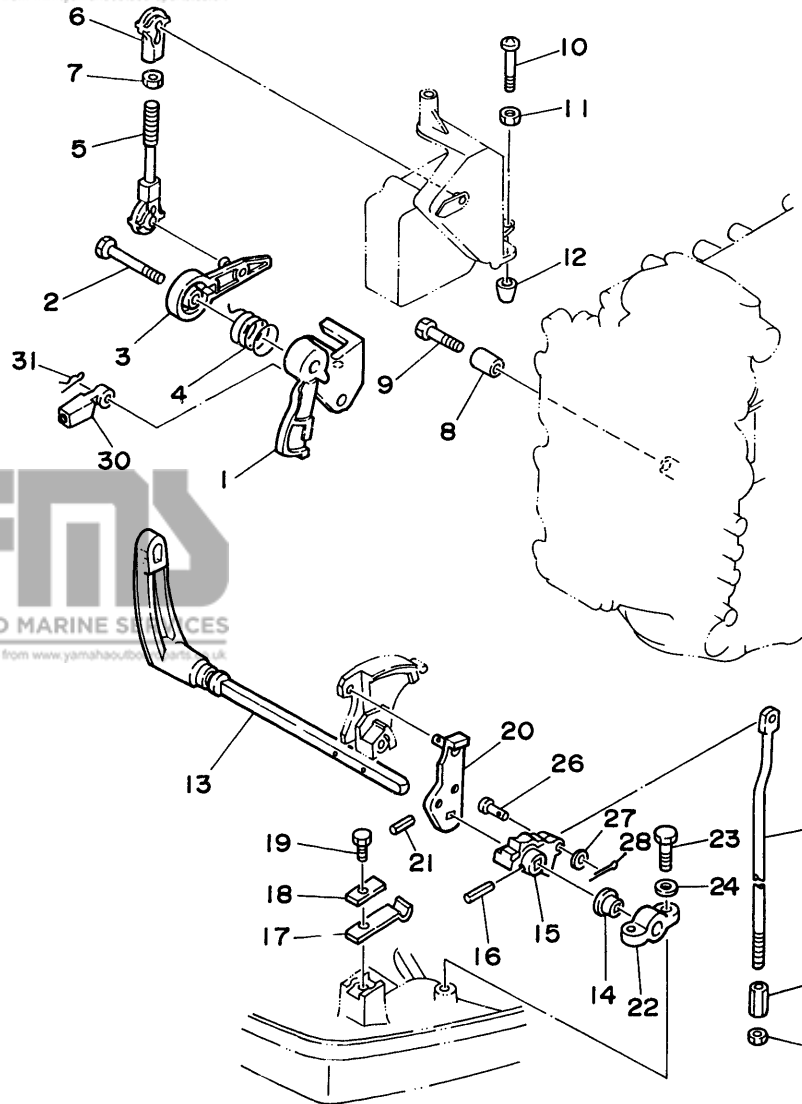


Fig. 14 CONTROL

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H4-41213-14	CAM, accel. (40HMO Model)	1 UR	15	6H4-44121-02	LEVER, shift rod	1
	6H4-41213-04	CAM, accel. (40HEO/40HEPO/40HRO/40HETO Model)	1 UR	16	91690-30318	PIN, spring	1
2	90109-06M43	BOLT	1	17	6H4-44116-00	SPRING	1
3	6H4-41632-01	LEVER, magneto control	1	18	682-44117-00	BRACKET	1
4	90508-26M20	SPRING, torsion	1	19	97313-06016	BOLT	1
5	6G5-41636-01	ROD, magneto control	1	20	6H4-44125-01	LEVER, shift rod	1
6	6H4-41237-00	JOINT, link	1	21	91690-30316	PIN, spring	1
7	95380-05600	NUT	1	22	6F5-41662-00	BRACKET	1
8	90387-06M19	COLLAR	1	23	97313-06020	BOLT	2
9	97313-06025	BOLT	1	24	92990-06600	WASHER, plate	2
10	90157-06M00	SCREW, pan head	1	25	6H4-44143-00	ROD, shift	1
11	95303-06600	NUT	1	26	91790-05020	PIN, clevis	1
12	688-44194-00	CAP	1	27	92990-05600	WASHER, plate	1
13	6H4-44111-00	HANDLE, gear shift (40HMO/40HRO Model)	1 UR	28	91490-16010	PIN, cotter	1
	6H4-44111-10	HANDLE, gear shift (40HEO/40HEPO/40HETO Model)	1 UR	29	648-44146-00	CONNECTOR, shift rod	1
14	682-44132-00	BUSHING	1	30	663-48344-00	CABLE END, remote control	1
				31	90468-18008	CLIP	1
				32	90170-07021	NUT	1

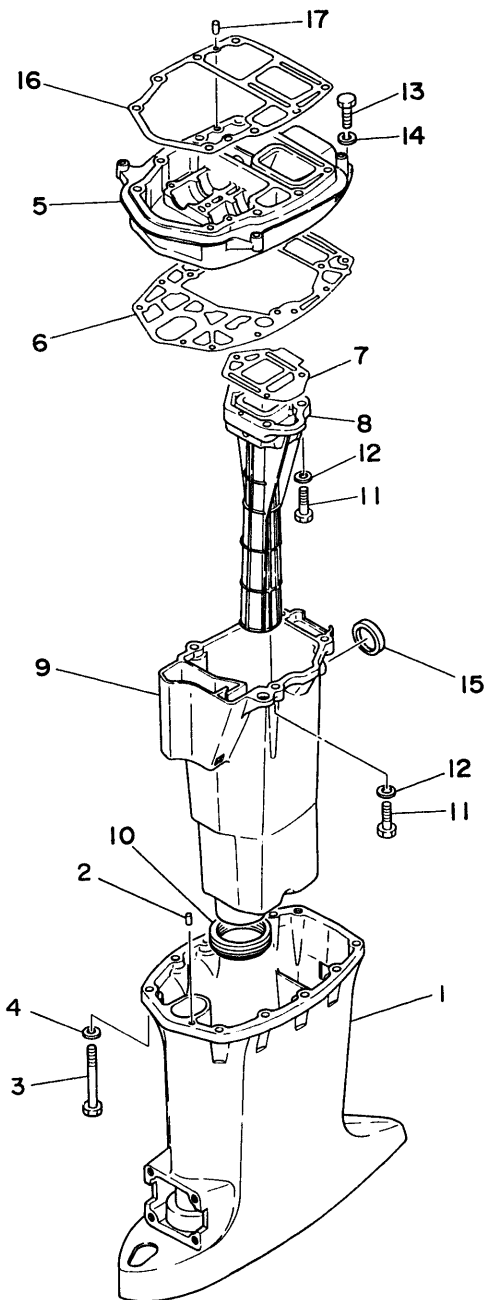


Fig. 15 UPPER CASING

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H4-45111-00-EJ	CASING, upper (Short)	1 UR	9	6H4-14711-10-5B	MUFFLER 1 (Long)	1 UR
2	6H4-45111-10-EJ	CASING, upper (Long)	1 UR	10	663-45123-00	GASKET, muffler	1
3	93606-12019	PIN, dowel	2	11	97395-08030	BOLT	7
4	97395-08080	BOLT	8	12	92990-08600	WASHER, plate	7
5	92990-08600	WASHER, plate	8	13	97395-08030	BOLT	2
6	6H4-41137-00-94	GUIDE, exhaust	1	14	92990-08100	WASHER, spring	2
7	6H4-45114-00	GASKET, upper casing	1	15	6H4-41133-00	GASKET, exhaust manifold 1	1
8	6H4-41134-00	GASKET, exhaust manifold	1	16	6H4-45113-00	GASKET, upper casing	1
9	6H4-41131-01-5B	MANIFOLD, ext. 1	1	17	93606-12019	PIN, dowel	2
10	6H4-14711-00-5B	MUFFLER 1 (Short)	1 UR				

LOWER UNIT
ASS'Y

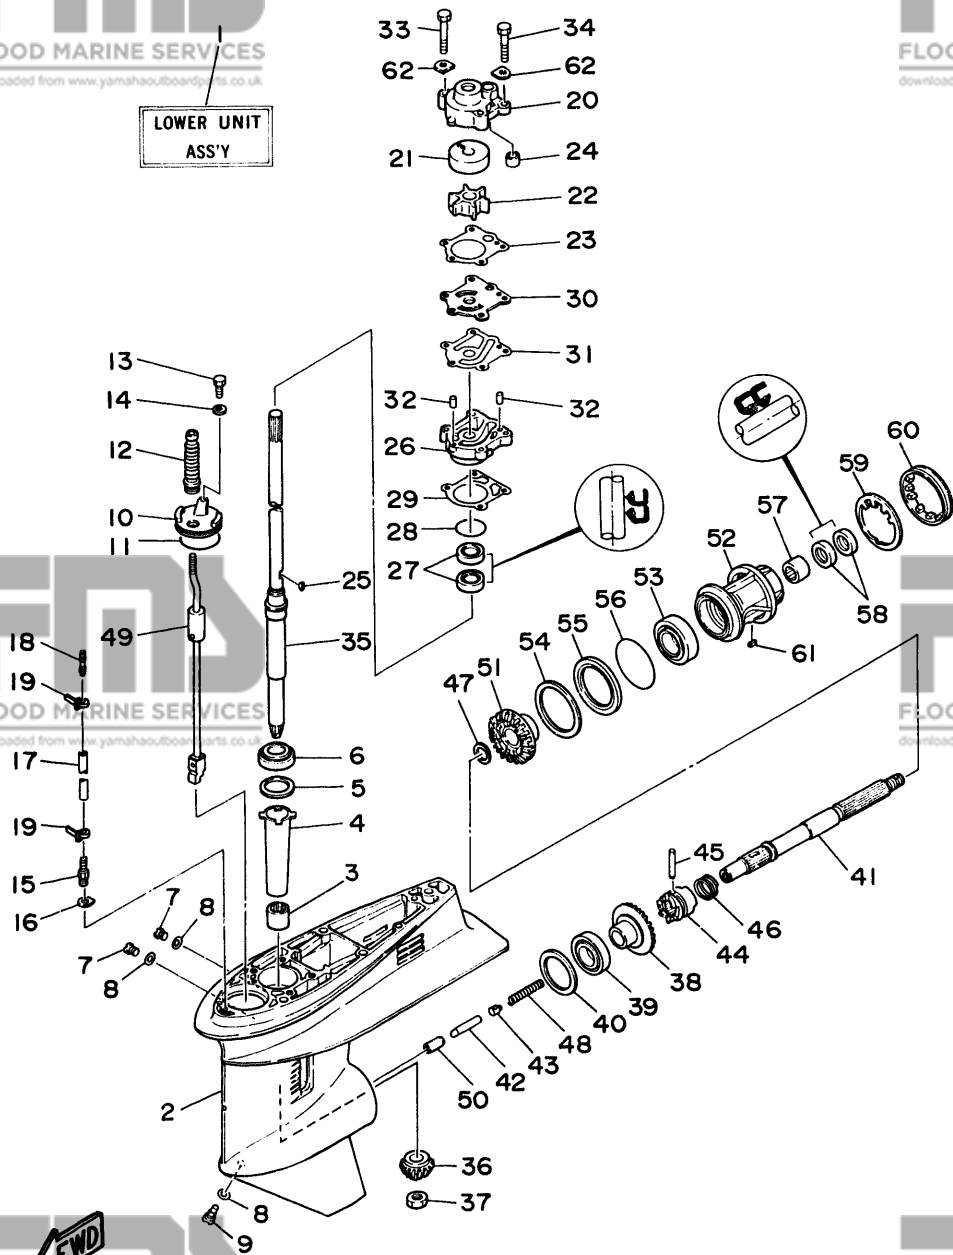


Fig. 16 LOWER CASING. DRIVE 1

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H4-45300-01-EJ	LOWER UNIT ASSY (Short)	1 UR	34	97395-08045	BOLT	2
		(Ref. No. 2 to 62)		35	6H4-45501-00	DRIVE SHAFT COMP. (Short)	1 UR
	6H4-45300-11-EJ	LOWER UNIT ASSY (Long)	1 UR		6H4-45501-10	DRIVE SHAFT COMP. (Long)	1 UR
		(Ref. No. 2 to 62)		36	6H4-45551-00	PINION	1
2	6H4-45301-01-EJ	CASING, lower	1	37	90170-12138	NUT	1
3	93315-32224	BEARING, cylindrical	1	38	6H4-45560-00	GEAR	1
4	6H4-45536-00	SLEEVE, drive shaft	1	39	93332-000V4	BEARING	1
5	663-45587-01-10	SHIM (T:0.10MM)	1 UR	40	6H4-45567-01-10	SHIM (T:0.10MM)	1 UR
	663-45587-01-12	SHIM (T:0.12MM)	1 UR		6H4-45567-01-12	SHIM (T:0.12MM)	1 UR
	663-45587-01-15	SHIM (T:0.15MM)	1 UR		6H4-45567-01-15	SHIM (T:0.15MM)	1 UR
	663-45587-01-18	SHIM (T:0.18MM)	1 UR		6H4-45567-01-18	SHIM (T:0.18MM)	1 UR
	663-45587-01-30	SHIM (T:0.30MM)	1 UR		6H4-45567-01-30	SHIM (T:0.30MM)	1 UR
	663-45587-01-40	SHIM (T:0.40MM)	1 UR		6H4-45567-01-40	SHIM (T:0.40MM)	1 UR
	663-45587-01-50	SHIM (T:0.50MM)	1 UR		6H4-45567-01-50	SHIM (T:0.50MM)	1 UR
6	93332-00023	BEARING	1	41	679-45611-01	SHAFT, propeller	1
7	90340-08M04	PLUG, straight screw	2	42	676-45635-00	PLUNGER, shift	1
8	90430-08020	GASKET	3	43	663-45634-00	SLIDE, shift	1
9	688-45341-00	PLUG, drain	1	44	6H4-45631-00	CLUTCH, dog	1
10	6H4-45321-01	PLATE	1	45	90250-06023	PIN, straight	1
11	93210-49ME0	O-RING	1	46	663-45633-00	RING, cross pin	1
12	6G1-44147-00	BOOT, shift rod	1	47	90201-22429	WASHER, plate	1
13	97395-06016	BOLT	1	48	90501-16M01	SPRING, compression	1
14	92990-06600	WASHER, plate	1	49	6H4-44150-01	SHIFT CAM ASSY (Short)	1
15	6H4-45378-00	NIPPLE, hose	1		6H4-44150-12	SHIFT CAM ASSY (Long)	1
16	90209-10M14	WASHER	1	50	6H4-44160-00	DETENT COMP.	1
17	90445-07ME9	HOSE (Short)	1 UR	51	6H4-45571-00	GEAR	1
	90445-07M31	HOSE (Long)	1 UR	52	679-45331-00-94	HOUSING, bearing	1
18	6E5-83558-00	END, nipple	1 UR	53	93306-00702	BEARING	1
	6E5-83558-10	END, nipple (40HETO Model)	1 UR	54	663-45577-01-10	SHIM (T:0.10MM)	1 UR
19	90465-11M10	CLAMP	2		663-45577-01-12	SHIM (T:0.12MM)	1 UR
20	6J8-44311-00	HOUSING, water pump	1		663-45577-01-15	SHIM (T:0.15MM)	1 UR
21	663-44322-00	INSERT, cartridge	1		663-45577-01-18	SHIM (T:0.18MM)	1 UR
22	6H4-44352-02	IMPELLER	1		663-45577-01-30	SHIM (T:0.30MM)	1 UR
23	663-44315-00	GASKET, water pump	1		663-45577-01-40	SHIM (T:0.40MM)	1 UR
24	663-44366-00	DAMPER, water seal	1		663-45577-01-50	SHIM (T:0.50MM)	1 UR
25	90280-03024	KEY, woodruff	1	55	663-45576-00	WASHER, thrust	1
26	663-44341-00-94	HOUSING, water pump	1	56	93210-66M98	O-RING	1
27	93101-23070	OIL SEAL	2	57	93317-22204	BEARING, cylindrical	1
28	93210-41042	O-RING	1	58	93101-22067	OIL SEAL	2
29	663-44316-00	GASKET, water pump	1	59	90214-48M03	WASHER, claw	1
30	663-44323-00	OUTER PLATE, cartridge	1	60	697-45384-00	NUT	1
31	663-44324-00	GASKET, cartridge	1	61	90282-04010	KEY, straight	1
32	93604-08062	PIN, dowel	2	62	90209-08M02	WASHER	4
33	97395-08055	BOLT	2				

Fig. 17 LOWER CASING. DRIVE 2

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	663-45376-00-94	GUIDE, seal damper	1	28	92990-16200	WASHER, plain	1
2	688-45375-00	DAMPER, seal	1	29	90171-16011	NUT, castle	1
3	688-45214-02	COVER, water inlet	1	30	91490-30030	PIN, cotter	1
4	688-45215-02	COVER, water inlet	1	31	663-45941-01-EL	PROPELLER (3X10-3/4"X17"-G)	1 UR
5	98680-05535	SCREW, oval head	1		663-45943-02-EL	PROPELLER (3X11"X15"-G)	1 UR
6	90185-05002	NUT, self-locking	1		663-45945-02-EL	PROPELLER (3X11-1/8"X13"-G)	1 UR
7	664-45371-01	TAB-TRIM	1		663-45947-02-EL	PROPELLER (3X11-5/8"X11"-G)	1 UR
8	97375-08075	BOLT	1		663-45949-01-EL	PROPELLER (3X10-3/4"X16"-G)	1 UR
9	92990-08100	WASHER, spring	1		663-45952-02-EL	PROPELLER (3X11-3/8"X12"-G)	1 UR
10	92990-08600	WASHER, plate	1		663-45954-01-EL	PROPELLER (3X11-3/4"X10"-G)	1 UR
11	95380-08600	NUT	1		663-45956-01-EL	PROPELLER (3X12-1/4"X9"-G)	1 UR
12	93606-12019	PIN, dowel	2		663-45958-01-EL	PROPELLER (3X11-1/4"X14"-G)	1 UR
13	97395-10040	BOLT	4		6H5-45943-00-EL	PROPELLER (3X10"X15"-G) (With Lip Cup)	1 UR
14	92990-10100	WASHER, spring	4		6H5-45945-00-EL	PROPELLER (3X10-3/8"X13"-G) (With Lip Cup)	1 UR
15	92990-10600	WASHER, plate	4		6H5-45952-00-EL	PROPELLER (3X10-5/8"X12"-G) (With Lip Cup)	1 UR
16	97395-08085	BOLT	1		6H5-45958-00-EL	PROPELLER (3X10-1/4"X14"-G) (With Lip Cup)	1 UR
17	92990-08100	WASHER, spring	1			STAINLESS STEEL PROPELLER	
18	92990-08600	WASHER, plate	1		663-45970-60-98	PROPELLER (3X11-3/4"X12"-G)	1 UR
19	90202-12060	WASHER, plate	1		663-45972-60-98	PROPELLER (3X12"X11"-G)	1 UR
20	6H4-44361-00	TUBE, water (Short)	1 UR		663-45974-60-98	PROPELLER (3X11-1/2"X13"-G)	1 UR
	6H4-44361-10	TUBE, water (Long)	1 UR		663-45930-00-98	PROPELLER (3X10-1/4"X14"-G)	1 UR
21	90430-12072	GASKET	1		663-45976-00-98	PROPELLER (3X10-1/4"X15"-G)	1 UR
22	663-44367-00	DAMPER, water seal	1		663-45978-00-98	PROPELLER (3X10-1/4"X16"-G)	1 UR
23	90465-11M10	CLAMP (40HETO Model)	2 UR				
24	90445-07MF1	HOSE (40HETO Model)	1 UR				
25	6E5-83558-00	END, nipple (40HETC Model)	1 UR				
26	663-45987-02	SPACER	1				
27	670-45997-02	SPACER	1				

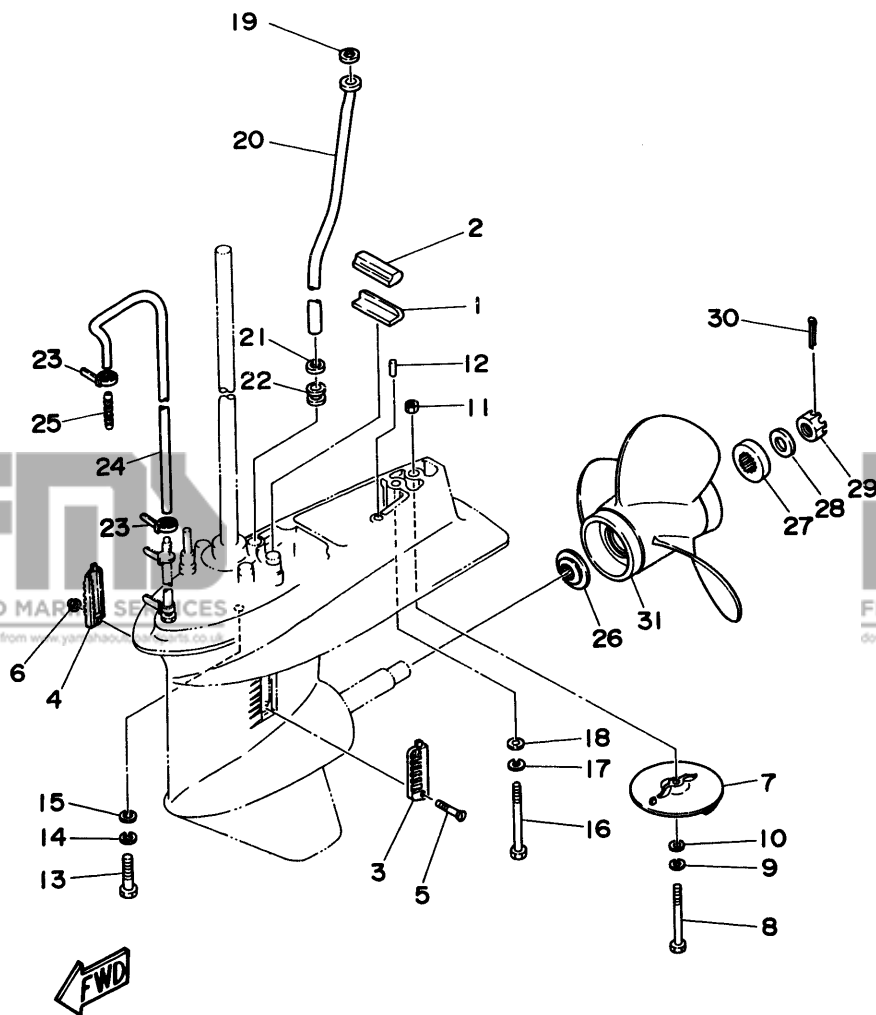


Fig. 18 MAGNETO

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H5-85550-10	ROTOR ASSY	1	14	92990-06100	.WASHER, spring	2
2	6H5-85560-01	BASE ASSY	1	15	98501-06030	.SCREW, pan head	4
3	6H4-15359-03-94	.HOUSING, oil seal	1	16	92990-06100	.WASHER, spring	4
4	6H5-85520-00	.COIL, charge	1	17	90464-03M15	.CLAMP	2
5	6H5-85533-01	.COIL, lighting	1	18	93102-23096	.OIL SEAL	1
6	6H5-85580-00	.COIL, pulser	1	19	6H4-11545-00	KEY, woodruff	1
7	6H5-85580-10	.COIL, pulser	1	20	90179-16M05	NUT	1
8	6H5-85580-20	.COIL, pulser	1	21	90201-16M44	WASHER, plate	1
9	6H5-83354-00	.WIRE, earth lead 1	1	22	6H4-81332-00	PLATE, timing	1
10	98501-05012	.SCREW, pan head	6	23	97985-05210	SCREW, with washer	1
11	92901-05100	.WASHER, spring	6	24	97313-06018	BOLT	3
12	92901-05600	.WASHER, plate	6	25	92990-06600	WASHER, plate	3
13	98501-06025	.SCREW, pan head	2				

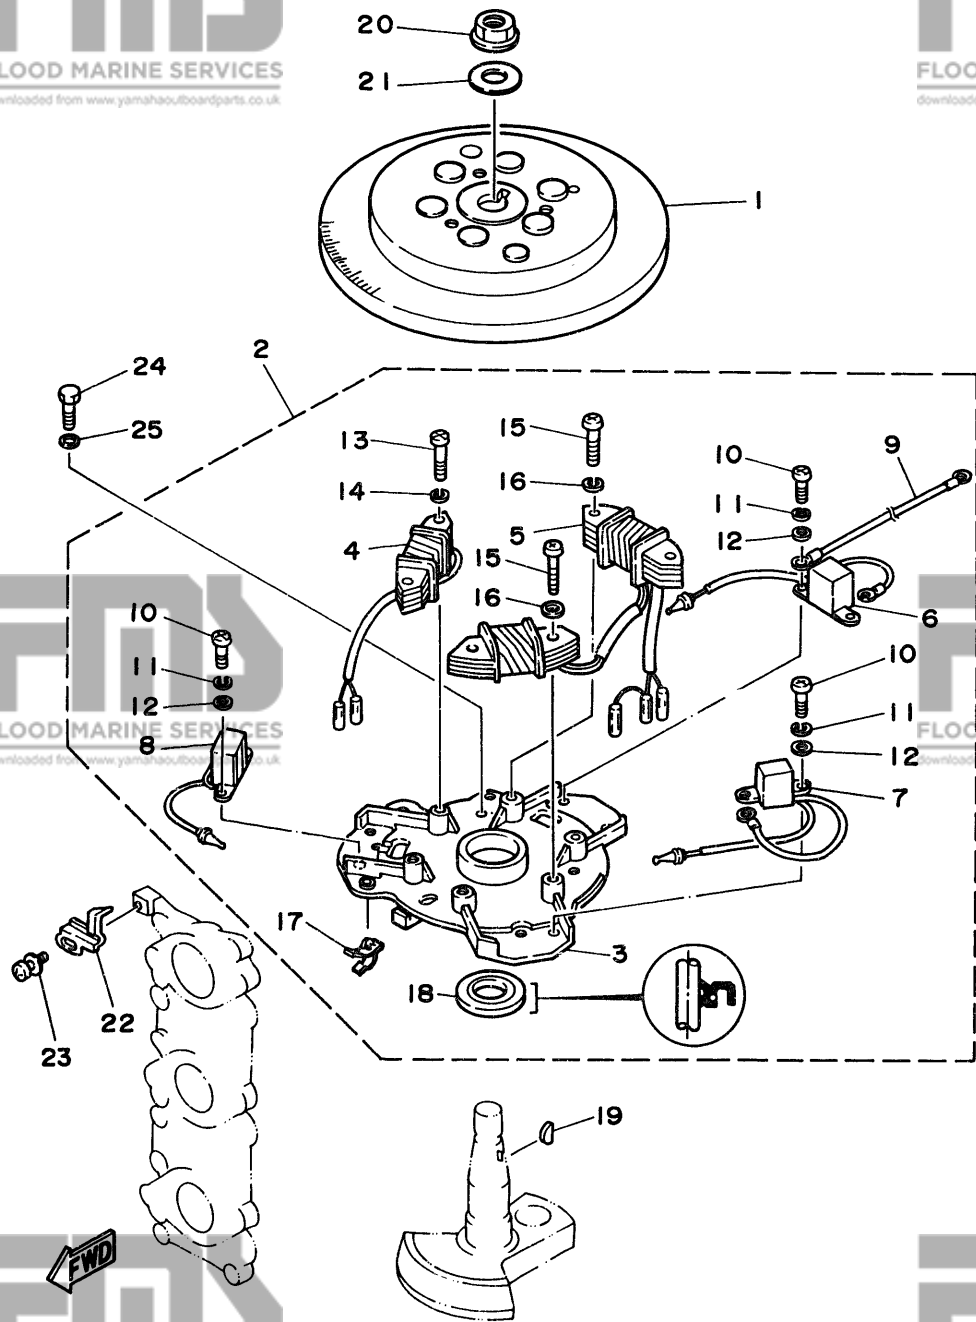


Fig. 19 ELECTRICAL

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H5-85540-01	C.D.I. UNIT ASSY	1	15	90464-05M16	CLAMP	1
2	90465-13M36	CLAMP	1	16	97313-06014	BOLT	1
3	90119-06M51	BOLT, with washer	2	17	92990-06600	WASHER, plate	1
4	6H4-82531-02	WIRE, lead	1	18	6J8-81960-00	RECTIFIER & REGULATOR ASSY	1
5	97313-06014	BOLT	1	19	97395-06012	BOLT	1
6	92990-06600	WASHER, plate	1	20	92990-06600	WASHER, plate	1
7	6H5-85570-00	IGNITION COIL ASSY	3	21	6H4-81975-02	PLATE, rectifier fitting	1
8	90480-25161	GROMMET	1	22	97013-06012	BOLT	2
9	97313-06020	BOLT	3	23	6F5-81922-00	GROMMET	1
10	32990-06600	WASHER, plate	3	24	90464-12M35	CLAMP	1
11	6G1-82370-20	PLUG CAP ASSY	3	25	90440-14M00	PIPE	1
12	689-82560-00	THERMO SWITCH ASSY	1	26	682-84381-00	2P CONCENT	1
13	90446-10M02	HOSE	1	27	90202-26M45	WASHER, plate	1
14	6G1-83557-00	TUBE	1	28	6J8-82105-10	WIRE, harness	1 AP


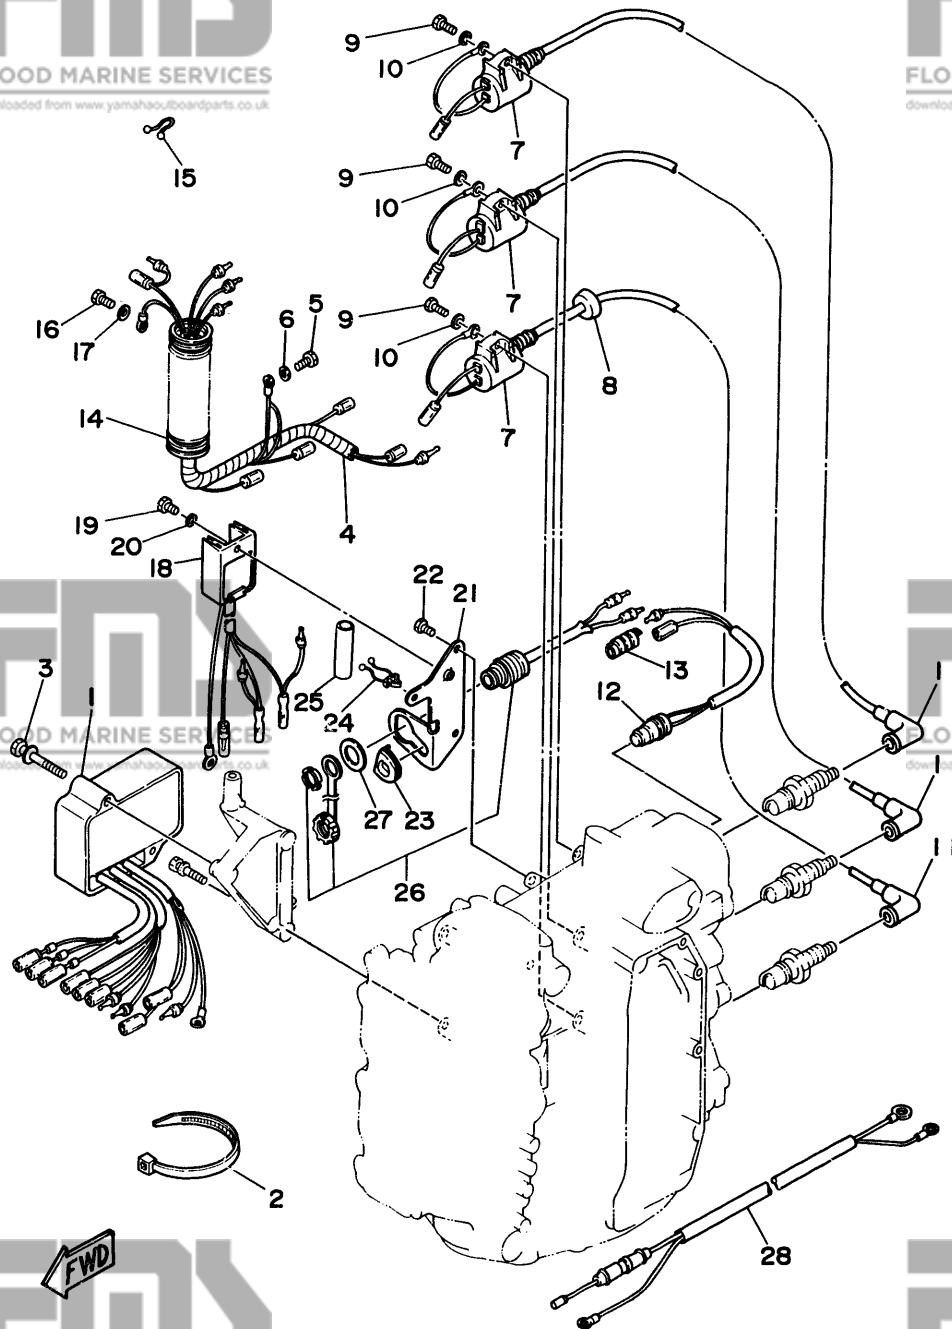



Fig. 20 ALTERNATE 1 (40HE0/40HEP0/40HET0 MODEL)

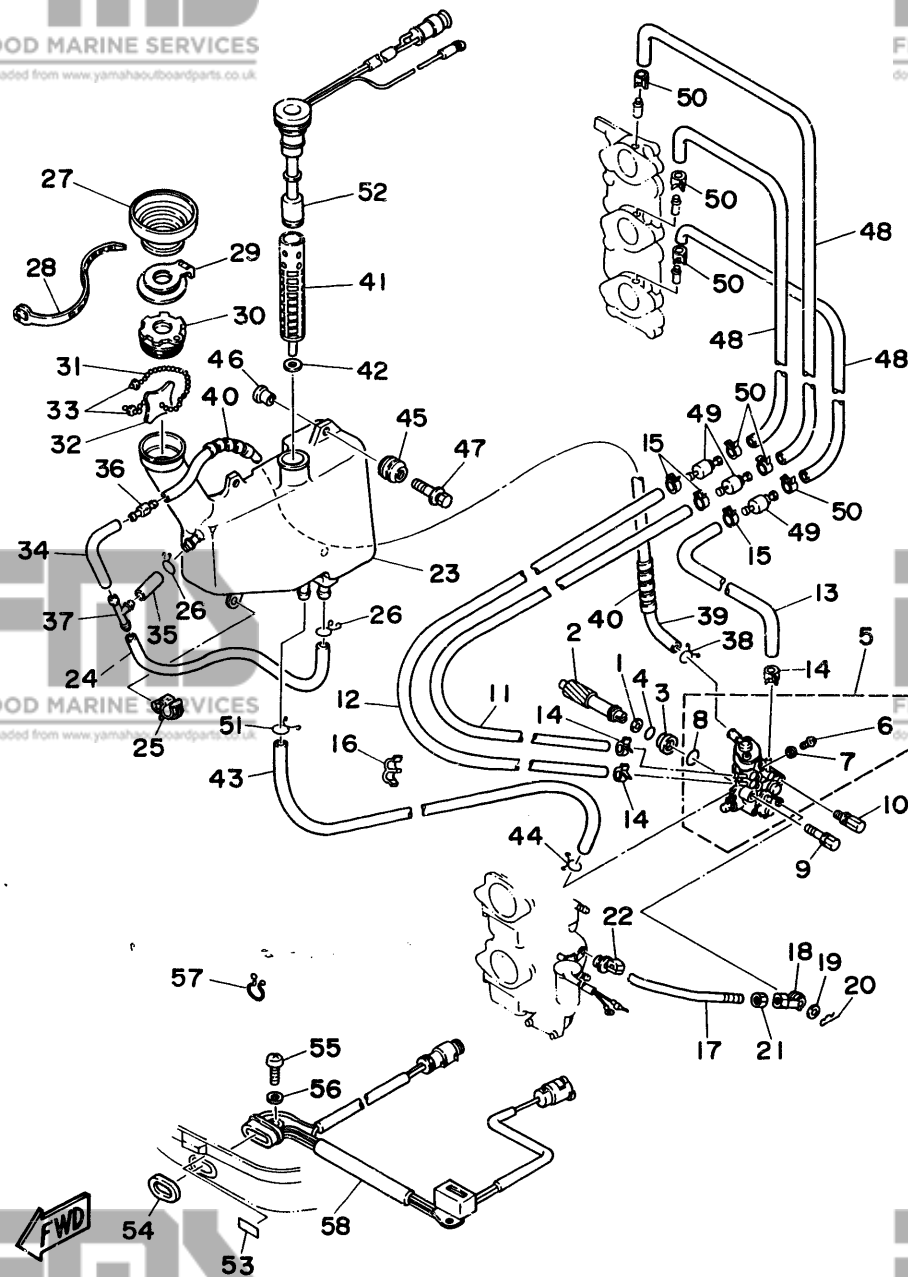

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	90201-08M93	WASHER, plate	1	30	6H4-21770-00	OIL TANK CAP ASSY	1
2	6H4-11537-01	GEAR, driven	1	31	6H5-24633-00	CHAIN, ball	1
3	6H1-13117-01	COLLAR, distance	1	32	6J8-21758-00	WASHER, special 2	1
4	93210-13595	O-RING	1	33	6H1-21757-00	WASHER, special 1	2
5	6H4-13200-03	OIL INJECTION PUMP ASSY	1	34	90445-11M23	HOSE	1
6	6R3-13471-00	.PLUG, drain	1	35	90445-11M07	HOSE	1
7	6L2-13475-00	.GASKET	1	36	6J8-21744-00	BREATHER	1
8	93210-19M47	.O-RING	1	37	6E5-24378-00	PIPE, joint 4	1
9	90109-06M39	BOLT	1	38	90467-10M04	CLIP	1
10	90109-06M40	BOLT	1	39	90445-11M17	HOSE	1
11	90445-07M44	HOSE	1	40	90446-10M01	HOSE	2
12	90445-07M23	HOSE	1	41	6J8-13411-00	STRAINER, oil	1
13	90445-07M46	HOSE	1	42	6J8-13414-00	GASKET, strainer cover	1
14	90468-07M02	CLIP	3	43	6L2-13416-00	PIPE, oil 1	1
15	90468-07M02	CLIP	3	44	90467-08004	CLIP	1
16	90464-07M20	CLAMP	1	45	6A0-82317-00	DAMPER, ignition coil	3
17	6H4-41241-01	ROD, link	1	46	624-42542-00	PIPE	3
18	6H1-41237-00	JOINT, link	1	47	90119-06M65	BOLT, with washer	3
19	90202-05088	WASHER, plate	1	48	90445-07M87	HOSE	3
20	90468-05M03	CLIP	1	49	6J8-13183-00	VALVE, check	3
21	95380-05600	NUT	1	50	90468-07M02	CLIP	6
22	6R5-41237-00	JOINT, link	1	51	90467-11M08	CLIP	1
23	6H4-21707-04	OIL TANK COMP.	1	52	6H4-85720-30	OIL LEVEL GAUGE ASSY	1
24	90445-11M17	HOSE	1	53	6H4-84342-00	SEAT, emblem	1
25	90464-11M23	CLAMP	1	54	6H4-83589-00	GASKET	1
26	90467-11M08	CLIP	2	55	92503-06015	SCREW, pan head	1
27	6H4-21752-00	TUBE, filler 1	1	56	92990-06600	WASHER, plate	1
28	90465-13M30	CLAMP	1	57	90465-18147	CLAMP	1
29	6H1-2176M-01	HOOK	1	58	6H4-84301-01	PILDT LIGHT ASSY 1	1

Fig. 21 ALTERNATE 2 (40HE0/40HEP0/40HET0 MODEL)

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H4-42610-G3-EJ	TOP COWLING ASSY	1	10	6H4-42687-10	.EMBLEM, rear	1
2	6H4-42615-00	.SEAL	1	11	6H4-W0070-G0	.GRAPHIC SET	9
3	6H4-42651-00	.HOOK	1	12	6H4-13436-00	.MARK	1
4	6H4-42652-00	.HOOK	1	13	6H1-2177H-01	.DISK CAP 2	1
5	90266-04M01	.RIVET	4	14	6H3-21732-00	.SEAL 1	1
6	6H4-42613-10-EJ	.MOLDING, air duct	1	15	6H3-21735-00	.SEAL 2	1
7	97395-06016	.BOLT	4	16	6H1-42694-00	.BAND	1
8	92990-06600	.WASHER, plate	4	17	90338-05M12	.PLUG	1
9	6H4-42686-11	.EMBLEM, front	1	18	90183-05M06	.NUT, spring	1

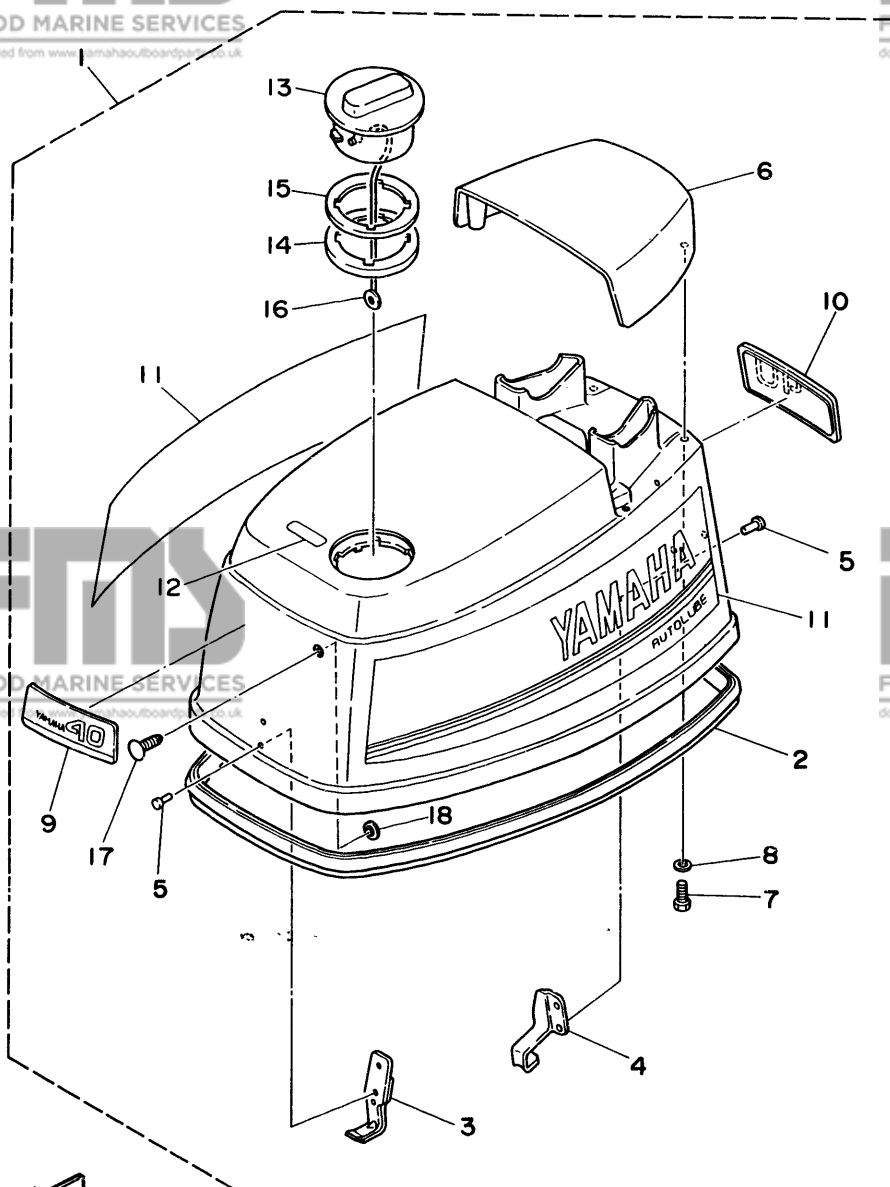

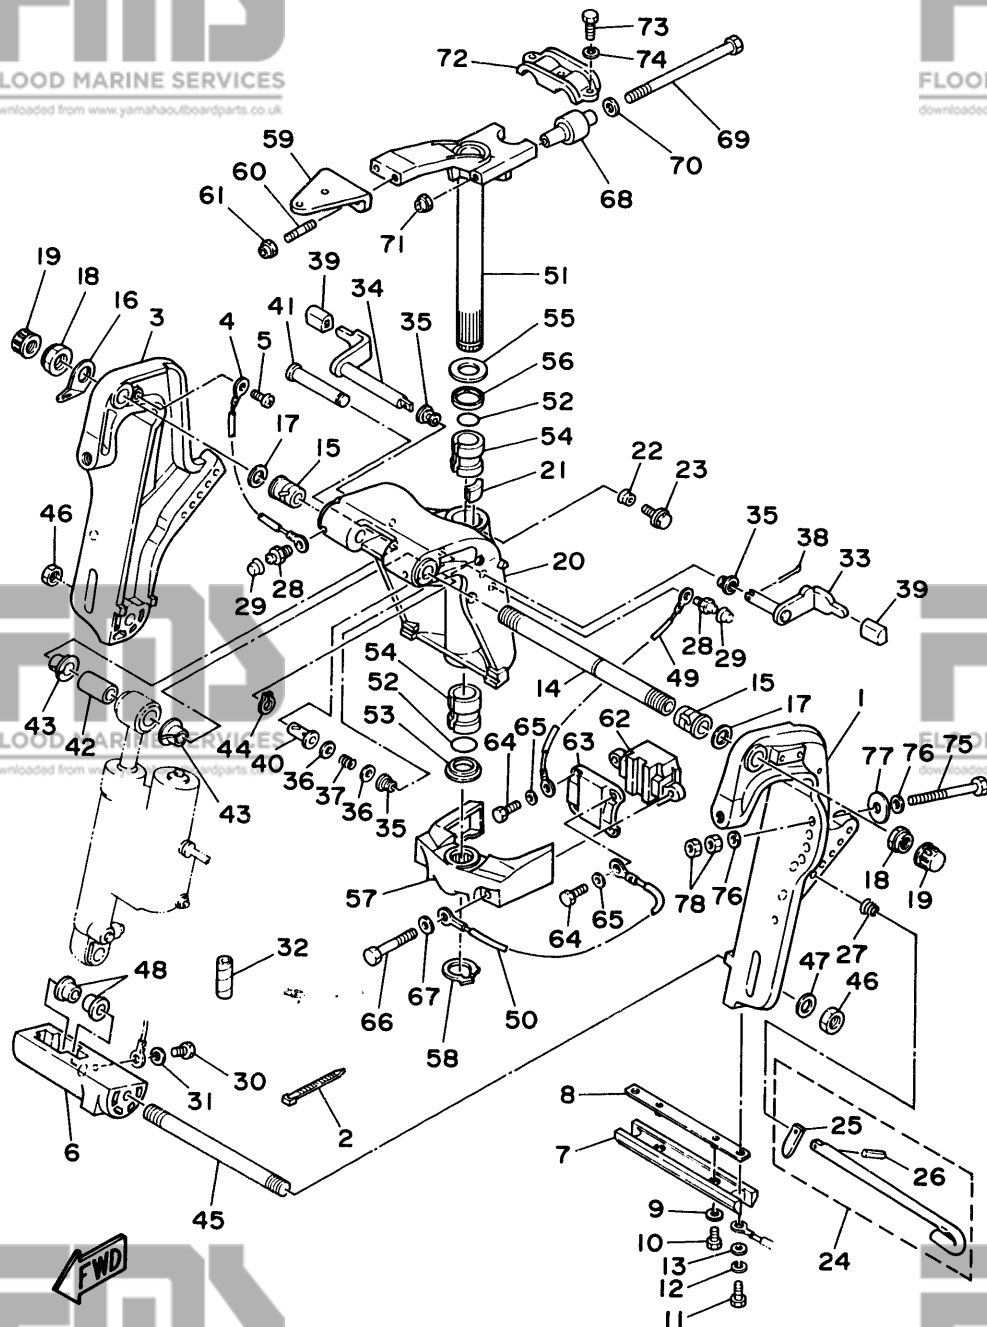


Fig. 22 ALTERNATE 3 (40HEPO MODEL)

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H5-43111-02-EJ	BRACKET, clamp	1	41	6H5-43126-02	PIN, upper shock mount	1
2	90465-13M11	CLAMP	1	42	90386-12M65	BUSH	1
3	6H5-43112-02-EJ	BRACKET, clamp	1	43	90386-12M64	BUSH	2
4	6E5-82148-00	WIRE, lead 4	1	44	93410-12M08	CIRCLIP	1
5	97895-06008	SCREW, pan head	1	45	90116-18M21	BOLT, stud	1
6	6H5-43128-01-EJ	SPACER, clamp bracket	1	46	90170-18M10	NUT	2
7	6H1-45251-02	ANODE	1	47	92990-18600	WASHER	1
8	6H1-44526-00	PLATE	1	48	90386-18M44	BUSH	2
9	90201-06M31	WASHER, plate	2	49	6H5-82127-00	WIRE, lead 2	1
10	97395-06012	BOLT	2	50	6H5-82149-00	WIRE, lead 3	1
11	97395-06016	BOLT	2	51	6H4-42510-01-EJ	STEERING BRACKET ASSY	1
12	92990-06100	WASHER, spring	2	52	93210-29M94	O-RING	2
13	92990-06600	WASHER, plate	2	53	90386-30M60	BUSH	1
14	6J8-43131-01	BOLT, clamp bracket	1	54	90386-30M77	BUSH	2
15	90386-22M15	BUSH	2	55	90201-30M00	WASHER, plate	1
16	6J8-43113-01	PLATE, clamp bracket	1	56	90386-30M78	BUSH	1
17	90201-22428	WASHER, plate	2	57	6H4-44551-01-EJ	HOUSING, lower mount rubber	1
18	90185-22043	NUT, self-locking	2	58	93410-28M06	CIRCLIP	1
19	663-43145-00	CAP, clamp bracket	2	59	6H4-48511-50-EJ	HOOK, steering	1
20	6H5-43311-03-EJ	BRACKET, swivel	1	60	90116-10175	BOLT, stud	2
21	6J8-42528-00	PLATE, friction	1	61	90185-10051	NUT, self-locking	2
22	689-43373-01	SEAL, damper	1	62	6H4-44557-00	MOUNT DAMPER, lower front (Short)	1 UR
23	90105-06M18	BOLT, washer based	1		6H4-44557-10	MOUNT DAMPER, lower front (Long)	1 UR
24	676-43160-02	TILT ROD ASSY	1	63	6H4-44553-01	COVER, lower mount	1
25	676-43165-00	PLATE, tilt lock	1	64	97395-08025	BOLT	4
26	91690-30012	PIN, spring	1	65	92990-08600	WASHER, plate	4
27	90502-10M04	SPRING, conical	1	66	97395-10060	BOLT	2
28	93700-06004	NIPPLE, grease	3	67	92990-10600	WASHER, plate	2
29	663-45119-00	CAP, grease nipple	3	68	6H4-44514-00	MOUNT DAMPER, upper side	2
30	97395-06010	BOLT	1	69	90101-08M86	BOLT	2
31	92990-06600	WASHER, plate	1	70	90201-09425	WASHER, plate	2
32	90446-10M01	HOSE	2	71	90185-08045	NUT, self-locking	2
33	6H5-43181-01	LEVER, tilt stop	1	72	6H4-44511-00-94	COVER, upper mount	1
34	6H5-43185-01	LEVER, tilt stop	1	73	97090-08035	BOLT	3
35	90386-10M16	BUSH	3	74	92990-08100	WASHER, spring	3
36	92990-10600	WASHER, plate	2	75	90101-12M65	BOLT	4
37	90501-10M21	SPRING, compression	1	76	92990-12200	WASHER, plain	8
38	91490-30030	PIN, cotter	1	77	90201-12426	WASHER, plate	4
39	663-43318-00	COVER	2	78	95380-12600	NUT	8
40	90386-10M19	BUSH	1				

Fig. 23 ALTERNATE 4 (40HETO MODEL)

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	697-43111-04-EJ	BRACKET, clamp	1	37	90201-30M00	WASHER, plate	1
2	697-43112-03-EJ	BRACKET, clamp	1	38	90386-30M78	BUSH	1
3	6H1-45251-02	ANODE	1	39	90386-30M77	BUSH	2
4	6H1-44526-00	PLATE	1	40	93210-29M94	O-RING	2
5	90201-06M31	WASHER, plate	2	41	90386-30M60	BUSH	1
6	97395-06012	BOLT	2	42	6H4-44551-01-EJ	HOUSING, lower mount rubber	1
7	97395-06016	BOLT	2	43	93410-28M06	CIRCLIP	1
8	92990-06100	WASHER, spring	2	44	6H5-48511-50-EJ	HOOK, steering	1
9	92990-06600	WASHER, plate	2	45	90116-10175	BOLT, stud	2
10	6H1-82148-00	WIRE, lead 4	1	46	90185-10051	NUT, self-locking	2
11	97395-06010	BOLT	1	47	6H4-44557-00	MOUNT DAMPER, lower front (Short)	1 UR
12	92990-06600	WASHER, plate	1		6H4-44557-10	MOUNT DAMPER, lower front (Long)	1 UR
13	697-43311-03-EJ	BRACKET, swivel	1	48	6H4-44553-01	COVER, lower mount	1
14	93700-06004	NIPPLE, grease	3	49	97395-08025	BOLT	4
15	663-45119-00	CAP, grease nipple	3	50	92990-08600	WASHER, plate	4
16	688-43131-03	BOLT, clamp bracket	1	51	97395-10060	BOLT	2
17	90386-22M15	BUSH	2	52	92990-10600	WASHER, plate	2
18	90201-22M67	WASHER, plate	2	53	6H5-82117-00	WIRE, lead	1
19	90185-22043	NUT, self-locking	1	54	6H5-82149-00	WIRE, lead 3	1
20	663-43145-00	CAP, clamp bracket	2	55	6H4-44514-00	MOUNT DAMPER, upper side	2
21	688-43181-03	LEVER, tilt stop	1	56	90101-08M86	BOLT	2
22	688-43185-03	LEVER, tilt stop	1	57	90201-09425	WASHER, plate	2
23	90386-10M16	BUSH	4	58	90185-08045	NUT, self-locking	2
24	92990-10600	WASHER, plate	1	59	6H4-44511-00-94	COVER, upper mount	1
25	90501-10M21	SPRING, compression	1	60	97090-08035	BOLT	3
26	91490-30030	PIN, cotter	2	61	92990-08100	WASHER, spring	3
27	663-43318-00	COVER	2	62	6E5-82148-00	WIRE, lead 4	1
28	90387-10M38	COLLAR	1	63	92580-06012	SCREW, pan head	1
29	697-43160-00	TILT ROD ASSY	1	64	97395-10045	BOLT	6
30	688-43165-00	PLATE, tilt lock	1	65	92990-10100	WASHER, spring	6
31	91690-30012	PIN, spring	1	66	90502-20M03	SPRING, conical	1
32	6E5-43126-01	PIN, upper shock mount	1	67	90101-12M65	BOLT	4
33	90386-18M63	BUSH	2	68	92995-12200	WASHER	8
34	93410-18M02	CIRCLIP	1	69	90201-12426	WASHER, plate	4
35	90386-18M35	BUSH	2	70	95380-12600	NUT	8
36	6H4-42510-01-EJ	STEERING BRACKET ASSY	1				


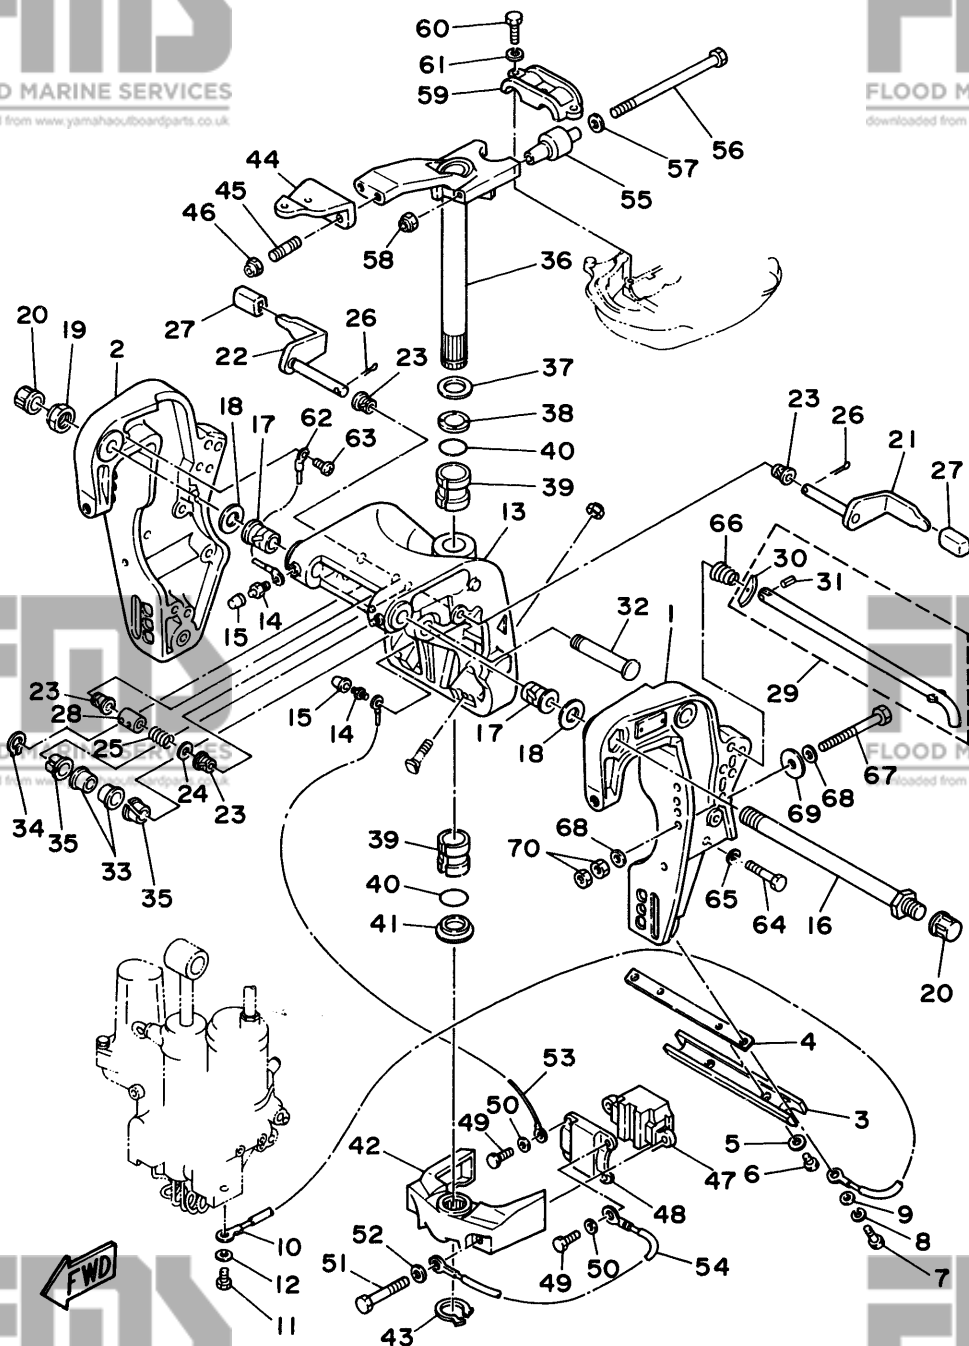


Fig. 24 ALTERNATE 5 (40HETO MODEL)


Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	688-43376-01	BOLT, thrust receiver	2	7	92580-06016	SCREW, pan head	2
2	95780-08300	NUT, flange	2	8	6E5-82553-10	EXTENSION, wire lead	1
3	6Y5-83670-01	TRIM GAUGE	1	9	90464-15M08	CLAMP	1
4	6Y5-83518-00	.BULB, meter	1	10	90465-11M10	CLAMP	1
5	688-83664-00	.DAMPER	1	11	90465-08028	CLAMP	1
6	6E5-83672-01	TRIM SENDER	1				

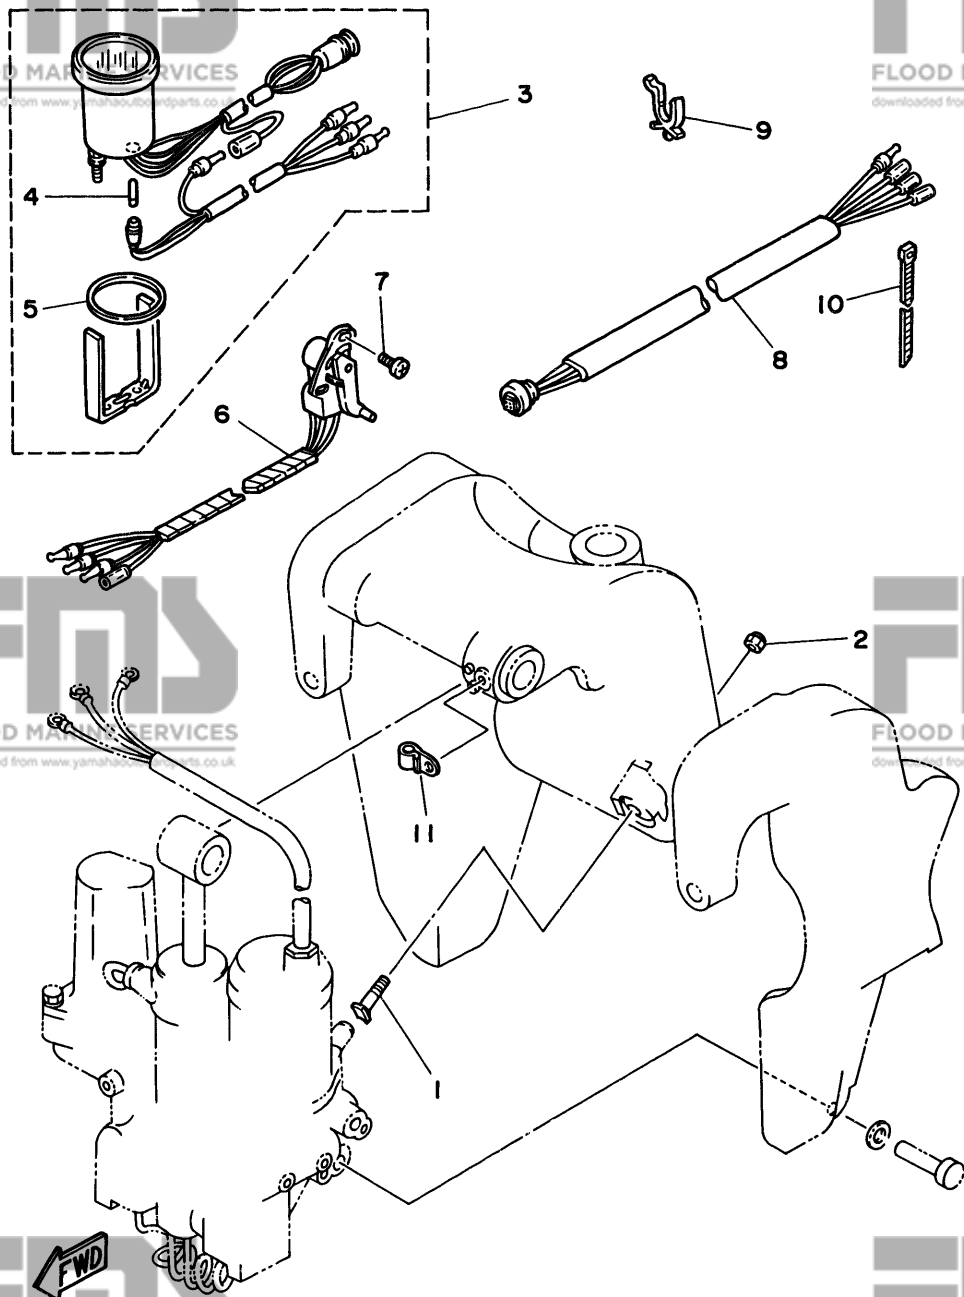

D5

Fig. 25 ALTERNATE 6 (40HETO MODEL)

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H3-43800-05-EJ	POWER TRIM & TILT ASSY	1	36	6E5-43834-01	.PIPE	1
2	688-43880-11	.MOTOR ASSY	1	37	6E5-43835-00	.PIPE	1
3	6E5-43804-00	.STATOR ASSY	1	38	6E5-43851-01	.SEAT, relief valve	1
4	6E5-43805-00	.ARMATURE ASSY	1	39	6E5-43844-02	.PIN, valve support	1
5	93210-71M76	.O-RING	2	40	6E5-43858-00	.BALL	1
6	6E5-43884-00	.FRAME, commutator end	1	41	6E5-43856-00	.SPRING, down relief	1
7	6E5-43885-00	.GROMMET	1	42	6E5-43883-00	.O-RING	1
8	6E5-43886-00	.BOLT	1	43	6E5-43843-00	.SCREW, valve lock	1
9	6E5-43887-00	.BOLT, through	2	44	6H3-43855-00	.SPRING, up relief	1
10	90201-05M01	.WASHER, plate	2	45	6E5-43859-00	.PIN, valve support	1
11	688-43807-11	.WIRE SUB ASSY	1	46	6E5-43877-01	.BALL	1
12	697-4380E-01	.TILT CYLINDER ASSY	1	47	6E5-43895-00	.SEAT, relief valve	1
13	6E5-43861-00	.O-RING	1	48	6E5-43896-00	.O-RING	1
14	6E5-43862-00	.O-RING	2	49	6E5-43816-10	.FILTER 1	1
15	6E5-43872-00	.RING, back up	2	50	6E5-43817-10	.FILTER 2	1
16	6E5-43814-01	.PISTON, free	1	51	90109-06M21	.BOLT	1
17	6E5-43829-00	.PLUG, reservoir	1	52	6E5-43897-00	.O-RING	1
18	6E5-43863-00	.O-RING	1	53	6E5-43878-01	.BOLT, socket	2
19	6E5-43818-00	.PIN, lower shock mount	1	54	6E5-43888-01	.BOLT, socket	1
20	90386-18M14	.BUSH	2	55	6E5-43831-00	.CONNECTOR, shaft	1
21	90119-06M42	.BOLT, with washer	6	56	6E5-43830-00	.GEAR PUMP ASSY	1
22	6E5-43820-03	.PISTON SUB ASSY	2	57	93210-07M78	.O-RING	2
23	6E5-43864-00	.O-RING	1	58	6E5-43847-00	.SEAT, manual valve	2
24	6E5-43874-01	.RING, back up	1	59	6E5-43854-01	.SPRING, manual release	1
25	6E5-43821-01	.SCREW, trim cylinder end	2	60	6E5-4382A-00	.ADAPTOR 1	1
26	6E5-43822-01	.SEAL, trim dust	2	61	93210-10M74	.O-RING	1
27	6E5-43862-00	.O-RING	2	62	6E5-43845-01	.SCREW, manual release	1
28	6E5-43865-00	.O-RING	2	63	93210-18M75	.O-RING	1
29	6E5-43802-00	.VALVE SUB ASSY	2	64	6E5-43875-00	.RING, snap	1
30	6E5-43866-00	.O-RING	1	65	90201-05M00	.WASHER, plate	3
31	6E5-43867-00	.O-RING	1	66	6E5-4381A-00	.SHAFT	1
32	6E5-43841-01	.PISTON, shuttle	1	67	6E5-43849-01	.PIN, valve support	1
33	6E5-43868-00	.O-RING	1	68	6E5-43824-01	.SPRING, compression	1
34	6E5-43869-00	.O-RING	2	69	93210-06M77	.O-RING	1
35	6E5-43833-01	.PIPE	1	70	6E5-43842-00	.SCREW, valve seat	1

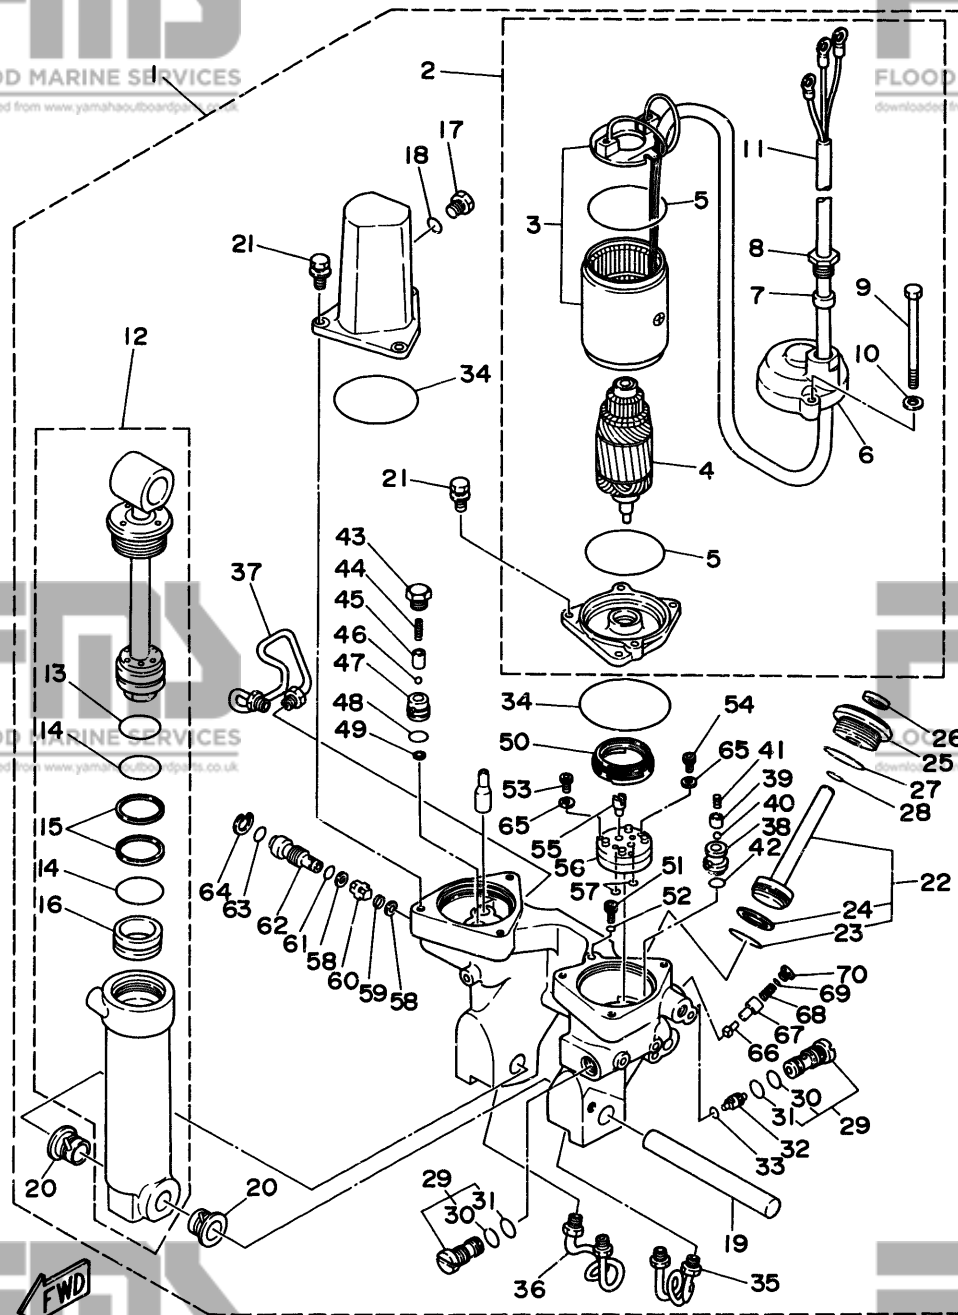

FWD

Fig. 26 ALTERNATE 7 (40HEPO MODEL)



Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H5-43840-02-EJ	POWER TILT ASSY	1	28	6H5-4385A-00	.PISTON, tilt	1
2	6H5-43841-00	.PISTON, shuttle	1	29	6H5-43801-00	.ROD	1
3	6H5-43861-00	.O-RING	1	30	6H5-43858-00	.BALL	5
4	6H5-43891-00	.BRUSH	2	31	6H5-43857-00	.SPRING, absorber valve	5
5	6H5-43862-00	.O-RING	2	32	6H5-43893-00	.WASHER	1
6	6H5-43849-00	.PIN, valve support	2	33	6H5-43814-00	.PISTON, free	1
7	6H5-43853-00	.SPRING, main valve	1	34	6H5-43883-00	.O-RING	2
8	6H5-4382E-00	.ADAPTOR 2	2	35	6H5-43871-00	.RING, back up	2
9	6H5-43863-00	.O-RING	2	36	6H5-4381E-00	.BRACKET	1
10	6H5-43846-02	.SCREW, manual valve seat	1	37	6H5-43896-00	.O-RING	1
11	6H5-43864-00	.O-RING	1	38	6H5-43873-00	.RING, back up	1
12	6H5-43865-00	.O-RING	1	39	6H5-4381A-00	.SHAFT	5
13	6H5-43875-00	.RING, snap	1	40	6H5-43812-00	.SEAL, dust	1
14	6H5-43866-00	.O-RING	2	41	6H5-43897-00	.O-RING	1
15	6H5-43837-00	.GEAR, driven	1	42	6H5-43880-00	.MOTOR ASSY	1
16	6H5-43836-00	.GEAR, drive	1	43	6H5-43826-00	.PLUG, taper screw	3
17	6H5-43858-10	.BALL	5	44	6H5-43811-00	.SCREW, cylinder end	2
18	6H5-43856-00	.SPRING, down relief	2	45	6H5-4381F-00	.BRACKET	1
19	6H5-43844-00	.PIN, valve support	2	46	6H5-43887-00	.BOLT, through	4
20	6H5-43867-00	.O-RING	1	47	6H5-43886-00	.BOLT	3
21	6H5-43868-00	.O-RING	1	48	6H5-43872-00	.RING, back up	3
22	6H5-43853-10	.SPRING, main valve	1	49	91316-06020	.BOLT	4
23	6H5-43859-00	.PIN, valve support	6	50	92990-06100	.WASHER, spring	12
24	6H5-43855-01	.SPRING, up relief	1	51	95600-12100	.NUT, u	1
25	6H5-4386F-00	.RING, straight	1	52	6G1-82127-00	.WIRE, lead 2	1
26	6H5-43829-00	.PLUG, reservoir	1	53	6H5-4388A-00	.BOLT	1
27	6H5-43865-00	.O-RING	1				

FWD

D7

Fig. 27 ALTERNATE 8 (40HE0/40HEP0/40HET0 MODEL)

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H5-85550-00	ROTOR ASSY	1	10	98501-05012	.SCREW, pan head	6
2	6H5-85560-01	BASE ASSY	1	11	92901-05100	.WASHER, spring	6
3	6H4-15359-03-94	.HOUSING, oil seal	1	12	92901-05600	.WASHER, plate	6
4	6H5-85520-00	.COIL, charge	1	13	98501-06025	.SCREW, pan head	2
5	6H5-85533-01	.COIL, lighting	1	14	92990-06100	.WASHER, spring	2
6	6H5-85580-00	.COIL, pulser	1	15	98501-06030	.SCREW, pan head	4
7	6H5-85580-10	.COIL, pulser	1	16	92990-06100	.WASHER, spring	4
8	6H5-85580-20	.COIL, pulser	1	17	90464-03M15	.CLAMP	2
9	6H5-83354-00	.WIRE, earth lead 1	1	18	93102-23096	.OIL SEAL	1

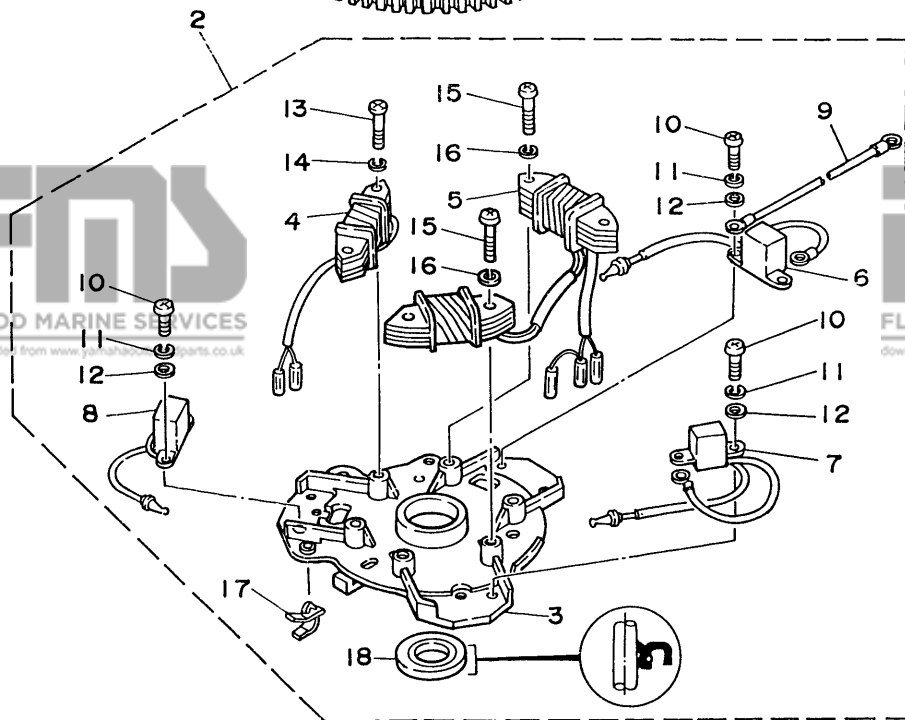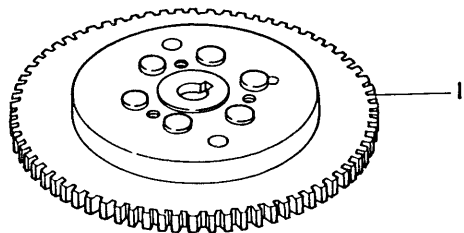




Fig. 28 ALTERNATE 9 (40HEO/40HEPO/40HETO MODEL)

Ref.No.	Parts	No.	Description	Q'ty	Ref.No.	Parts	No.	Description	Q'ty
1	6F5-81800-10		STARTING MOTOR ASSY	1	24	97895-06040		SCREW, pan head	1
2	689-81857-11		..RETAINER	1	25	97895-06035		SCREW, pan head	2
3	689-81807-12		..GEAR ASSY, starting motor	1	26	6J8-15723-E1		PULLEY, starter	1
4	6F5-81830-11		..FRONT BRACKET ASSY	1	27	6J8-81365-00		GASKET, hole cover	1
5	689-81847-11		..O-RING	2	28	97021-08014		BOLT	3
6	689-81809-11		..WASHER KIT	1	29	92990-08600		WASHER, plate	3
7	689-81850-11		..ARMATURE ASSY	1	30	6H4-81822-00-98		BRACKET, starting motor	1
8	689-81810-11		..STATOR ASSY	1	31	97313-06030		BOLT	4
9	689-81811-11		..BRUSH 1	1	32	92990-06600		WASHER, plate	4
10	689-81840-11		..BRUSH HOLDER ASSY	1	33	97313-08050		BOLT	1
11	689-81812-11		..BRUSH 2	1	34	92990-08600		WASHER, plate	1
12	689-81813-10		..SPRING, brush	2	35	95670-06640		BOLT, stud	1
13	689-81820-11		..REAR BRACKET ASSY	1	36	90179-06M12		NUT	1
14	689-81826-10		..BOLT	2	37	97313-06014		BOLT	2
15	90464-09M13		CLAMP	3	38	92990-06600		WASHER, plate	2
16	97313-08030		BOLT	2	39	90338-05M11		PLUG	1
17	92990-08600		WASHER, plate	2	40	6G1-81941-10		STARTER RELAY ASSY	1
18	97313-08016		BOLT	1	41	6H4-81952-00		HOLDER, relay	1
19	92990-08600		WASHER, plate	1	42	6H4-81945-00		PLATE, switch fitting	1
20	6H4-82117-00		WIRE, lead	1	43	90116-06M22		BOLT, stud	1
21	6H4-81337-01		COVER, flywheel	1	44	95380-06600		NUT	2
22	90387-06M65		COLLAR	3	45	92990-06600		WASHER, plate	1
23	90209-06M04		WASHER	3					

Fig. 29 ALTERNATE 10 (40HE0/40HEP0 MODEL)

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H4-82105-01	WIRE HARNESS	1	18	6H4-82590-22	WIRE HARNESS ASSY (40HEP0 Model)	1 UR
2	6G1-81970-61	RECTIFIER ASSY	1	19	6H5-81950-00	RELAY ASSY (40HEP0 Model)	1 UR
3	631-82151-00	FUSE	1	20	92990-06200	WASHER, plain (40HEP0 Model)	2
4	98503-05025	SCREW, pan head	1	21	97313-06025	BOLT (40HE0 Model)	2
5	92990-05600	WASHER, plate	1	22	92990-06600	WASHER, plate (40HEP0 Model)	2
6	90465-18147	CLAMP	1	23	90387-06M05	COLLAR (40HEP0 Model)	2
7	6H4-48531-10-94	BRACKET, remote control 1	1	24	6H5-81920-00	TERMINAL ASSY (40HEP0 Model)	1
8	6H4-48532-10-94	BRACKET, remote control 2	1	25	97013-06012	BOLT (40HEP0 Model)	1
9	6H4-42724-20	GROMMET	1	26	92990-06600	WASHER, plate (40HEP0 Model)	1
10	6H4-42725-00	GROMMET	1	27	90465-18147	CLAMP (40HEP0 Model)	1
11	676-42726-00	GROMMET	1	28	6E5-82582-00	COVER, wire harness (40HEP0 Model)	1
12	6H4-82554-00	STAY, neutral switch	1	29	6H4-82582-00	COVER, wire harness (40HEP0 Model)	1
13	6H4-44173-01	LEVER, shift control	1	30	90464-07M20	CLAMP (40HEP0 Model)	1
14	91690-30020	PIN, spring	1				
15	90464-15M27	CLAMP	1				
16	6H4-82589-00	PLATE	1				
17	97013-06012	BOLT	1				

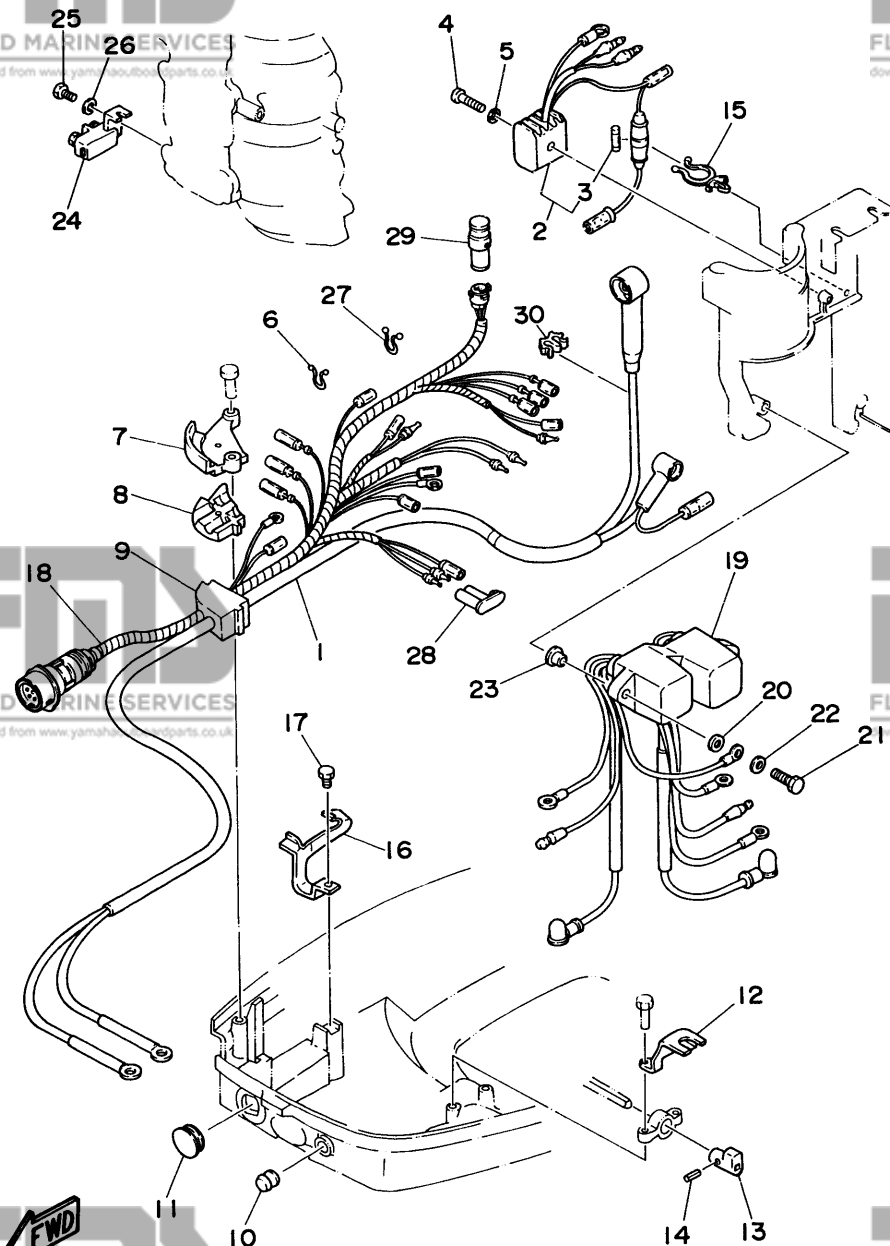


Fig. 30 ALTERNATE 11 (40HETO MODEL)

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H4-82105-01	WIRE HARNESS	1	17	6H4-87149-00	CONNECTOR	1
2	90464-07M20	CLAMP	1	18	6H5-82119-00	COVER, lead wire	2
3	6G1-81970-61	RECTIFIER ASSY	1	19	6E5-82119-00	COVER, lead wire	2
4	6G1-82151-00	.FUSE	1	20	6H1-82563-00	TRIM & TILT SWITCH ASSY	1
5	98503-05025	SCREW, pan head	1	21	6E5-82587-00	GASKET	1
6	92990-05600	WASHER, plate	1	22	6E5-83614-01	BRACKET	1
7	90465-18147	CLAMP	1	23	97313-06016	BOLT	2
8	6H4-82590-22	WIRE HARNESS ASSY	1	24	90464-07M05	CLAMP	1
9	6H4-82582-00	COVER, wire harness	1	25	97013-06012	BOLT	1
10	6H4-82588-00	PLATE	1	26	6H4-42725-00	GROMMET	1
11	6G1-81941-10	STARTER RELAY ASSY	2	27	676-42726-00	GROMMET	1
12	6H4-81952-00	HOLDER, relay	2	28	6H4-42724-20	GROMMET	1
13	6H4-81945-10	PLATE, switch fitting	1	29	6H4-82554-00	STAY, neutral switch	1
14	90116-06M22	BOLT, stud	1	30	6H4-44173-01	LEVER, shift control	1
15	95380-06600	NUT	2	31	91690-30020	PIN, spring	1
16	92990-06600	WASHER, plate	1	32	90464-15M27	CLAMP	1

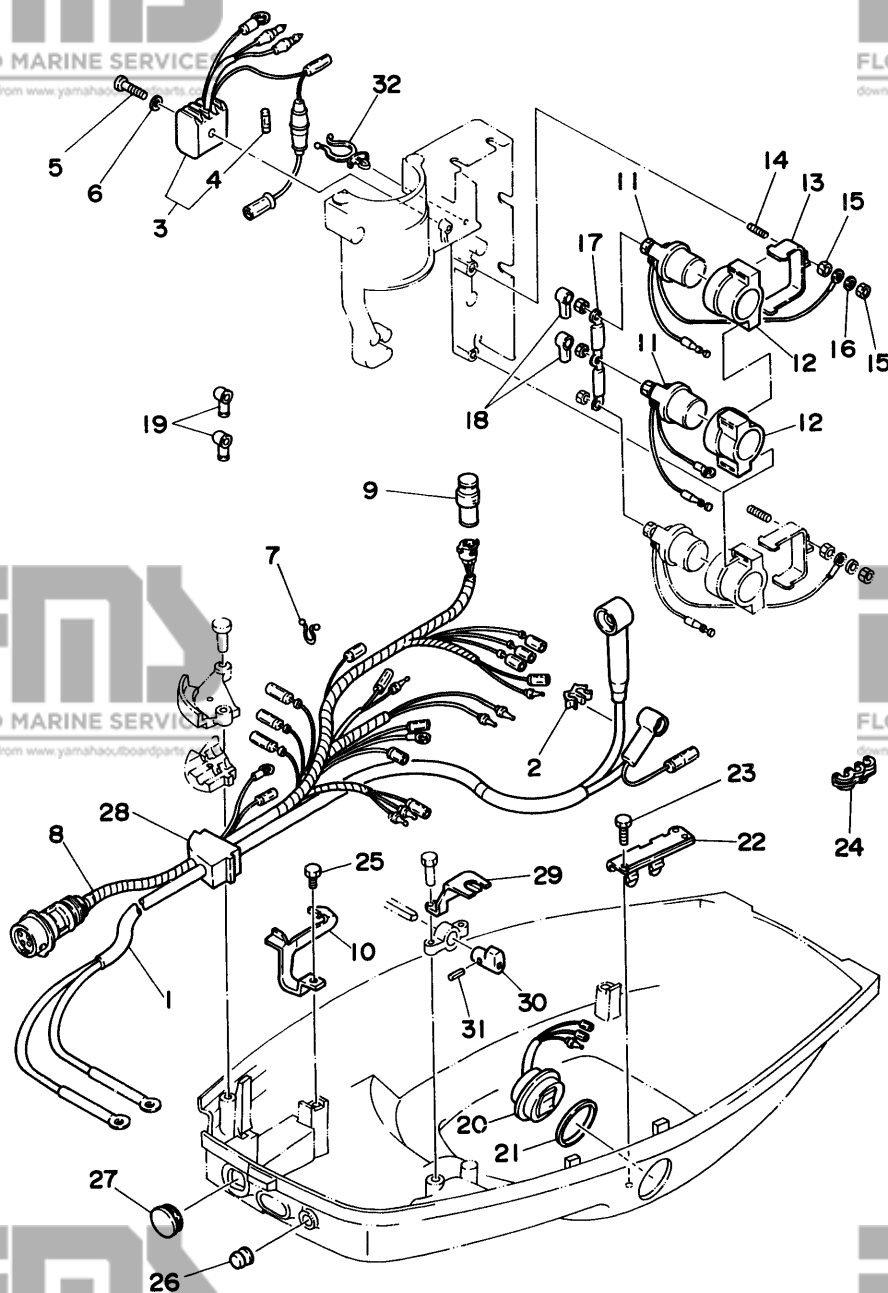
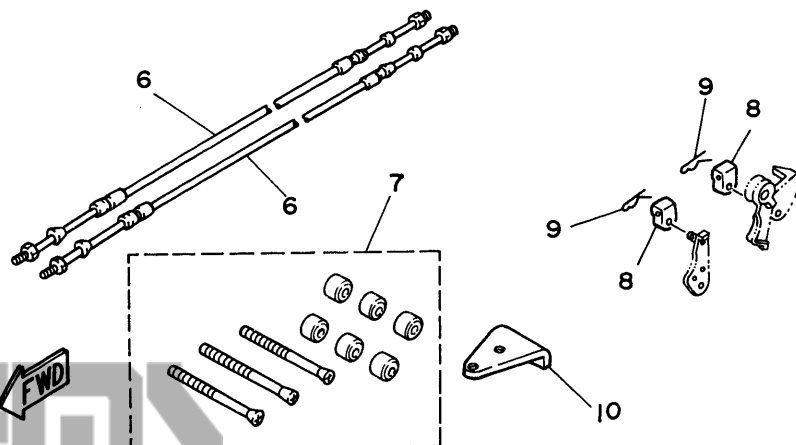
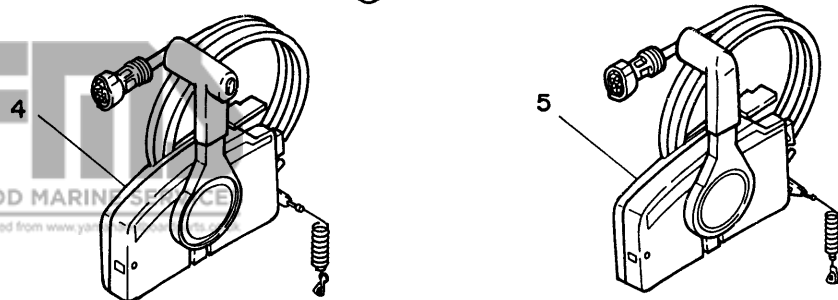
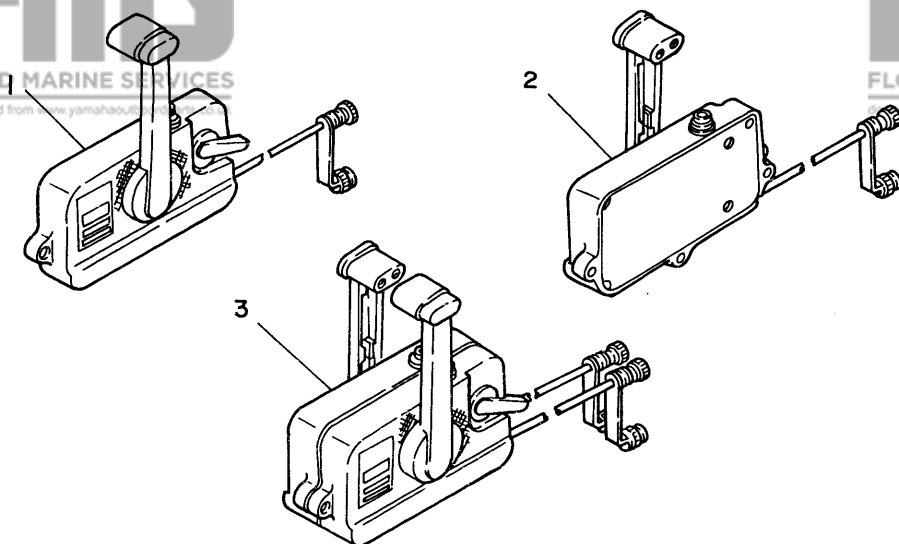


Fig. 31 REMOTE CONTROL

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
*1	701-48101-10	REMOTE CONTROL ASSY (Right)	1 UR	6	701-48320-30	CABLE, remote control (L:14F)	2 UR
*2	701-48102-10	REMOTE CONTROL ASSY (Left)	1 UR	701-48320-50	CABLE, remote control (L:15F)	2 UR	
*3	701-48110-22	REMOTE CONTROL ASSY (Twin)	1 UR	701-48320-60	CABLE, remote control (L:16F)	2 UR	
*4	703-48210-12	REMOTE CONTROL ASSY (10P) (Single)	1 UR	701-48320-80	CABLE, remote control (L:17F)	2 UR	
*	703-48250-12	REMOTE CONTROL ASSY (10P) (With Trim & Tilt Switch)	1 UR	701-48320-90	CABLE, remote control (L:18F)	2 UR	
*5	703-48280-12	REMOTE CONTROL ASSY (10P) (Twin Lever)	1 UR	701-48320-40	CABLE, remote control (L:19F)	2 UR	
6	701-48310-10	CABLE, remote control (L:6F)	2 UR	701-48320-70	CABLE, remote control (L:20F)	2 UR	
	701-48310-20	CABLE, remote control (L:7F)	2 UR	701-48350-00	CABLE, remote control (L:21F)	2 UR	
	701-48310-40	CABLE, remote control (L:8F)	2 UR	701-48350-10	CABLE, remote control (L:22F)	2 UR	
	701-48310-60	CABLE, remote control (L:9F)	2 UR	701-48350-20	CABLE, remote control (L:23F)	2 UR	
	701-48310-80	CABLE, remote control (L:10F)	2 UR	7	703-48290-01	TWIN ATTACHMENT	1
	701-48310-90	CABLE, remote control (L:11F)	2 UR	8	6H4-48344-00	CABLE END, remote control	2
	701-48320-00	CABLE, remote control (L:12F)	2 UR	9	90468-18008	CLIP	2
	701-48320-20	CABLE, remote control (L:13F)	2 UR	10	6H4-48511-50-EJ	HOOK, steering (Steering Guide Type)	1 UR
					688-48511-00-EJ	HOOK, steering (Ball Post Type)	1 UR

* See Fig. 33 and 34 for detail service parts.



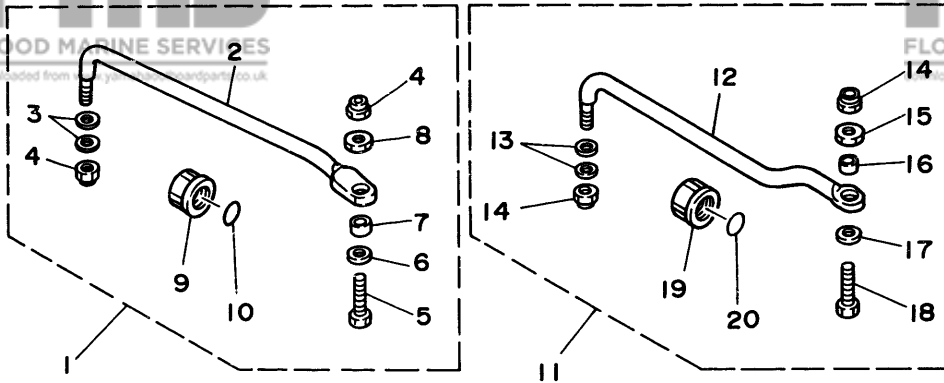


Fig. 32 STEERING GUIDE ATTACHMENT

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	689-61350-02	STEERING GUIDE ATTACHMENT KIT	1 UR	17	90201-10M63	.WASHER	1
2	689-61351-01	.ROD, steering link	1	18	90101-09M66	.BOLT	1
3	90201-10M20	.WASHER, plate	2	19	6E5-43145-00	.CAP, clamp bracket	1
4	90185-09M01	.NUT, self-locking	2	20	93210-16275	.O-RING	1
5	90101-09M66	.BOLT	1	21	6E5-61301-01	TWIN KIT (L:600-800mm)	1 UR
6	90201-10M63	.WASHER, plate	1		688-61301-01	TWIN KIT (L:430-630mm)	1 UR
7	90387-10M42	.COLLAR	1	22	90185-09M01	.NUT, self-locking	2
8	90170-09M03	.NUT	1	23	90201-10M76	.WASHER, plate	2
9	6E5-43145-00	.CAP, clamp bracket	1	24	90101-09M70	.BOLT	2
10	93210-16275	.O-RING	1	25	90170-09M05	.NUT	2
11	688-61350-10	STEERING GUIDE ATTACHMENT KIT (40HETO Model)	1 UR	26	6E5-61303-00	.STEERING EYE COMP.	2
12	688-61351-10	.ROD, steering link	1	27	6E5-61311-11	.TIE BAR (L:600-800mm)	1 UR
13	90201-10M20	.WASHER	2		688-61311-11	.TIE BAR (L:430-630mm)	1 UR
14	90185-09M01	.NUT, self-locking	2	28	95380-14700	.NUT	2
15	90170-09M03	.NUT	1	29	6E5-61315-00	.TIE BAR	1
16	90387-10M42	.COLLAR	1	30	6E5-61313-00	.ADJUSTER	1
				31	90170-14M06	.NUT	1

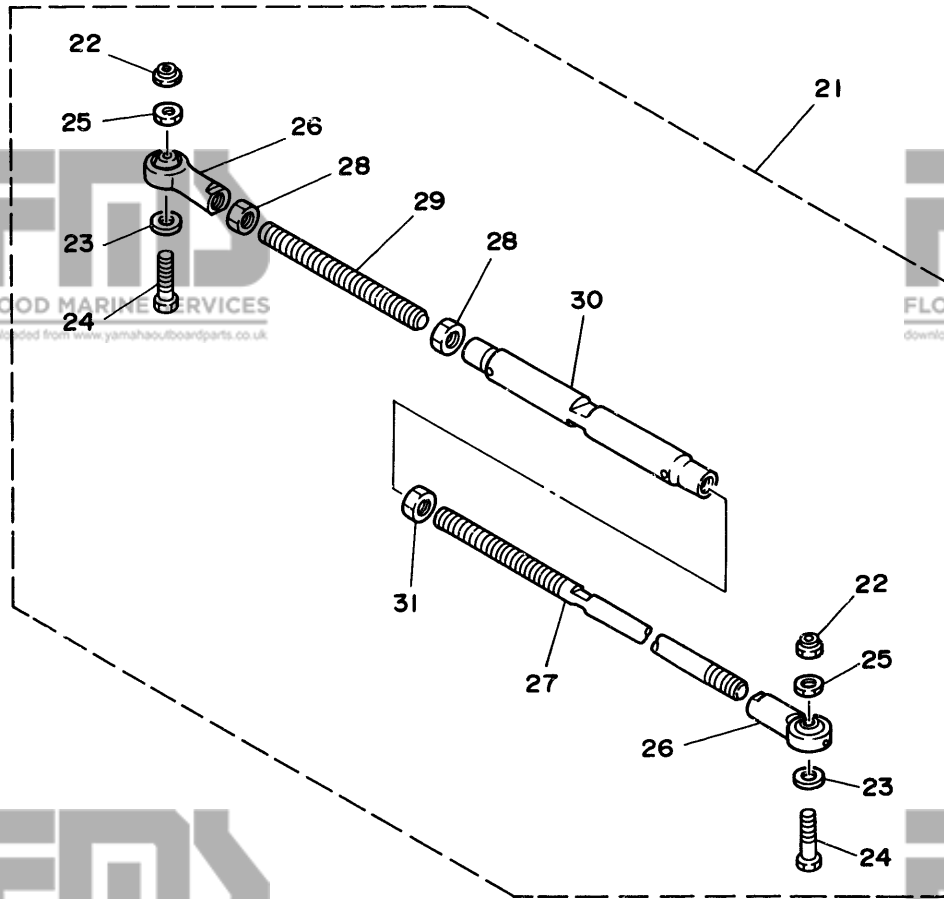


Fig. 33 REMOTE CONTROL ASSY 1

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	701-48101-10	REMOTE CONTROL ASSY (Right)	1 UR	24	701-48246-00	.SPACER	2
	701-48102-10	REMOTE CONTROL ASSY (Left)	1 UR	25	92990-06300	.WASHER, internal tooth	1
	701-48110-22	REMOTE CONTROL ASSY (Twin)	1 UR	26	701-48229-00	.GRIP, control lever	1
2	701-48235-00	.BUSHING	1	27	701-48222-00	.GRIP, control lever	1
3	701-48197-10	.WASHER, wave	1	28	701-48282-00	.SCREW	2
4	701-48252-00	.ROLLER, cam	1	29	701-48239-00	.SET PIN, plate	1
5	701-48234-00	.BUSHING 1	1	30	701-48266-00	.SPACER	1
6	701-48221-00	.LEVER, control	1	31	701-48232-00	.GEAR	1
7	701-48196-11	.WASHER, wave	1	32	701-48189-11	.RETAINER	1
8	701-48236-00	.ROLLER, detent	1	33	98580-05010	.SCREW, pan head	2
9	702-48237-00	.ADAPTOR	1	34	701-48153-12	.SHAFT, free accel.	1
10	702-48238-00	.SPRING, detent	1	35	701-48271-00	.ARM, shift (Right)	1 UR
11	701-48249-00	.ADAPTOR, spring	1		701-48271-10	.ARM, shift (Left)	1 UR
12	701-48248-00	.ROLLER, free accel.	1	36	93430-06024	.CIRCLIP	3
13	701-48152-11	.KNOB, free accel. (Right)	1 UR	37	703-48345-01	.CABLE END, remote control 2	2
	701-48152-20	.KNOB, free accel. (Left)	1 UR	38	701-48261-00	.ARM, throttle (Right)	1 UR
14	701-48243-00	.BUSHING	1		701-48261-10	.ARM, throttle (Left)	1 UR
15	701-48198-10	.WASHER, wave	1	39	701-48358-00	.ANCHOR, cable	1
16	701-48281-00	.SCREW (For Single)	3	40	701-82550-50	.ENGINE STOP SWITCH ASSY	1
17	98580-05010	.SCREW	4	41	701-48126-00	.GRAPHIC	1
18	701-48268-00	.SPACER	1	42	701-48283-00	.SCREW	1
19	701-48213-00	.PLATE	1	43	701-82594-00	.CLAMP	1
20	92780-06025	.SCREW, flat head	2	44	701-48291-10	.ATTACHMENT (For Twin)	1
21	701-48255-00	.COLLAR	1	45	701-48287-00	.WASHER (For Single)	3
22	97395-06018	.BOLT	2	46	95380-06FJ0	.NUT (For Single)	3
23	702-48288-00	.WASHER, plain	1	47	701-48280-00	NEUTRAL LOCK KIT	1 AP

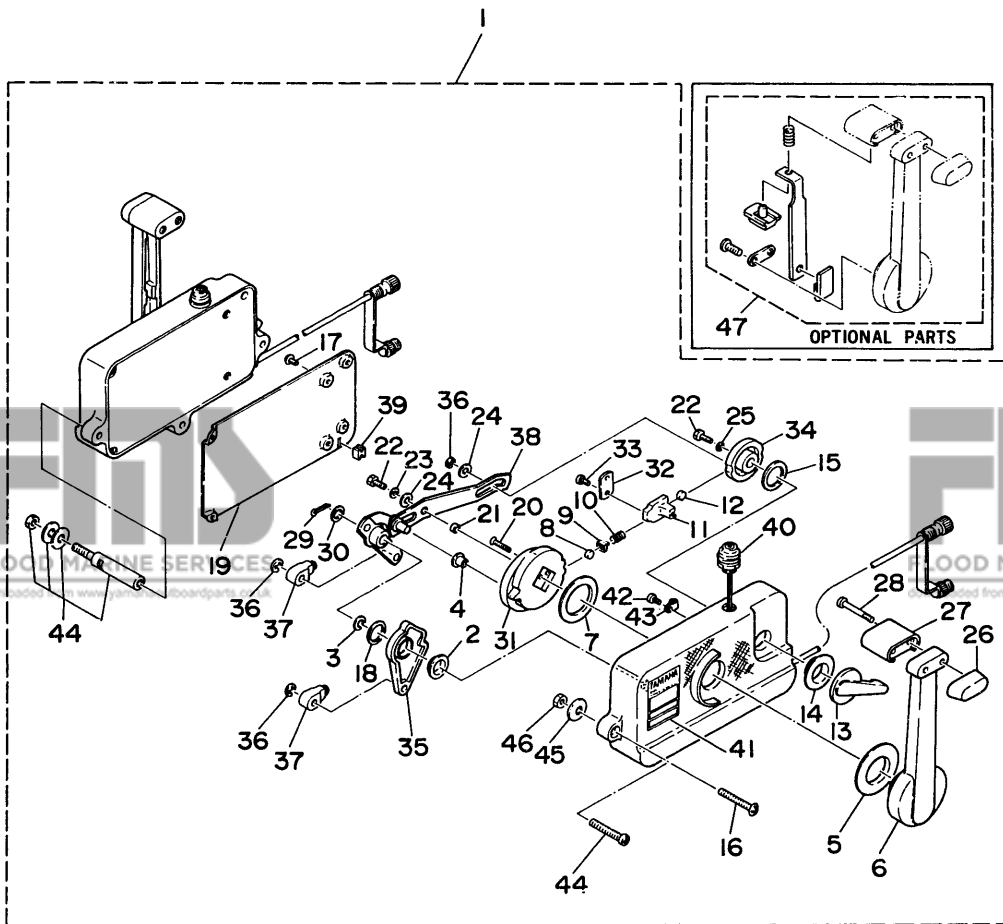


Fig. 34 REMOTE CONTROL ASSY 2

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	703-48210-12	REMOTE CONTROL ASSY (10P) (Single)	1 UR	30	703-48222-10	.GRIP, control lever (Twin)	1 UR
	703-48250-12	REMOTE CONTROL ASSY (10P) (With Trim & Tilt Switch)	1 UR	31	703-48223-00	.LOCK, neutral	1
	703-48280-12	REMOTE CONTROL ASSY (10P) (Twin Lever)	1 UR	32	703-48225-00	.COVER	1
2	703-48261-10	.ARM, throttle	1	33	703-48219-00	.COVER, lead	1
3	703-48153-00	.SHAFT, free accel.	1	34	98780-05012	.SCREW, flat head	2
4	703-48235-00	.BUSHING	1	35	98780-05016	.SCREW, flat head	7
5	703-48273-00	.BUSHING	2	36	97395-08030	.BOLT	1
6	703-48197-00	.WASHER, wave	1	37	92990-08600	.WASHER, plate	1
7	703-48268-00	.SPACER	1	38	98580-04010	.SCREW, pan head	3
8	703-48263-00	.BUSHING	1	39	98580-04006	.SCREW, pan head	2
9	703-48264-00	.THROTTLE, friction	1	40	98580-05010	.SCREW, pan head	1
10	95380-05600	.NUT	1	41	98580-03015	.SCREW, pan head	2
11	97380-05025	.BOLT	1	42	92680-06090	.SCREW, oval head	3
12	703-48265-00	.SHAFT, friction	1	43	95380-06600	.NUT	3
13	93430-06024	.CIRCLIP	3	44	703-48293-10	.SPACER, remote control (Single)	1 UR
14	703-48245-00	.PLATE, lock	1		703-48293-00	.SPACER, remote control (Twin)	3 UR
15	703-48252-00	.ROLLER, cam	1	45	701-48287-00	.WASHER	3
16	701-48248-00	.ROLLER, free accel.	1	46	703-48215-00	.GRAPHIC	1
17	703-48198-00	.WASHER, wave	1	47	702-48217-00	.MARK	1
18	703-48243-00	.BUSHING	1	48	703-82510-10	.MAIN SWITCH ASSY	1
19	703-48236-00	.BUSHING 1	2	49	703-82574-00	.SWITCH, choke	1
20	703-48189-00	.RETAINER	1	50	703-82531-00	.WIRE, lead	1
21	703-48234-00	.ROLLER, detent	1	51	688-82575-01	.ENGINE STOP SWITCH ASSY	1
22	703-48345-01	.CABLE END, remote control 2	2	52	682-82556-00	.STOPPER	1
23	703-48358-00	.ANCHOR, cable	1	53	688-8258A-20	.EXTENSION, wire harness (10P) (L:5m)	1
24	703-48244-00	.SPRING, free accel.	1	54	703-82540-00	.NEUTRAL SWITCH ASSY	1
25	703-48238-00	.SPRING, detent	5	55	703-83383-01	.BUZZER	1
26	703-48246-00	.SPACER	1	56	703-48284-00	.GROMMET	1
27	703-48227-00	.SPRING, neutral lock	1	57	90465-13169	.CLAMP	2
28	703-82594-00	.CLAMP	1	58	80L-26397-00	.BAND	1
29	703-48226-00	.PLATE, stopper	1	59	703-82563-01	.TRIM & TILT SWITCH ASSY	1 UR
30	703-48222-00	.GRIP, control lever (Single)	1 UR		703-48224-00	.COVER, control lever (Without Trim & Tilt Switch)	1 UR
				60	703-48221-00	.LEVER, control	1

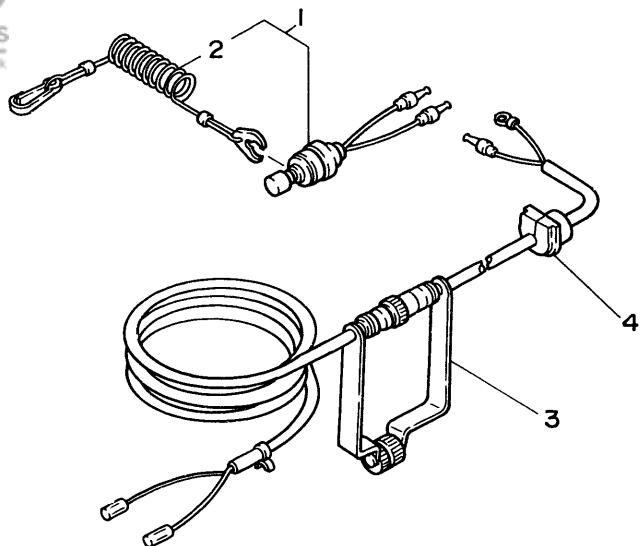
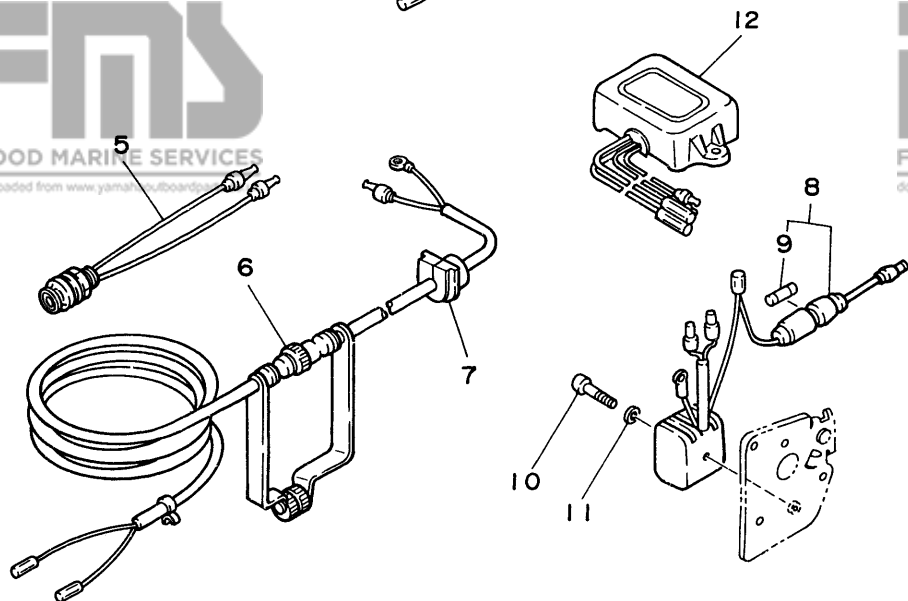


Fig. 35 OPTIONAL PARTS 1

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	689-82575-12	ENGINE STOP SWITCH ASSY	1	7	676-42726-00	GROMMET	1
2	682-82556-00	STOPPER	1	8	661-81970-61	RECTIFIER ASSY	1
3	6A0-82553-20	EXTENSION, wire lead	1	9	661-82151-00	FUSE	1
4	676-42726-00	GROMMET	1	10	98503-05025	SCREW, pan head	1
5	689-82550-11	ENGINE STOP SWITCH ASSY	1	11	92990-05600	WASHER, plate	1
6	6A0-82553-20	EXTENSION, wire lead	1	12	663-81910-10	VOLTAGE REGULATOR ASSY	1



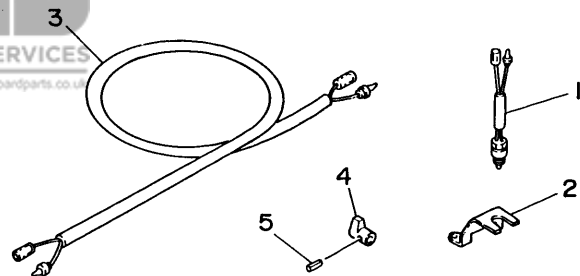


Fig. 36 OPTIONAL PARTS 2

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H3-82540-00	NEUTRAL SWITCH ASSY	1	13	98303-04008	.SCREW, cylinder head	1
2	6H4-82554-00	STAY, neutral switch	1	14	92901-04100	.WASHER, spring	1
3	6H4-82553-00	EXTENSION, wire lead	1	15	90149-05M05	SCREW	4
4	6H4-44173-00	LEVER, shift control	1	16	95380-05600	NUT	4
5	91690-30020	PIN, spring	1	17	92990-05100	WASHER, spring	4
6	689-82570-15	PANEL SWITCH ASSY	1	18	92990-05600	WASHER, plate	4
7	689-82510-00	.MAIN SWITCH ASSY	1	19	688-8258A-5C	EXTENSION, wire harness (10P) (L:5m)	1
8	703-82574-00	.SWITCH, choke	1	20	688-8258A-10	EXTENSION, wire harness (10P) (L:2m)	1 UR
9	688-82575-01	.ENGINE STOP SWITCH ASSY	1		688-8258A-30	EXTENSION, wire harness (10P) (L:3m)	1 UR
10	682-82556-00	..STOPPER	1				
11	689-82571-02	.PANEL, switch	1				
12	663-82581-01	.STAY, cord clamp	1				

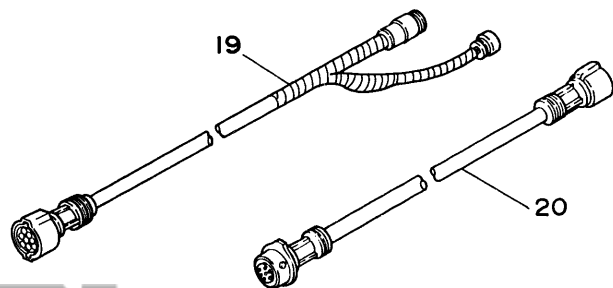
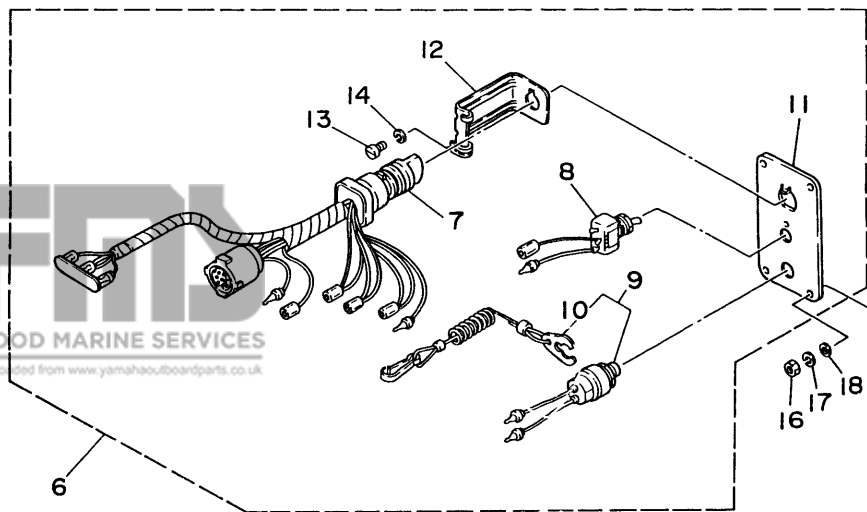
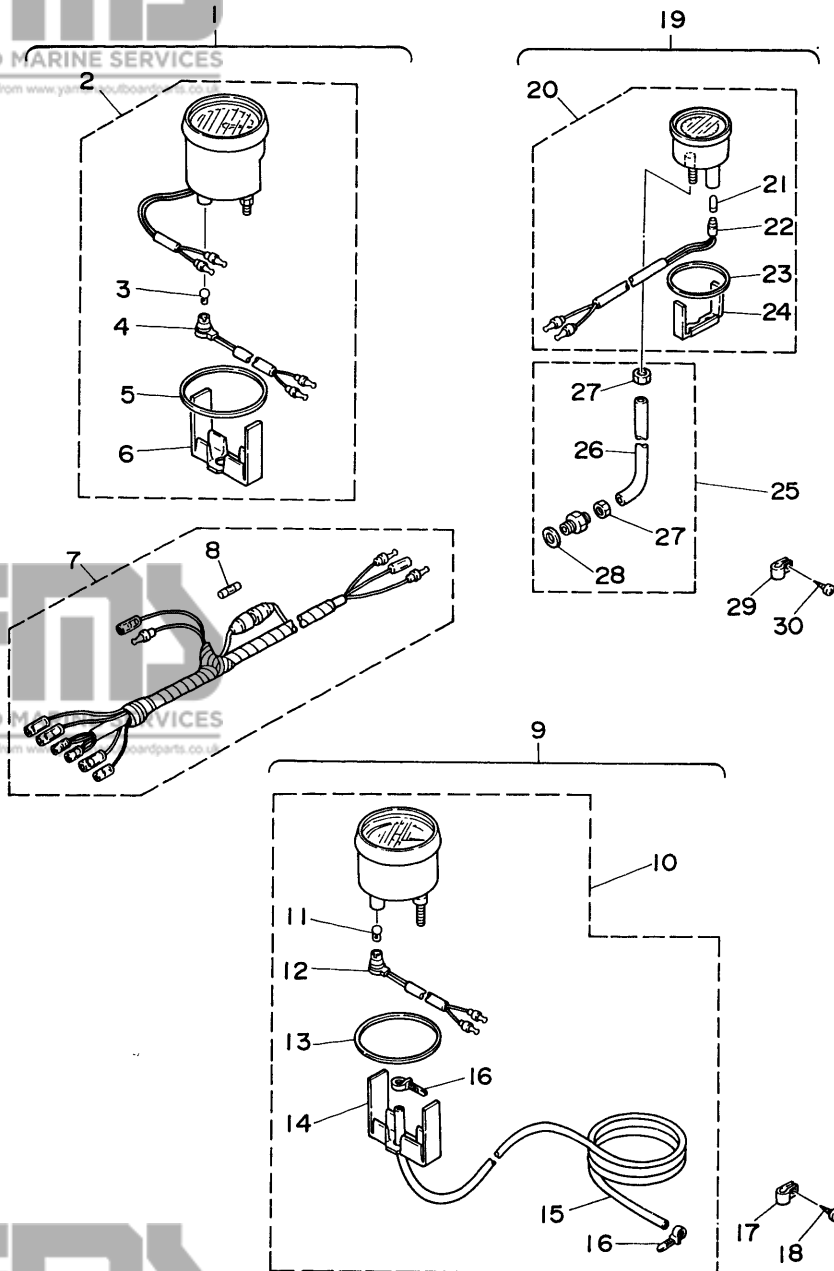


Fig. 37 OPTIONAL PARTS 3

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6Y5-W0080-12	TACHOMETER KIT	1	16	90465-11M10	..CLAMP	2
2	6Y5-83540-12	TACHOMETER ASSY	1	17	90601-31402	..NYLON CLIP 1	5
3	688-83516-00	..BULB	1	18	97780-40116	..SCREW, tapping	5
4	6Y5-83536-10	..SOCKET, meter	1	19	6Y5-W0088-00	WATER PRESSURE METER KIT	1
5	6Y5-83523-00	..DAMPER	1	20	6Y5-83660-00	..WATER PRESSURE METER ASSY	1
6	6Y5-83514-00	..PLATE, fitting	1	21	6Y5-83518-00	..BULB, meter	1
7	6Y5-83553-00	..WIRE, lead	1	22	6Y5-83536-00	..SOCKET, meter	1
8	1E6-82151-00	..FUSE (10A)	1	23	688-83664-00	..DAMPER	1
9	6Y5-W0081-30	SPEEDOMETER KIT	1	24	688-83665-00	..PLATE, fitting	1
10	6Y5-83510-30	SPEEDOMETER ASSY	1	25	688-83667-00	..SENDER	1
11	688-83516-00	..BULB	1	26	688-83666-00	..TUBE	1
12	6Y5-83536-10	..SOCKET, meter	1	27	663-83668-00	..NUT, nipple	2
13	6Y5-83523-00	..DAMPER	1	28	90430-14115	..GASKET	1
14	6Y5-83514-00	..PLATE, fitting	1	29	90601-31402	..NYLON CLIP 1	5
15	688-83557-00	..TUBE	1	30	97780-40116	..SCREW, tapping	5



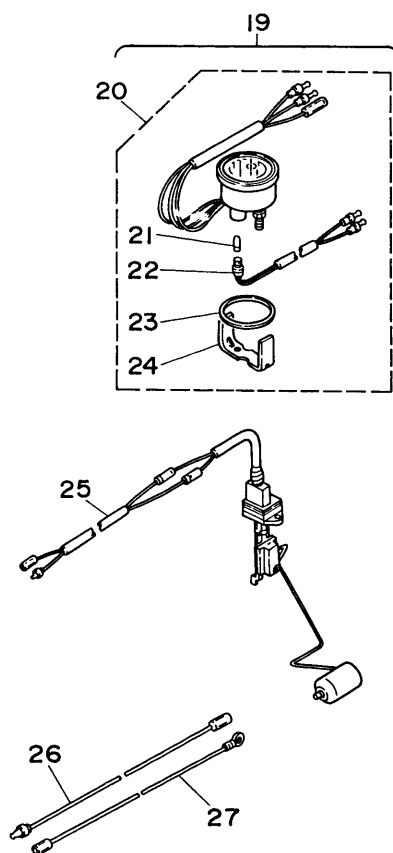
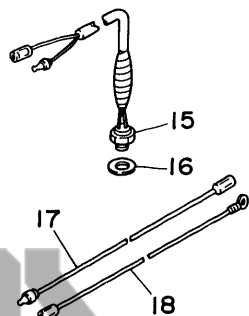
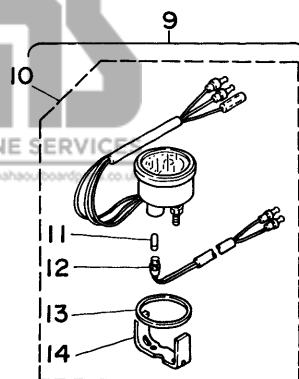

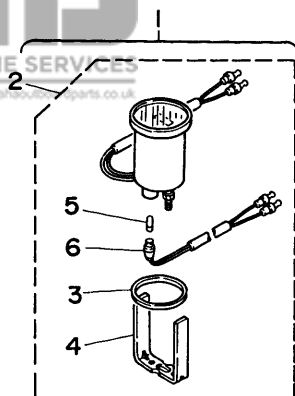


Fig. 38 OPTIONAL PARTS 4

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6Y5-W0088-31	.. HOUR METER KIT	1	15	688-83591-00	.. THERMO UNIT	1
2	6Y5-83504-01	.. HOUR METER ASSY	1	16	90430-14115	.. GASKET	1
3	688-83664-00	.. DAMPER	1	17	663-83553-Y0	.. WIRE, lead	1
4	6Y5-83577-00	.. PLATE, fitting	1	18	663-83553-A0	.. WIRE, lead	1
5	6Y5-83518-00	.. BULB, meter	1	19	6Y5-W0088-20	FUEL METER KIT	1
6	6Y5-83536-00	.. SOCKET, meter	1	20	6Y5-85750-00	.. FUEL METER ASSY	1
7	663-83553-A0	.. WIRE, lead	1	21	6Y5-83518-00	.. BULB, meter	1
8	663-83553-Y0	.. WIRE, lead	1	22	6Y5-83536-00	.. SOCKET, meter	1
9	6Y5-W0088-10	WATER TEMP. METER KIT	1	23	688-83664-00	.. DAMPER	1
10	6Y5-83590-00	.. WATER TEMPERATURE ASSY	1	24	6Y5-83544-00	.. PLATE, fitting	1
11	6Y5-83518-00	.. BULB, meter	1	25	688-85752-01	.. SENDER UNIT ASSY, fuel meter	1
12	6Y5-83536-00	.. SOCKET, meter	1	26	663-83553-Y0	.. WIRE, lead	1
13	688-83664-00	.. DAMPER	1	27	663-83553-A0	.. WIRE, lead	1
14	6Y5-83544-00	.. PLATE, fitting	1				

Fig. 39 OPTIONAL PARTS 5

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	688-83383-11	BUZZER	1	11	92990-06600	.WASHER, plate	2
2	97780-60516	SCREW, tapping	1	12	663-82521-09	.WIRE, lead	1
3	92990-05600	WASHER, plate	1	13	688-82520-00	LIGHT SWITCH ASSY	1 UR
4	688-83373-10	LEAD, horn	1	14	688-82526-00	SWITCH, lamp	1 UR
5	688-W0088-40	PILOT LAMP KIT	1	15	6Y5-82149-00	WIRE, lead (BLUE)	1 UR
6	663-84301-01	.PILOT LIGHT ASSY 1	1	16	6Y5-82117-00	WIRE, lead (BLACK)	1 UR
7	663-84309-00	.PLATE, set	1	17	6Y5-82521-00	WIRE, lead (YELLOW)	1 UR
8	95428-31316	.SCREW, wood	4	18	6Y5-83553-00	WIRE, lead	1
9	697-81901-60	.CHARGE WARNING UNIT ASSY	1	19	1E6-82151-00	.FUSE (10A)	1
10	97780-60120	.SCREW, tapping	2				

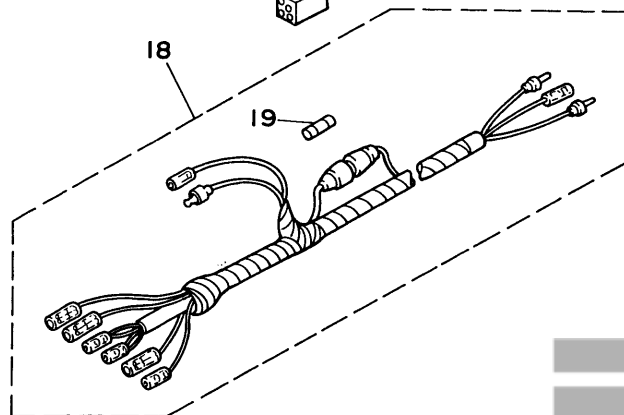
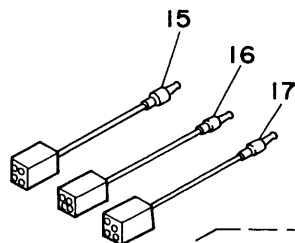
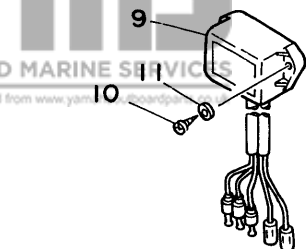
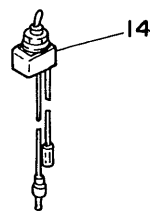
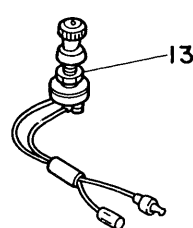
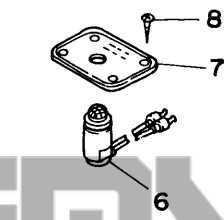

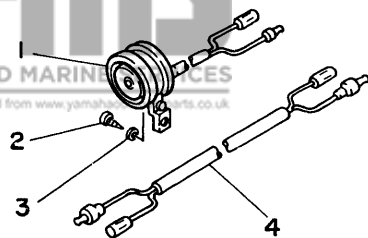
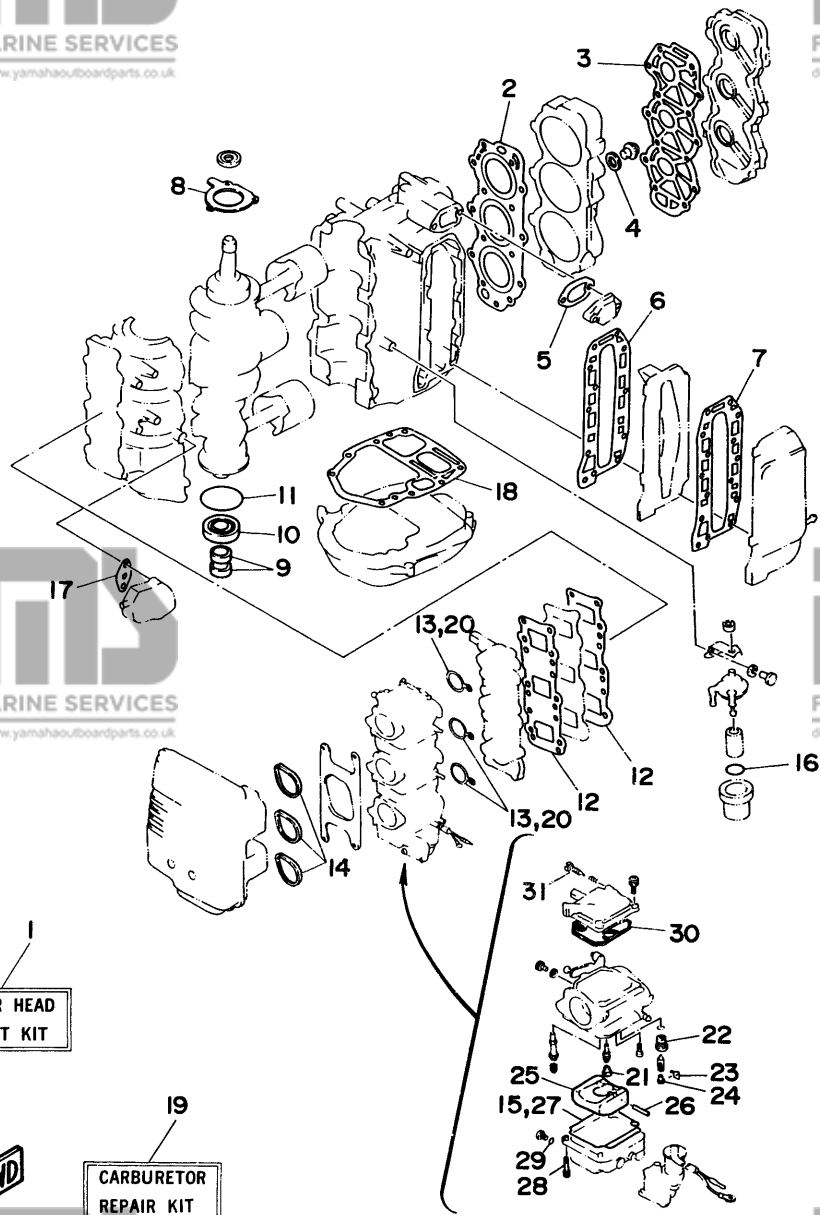


Fig. 40 REPAIR KIT 1

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H4-W0001-02	POWER HEAD GASKET KIT	1	17	650-24431-00	.GASKET, fuel pump 1	1
2	6H4-11181-00	.GASKET, cylinder head 1	1	18	6H4-45113-00	.GASKET, upper casing	1
3	6H4-11193-00	.GASKET, head cover 1	1	19	6H4-W0093-02	CARBURETOR REPAIR KIT	1
4	90430-14115	.GASKET	1	20	6H4-14198-01	.GASKET	3
5	6H4-12414-00	.GASKET, cover	1	21	676-14966-00	.CAP	3
6	6H4-41112-00	.GASKET, exhaust inner cover	1	22	6H3-14590-00	.NEEDLE VALVE ASSY	3
7	6H4-41114-00	.GASKET, exhaust outer cover	1	23	663-14159-00	.CLIP	3
8	6H4-15369-01	.GASKET, oil seal housing	1	24	676-14186-00	.PIN, float	3
9	93104-16M04	.OIL SEAL	2	25	6H4-14985-00	.FLOAT	3
10	93102-25M28	.OIL SEAL	1	26	6H4-14548-00	.PIN, float arm	3
11	93210-57M09	.O-RING	1	27	6H4-14984-00	.GASKET, float chamber	3
12	6H4-13621-01	.GASKET, valve seat	2	28	97980-04114	.SCREW, with washer	3
13	6H4-14198-01	.GASKET	3	29	93210-04230	.O-RING	3
14	6H3-14457-01	.SEAL	3	30	6H4-14147-00	.O-RING	3
15	6H4-14984-00	.GASKET, float chamber	3	31	692-14923-00	.SCREW, pilot	3
16	93210-37M25	.O-RING	1				



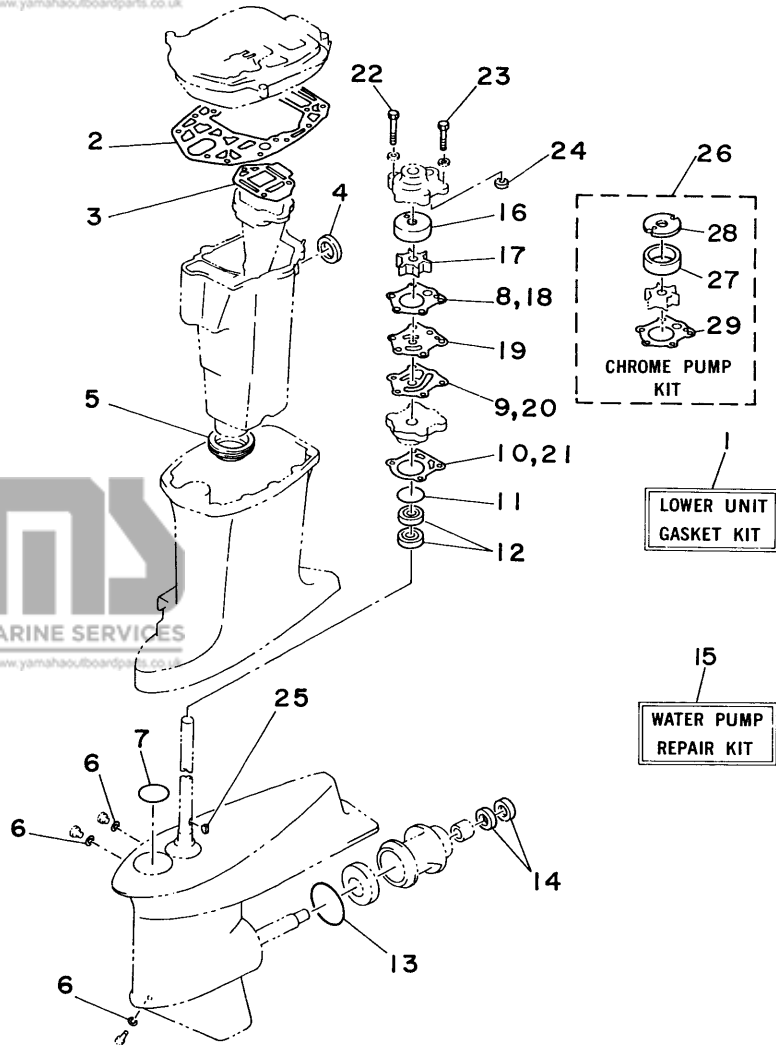


Fig. 41 REPAIR KIT 2

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H4-W0001-20	LOWER UNIT GASKET KIT	1	16	663-44322-00	.INSERT, cartridge	1
2	6H4-45114-00	.GASKET, upper casing	1	17	6H4-44352-02	.IMPELLER	1
3	6H4-41134-00	.GASKET, exhaust manifold	1	18	663-44315-00	.GASKET, water pump	1
4	6H4-41133-00	.GASKET, exhaust manifold 1	1	19	663-44323-00	.OUTER PLATE, cartridge	1
5	663-45123-00	.GASKET, muffler	1	20	663-44324-00	.GASKET, cartridge	1
6	90430-08020	.GASKET	3	21	663-44316-00	.GASKET, water pump	1
7	93210-49ME0	.O-RING	1	22	97395-08055	.BOLT	2
8	663-44315-00	.GASKET, water pump	1	23	97395-08045	.BOLT	2
9	663-44324-00	.GASKET, cartridge	1	24	663-44366-00	.DAMPER, water seal	1
10	663-44316-00	.GASKET, water pump	1	25	90280-03024	.KEY, woodruff	1
11	93210-41042	.O-RING	1	26	6H4-W0078-0A	CHROME PUMP KIT	1
12	93101-23070	.OIL SEAL	2	27	670-44322-01	.INSERT, cartridge	1
13	93210-66M98	.O-RING	1	28	670-44321-00	.INNER PLATE, cartridge	1
14	93101-22067	.OIL SEAL	2	29	670-44323-00	.OUTER PLATE, cartridge	1
15	6H4-W0078-00	WATER PUMP REPAIR KIT	1				

PART NO.	REF. NO.
6H4-W0001-02	40- 1
6H4-W0001-20	41- 1
6H4-W0004-00	3- 2
6H4-W0070-G0	21-11
6H4-W0070-N2	9-11
6H4-W0070-V1	9-11
6H4-W0078-0A	41-26
6H4-W0078-00	41-15
6Y5-W0080-12	37- 1
6Y5-W0081-30	37- 9
6H4-W0084-04-EJ	13- 1
6Y5-W0088-00	37-19
6Y5-W0088-10	38- 9
6Y5-W0088-20	38-19
6Y5-W0088-31	38- 1
688-W0088-40	39- 5
6H4-W0090-14-EJ	1- 1
6H4-W0093-02	40-19
6Y1-W2420-62-24	8- 1
656-W2810-01	8-20
6H4-11111-00-94	1-10
6H4-11119-00	1- 6
6H4-11181-00	1-11
	40- 2
6H4-11191-00-9M	1-14
6H4-11193-00	1-15
	40- 3
688-11325-00	1- 8
6H4-11400-13	2- 1
6H4-11536-00	2- 2
6H4-11537-01	5- 2
	20- 2
6H4-11545-00	18-19
6H4-11601-00	2- 8
6H4-11601-10	2- 8
6H4-11601-20	2- 8
6H4-11631-01-95	2- 7
648-11633-00	2- 9
6H4-11634-01	2-12
6H4-11635-01	2- 7
6H4-11636-01	2- 7
6H4-11641-00	2-11
6E5-12411-10	1-17
6H4-12413-00-9M	1-18
6H4-12414-00	1-19
	40- 5
6H1-13117-01	5- 3
	20- 3

PART NO.	REF. NO.
6J8-13183-00	5-39
	20-49
6H4-13200-03	5- 5
	20- 5
6J8-13411-00	20-41
6J8-13414-00	20-42
6L2-13416-00	20-43
6H4-13436-00	21-12
6R3-13471-00	5- 6
	20- 6
6L2-13475-00	5- 7
	20- 7
6H5-13610-00	3- 1
6H4-13621-01	3- 8
	40-12
6H4-13624-01-94	3- 7
6H4-13641-12-94	3- 5
6H4-13641-30-94	3- 5
6H4-14146-00	4-15
6H4-14147-00	4-28
	40-30
663-14159-00	4-12
	40-23
676-14186-00	4-13
	40-24
6H4-14198-01	3-11
	40-13
	40-20
6H4-14301-08	4- 1
6H4-14301-11	4- 1
6H4-14302-08	4- 2
6H4-14302-11	4- 2
6H4-14303-08	4- 3
6H4-14303-11	4- 3
6A0-14325-00	7-20
6H4-14406-00	3-12
6H4-14431-01	3-14
6H4-14431-11	3-14
6H3-14457-01	3-15
	40-14
6H1-14485-00	3- 6
	3- 6
663-14523-00	4- 7
6H4-14548-00	4-10
	40-26
679-14555-00	4-24
6H4-14561-00	4-33
6H4-14562-00	4-34

NUMERICAL		INDEX	
PART NO.	REF. NO.	PART NO.	REF. NO.
6H4-14567-00	4-30	6H4-15762-00	6- 7
6H2-14578-00	4- 9	6H4-15770-10	6-44
6H3-14590-00	4-26	6H4-15771-01-94	6-30
	40-22	6H4-15772-02-94	6-33
6H4-14592-10	4-32	6H4-15774-10	6-40
663-14592-00	4- 5	6F5-15779-02	6-16
6H4-14711-00-5B	15- 9	6H4-15787-01	6-14
6H4-14711-10-5B	15- 9	6A0-15789-00	6- 8
692-14923-00	4-25	6H4-21707-04	20-23
	40-31	6H4-21707-12	5-23
676-14943-30	4-21	6H3-21732-00	21-14
676-14943-31	4-21	6H3-21735-00	21-15
	4-21	6J8-21744-00	5-44
676-14943-32	4-21		20-36
6H4-14947-07	4-20	6H4-21752-00	20-27
6H4-14948-11	4-23	6H1-21756-00	5-27
676-14966-00	4-22	6H1-21757-00	20-33
	40-21	6H4-21757-00	5-31
6H4-14980-00	4-17	6J8-21758-00	20-32
	4-17	6H1-2176M-01	20-29
6H4-14980-10	4-17	6H1-2177H-01	21-13
6H4-14984-00	4-16	6H4-21770-00	5-28
	40-15		20-30
	40-27	6H4-21773-00	5-26
6H4-14985-00	4-14	6Y1-24167-00	8- 9
	40-25	6Y1-24246-00	8- 2
6H3-14992-00	4-18	6Y1-24256-80	8-10
6H4-15100-11-94	1- 2	6Y1-24257-00	8- 3
6H4-15359-03-94	18- 3	6Y1-24260-02	8- 4
	27- 3	6Y1-24268-00	8- 5
6H4-15369-01	2-13	6G1-24304-02	7- 1
	40- 8	6G1-24305-00	8-16
6H4-15396-02-5B	2-14	6Y1-24305-01	8-18
6H4-15705-00	6-26	6Y1-24306-05	8-11
6H4-15710-02-94	6- 1	6H4-24311-00	7-36
6H4-15711-02-94	6- 2	6H4-24312-00	7-34
6H4-15714-00	6-18	6H4-24313-00	7-33
6H4-15717-00	6-20	6H4-24314-00	7-12
6H4-15723-01-94	6-36	6Y1-24329-00	8- 7
6J8-15723-E1	28-26	650-24351-01	8-15
676-15741-03	6-24	6Y1-24360-02	8-13
6H4-15746-00	6-42	6E5-24367-01	10-33
6H4-15747-10	6-47	6E5-24378-00	20-37
656-15748-00	6-45	688-24378-00	7-31
6F5-15752-00	6- 9	6A0-24410-04	7-14
689-15755-01	6-15	6H5-24411-00	4-43
6H4-15758-00-94	6- 4	648-24411-00	7-15
6H4-15761-00	9-12	663-24411-00	7-23

PART NO.	REF. NO.
6H4-24412-00	4-31
6H4-24413-00	4-35
648-24413-01	7-24
6A0-24421-01	7-19
6L5-24421-00	4-37
648-24423-00	7-17
648-24424-00	7-16
650-24431-00	7-27
	40-17
6H5-24434-00	4-42
648-24434-01	7-18
648-24435-02	7-22
6H4-24452-01	4-29
6H4-24486-00	4-36
655-24521-01	7- 8
655-24560-01	7- 5
6F5-24563-00	7- 6
6H4-24566-01	7- 9
6Y1-24610-00	8- 8
6H4-24633-00	5-29
6H5-24633-00	20-31
6H4-24634-00	5-30
6H4-26311-02	13-16
80L-26397-00	34-58
6E0-28193-00-94	8-21
6H4-41111-00-9M	1-23
6H4-41112-00	1-24
	40- 6
6H4-41113-00-9M	1-22
6H4-41114-00	1-25
	40- 7
6H4-41131-01-5B	15- 8
6H4-41133-00	15-15
	41- 4
6H4-41134-00	15- 7
	41- 3
6H4-41137-00-94	15- 5
6H4-41213-04	14- 1
6H4-41213-14	14- 1
6H4-41217-01	3-25
6H1-41237-00	5-18
	20-18
6H4-41237-00	14- 6
6R5-41237-00	5-22
	20-22
6H4-41241-01	5-17
	20-17
6H4-41257-00	3-19

PART NO.	REF. NO.
6H4-41259-01	3-22
6J8-41262-00	3-23
	12-47
661-41262-02	3-20
	6-48
6H4-41271-01	3-21
689-41273-00	3-26
6J8-41274-00	3-24
6H4-41632-01	14- 3
6G5-41636-01	14- 5
6F5-41662-00	14-22
6H4-42111-01-EJ	13- 2
664-42119-00	13- 3
6H4-42121-02-5B	11-33
656-42126-01	13-24
6H4-42131-00	13-15
6L2-42137-00	13- 5
6H4-42138-01	13-10
6H4-42159-00	13-12
6G1-42177-00	13- 4
6H4-42510-01-EJ	22-51
	23-36
6H4-42510-11-EJ	11-25
6J8-42528-00	11-22
	22-21
624-42542-00	5-35
	20-46
6H4-42610-G3-EJ	21- 1
6H4-42610-N3-EJ	9- 1
6H4-42610-V2-EJ	9- 1
6H4-42613-00-EJ	9- 6
6H4-42613-10-EJ	21- 6
6H4-42615-00	9- 2
	21- 2
6H4-42651-00	9- 3
	21- 3
6H4-42652-00	9- 4
	21- 4
6H4-42686-02	9- 9
6H4-42686-11	21- 9
6H4-42687-01	9-10
6H4-42687-10	21-10
6H1-42694-00	21-16
6H4-42711-05-EJ	10- 1
6H4-42711-23-EJ	10- 1
6H4-42716-00	10-18
6H4-42724-00	10-16
6H4-42724-20	29- 9

PART NO.	REF. NO.
6H4-42724-20	30-28
6H4-42725-00	29-10
	30-26
6H4-42726-00	10- 9
6H5-42726-00	10- 9
676-42726-00	29-11
	30-27
	35- 4
	35- 7
	10- 9
688-42726-10	10-32
6H3-42727-00	10-19
682-42727-00	10-19
6H4-42741-20	10-24
6G1-42748-00	3-26
6H4-42815-00	10- 3
6H4-42816-00	10- 6
6H4-43111-04-EJ	11- 1
6H5-43111-02-EJ	22- 1
697-43111-04-EJ	23- 1
6H4-43112-04-EJ	11- 2
6H5-43112-02-EJ	22- 3
697-43112-03-EJ	23- 2
6J8-43113-01	11-11
	22-16
	11- 8
616-43118-00-EJ	11- 5
6E5-43126-01	23-32
6H5-43126-02	22-41
6H5-43128-01-EJ	22- 6
6J8-43131-01	11- 9
	22-14
	23-16
688-43131-03	32- 9
6E5-43145-00	32-19
	11-14
663-43145-00	22-19
	23-20
	12- 1
6H4-43160-01	22-24
676-43160-02	23-29
697-43160-00	12- 2
676-43165-00	22-25
	23-30
688-43165-00	22-33
6H5-43181-01	12- 5
6J8-43181-01	23-21
688-43181-03	22-34
6H5-43185-01	23-22
688-43185-03	

PART NO.	REF. NO.
6J8-43186-00	12-42
6J8-43187-00	12-43
6H5-43311-03-EJ	22-20
6J8-43311-04-EJ	11-19
697-43311-03-EJ	23-13
663-43318-00	22-39
	23-27
	12-10
682-43318-01	11-23
689-43373-01	22-22
	24- 1
688-43376-01	12-20
6J8-43611-01	12-18
6J8-43613-01	12-16
6J8-43614-00	12-17
6J8-43615-00	12-30
6H4-43616-00	12-39
	12-48
6J8-43616-10	12-33
6J8-43617-00	12-41
6J8-43617-10	12-11
6J8-43627-00	12-27
6J8-43631-00	12-37
6J8-43631-10	12-28
6J8-43633-00	12-38
	12-31
6J8-43641-00	12-40
	12-19
6H4-43659-00	12-36
6J8-43673-00	12-25
6H4-43674-00	12-35
6J8-43681-01	25-12
697-4380E-01	25- 1
6H3-43800-05-EJ	26-29
6H5-43801-00	25-29
6E5-43802-00	25- 3
6E5-43804-00	25- 4
6E5-43805-00	25-11
688-43807-11	25-66
6E5-4381A-00	26-39
6H5-4381A-00	26-36
6H5-4381E-00	26-45
6H5-4381F-00	26-44
6H5-43811-00	26-40
6H5-43812-00	25-16
6E5-43814-01	26-33
6H5-43814-00	25-49
6E5-43816-10	25-50
6E5-43817-10	

NUMERICAL INDEX

PART NO.	REF. NO.
6E5-43818-00	25-19
6E5-4382A-00	25-60
6H5-4382E-00	26- 8
6E5-43820-03	25-22
6E5-43821-01	25-25
6E5-43822-01	25-26
6E5-43824-01	25-68
6H5-43826-00	26-43
6E5-43829-00	25-17
6H5-43829-00	26-26
6E5-43830-00	25-56
6E5-43831-00	25-55
6E5-43833-01	25-35
6E5-43834-01	25-36
6E5-43835-00	25-37
6H5-43836-00	26-16
6H5-43837-00	26-15
6H5-43840-02-EJ	26- 1
6E5-43841-01	25-32
6H5-43841-00	26- 2
6E5-43842-00	25-70
6E5-43843-00	25-43
6E5-43844-02	25-39
6H5-43844-00	26-19
6E5-43845-01	25-62
6H5-43846-02	26-10
6E5-43847-00	25-58
6E5-43849-01	25-67
6H5-43849-00	26- 6
6H5-4385A-00	26-28
6E5-43851-01	25-38
6H5-43853-00	26- 7
6H5-43853-10	26-22
6E5-43854-01	25-59
6H3-43855-00	25-44
6H5-43855-01	26-24
6E5-43856-00	25-41
6H5-43856-00	26-18
6H5-43857-00	26-31
6E5-43858-00	25-40
6H5-43858-00	26-30
6H5-43858-10	26-17
6E5-43859-00	25-45
6H5-43859-00	26-23
6H5-4386F-00	26-25
6E5-43861-00	25-13
6H5-43861-00	26- 3
6E5-43862-00	25-14

PART NO.	REF. NO.
6E5-43862-00	25-27
6H5-43862-00	26- 5
6E5-43863-00	25-18
6H5-43863-00	26- 9
6E5-43864-00	25-23
6H5-43864-00	26-11
6E5-43865-00	25-28
6H5-43865-00	26-12
	26-27
	25-30
	26-14
6E5-43866-00	25-31
6H5-43866-00	26-20
6E5-43867-00	25-33
6H5-43868-00	26-21
6E5-43869-00	25-34
6H5-43871-00	26-35
6E5-43872-00	25-15
6H5-43872-00	26-48
6H5-43873-00	26-38
6E5-43874-01	25-24
6E5-43875-00	25-64
6H5-43875-00	26-13
6E5-43877-01	25-46
6E5-43878-01	25-53
6H5-4388A-00	26-53
6H5-43880-00	26-42
688-43880-11	25- 2
6E5-43883-00	25-42
6H5-43883-00	26-34
6E5-43884-00	25- 6
6E5-43885-00	25- 7
6E5-43886-00	25- 8
6H5-43886-00	26-47
6E5-43887-00	25- 9
6H5-43887-00	26-46
6E5-43888-01	25-54
6H5-43891-00	26- 4
6H5-43893-00	26-32
6E5-43895-00	25-47
6E5-43896-00	25-48
6H5-43896-00	26-37
6E5-43897-00	25-52
6H5-43897-00	26-41
6H4-44111-00	14-13
6H4-44111-10	14-13
6H4-44116-00	14-17
682-44117-00	14-18

PART NO.	REF. NO.
6H4-44121-02	14-15
6H4-44125-01	14-20
682-44132-00	14-14
6H4-44143-00	14-25
648-44146-00	14-29
6G1-44147-00	16-12
6H4-44150-01	16-49
6H4-44150-12	16-49
6H4-44160-00	16-50
6H4-44173-00	36- 4
6H4-44173-01	29-13
	30-30
688-44194-00	14-12
6J8-44311-00	16-20
663-44315-00	16-23
	41- 8
	41-18
663-44316-00	16-29
	41-10
	41-21
670-44321-00	41-28
663-44322-00	16-21
	41-16
670-44322-01	41-27
663-44323-00	16-30
	41-19
670-44323-00	41-29
663-44324-00	16-31
	41- 9
	41-20
663-44341-00-94	16-26
6H4-44352-02	16-22
	41-17
6H4-44361-00	17-20
6H4-44361-10	17-20
663-44366-00	16-24
	41-24
663-44367-00	17-22
6E5-44391-00	10-17
6H4-44511-00-94	11-47
	22-72
	23-59
6H4-44514-00	11-43
	22-68
	23-55
6H1-44526-00	22- 8
	23- 4
6H4-44551-01-EJ	11-31

PART NO.	REF. NO.
6H4-44551-01-EJ	22-57
	23-42
6H4-44553-01	11-37
	22-63
	23-48
6H4-44557-00	11-36
	22-62
	23-47
6H4-44557-10	11-36
	22-62
	23-47
6H4-45111-00-EJ	15- 1
6H4-45111-10-EJ	15- 1
6H4-45113-00	15-16
	40-18
6H4-45114-00	15- 6
	41- 2
663-45119-00	11-21
	22-29
	23-15
663-45123-00	15-10
	41- 5
688-45214-02	17- 3
688-45215-02	17- 4
6H1-45251-02	22- 7
	23- 3
6H4-45300-01-EJ	16- 1
6H4-45300-11-EJ	16- 1
6H4-45301-01-EJ	16- 2
6H4-45321-01	16-10
679-45331-00-94	16-52
688-45341-00	16- 9
664-45371-01	17- 7
688-45375-00	17- 2
663-45376-00-94	17- 1
6H4-45378-00	16-15
697-45384-00	16-60
6H4-45501-00	16-35
6H4-45501-10	16-35
6H4-45536-00	16- 4
6H4-45551-00	16-36
6H4-45560-00	16-38
6H4-45567-01-10	16-40
6H4-45567-01-12	16-40
6H4-45567-01-15	16-40
6H4-45567-01-18	16-40
6H4-45567-01-30	16-40
6H4-45567-01-40	16-40

PART NO.	REF. NO.
6H4-45567-01-50	16-40
6H4-45571-00	16-51
663-45576-00	16-55
663-45577-01-10	16-54
663-45577-01-12	16-54
663-45577-01-15	16-54
663-45577-01-18	16-54
663-45577-01-30	16-54
663-45577-01-40	16-54
663-45577-01-50	16-54
663-45587-01-10	16-5
663-45587-01-12	16-5
663-45587-01-15	16-5
663-45587-01-18	16-5
663-45587-01-30	16-5
663-45587-01-40	16-5
663-45587-01-50	16-5
679-45611-01	16-41
6H4-45631-00	16-44
663-45633-00	16-46
663-45634-00	16-43
676-45635-00	16-42
663-45930-00-98	17-31
663-45941-01-EL	17-31
6H5-45943-00-EL	17-31
663-45943-02-EL	17-31
6H5-45945-00-EL	17-31
663-45945-02-EL	17-31
663-45947-02-EL	17-31
663-45949-01-EL	17-31
6H5-45952-00-EL	17-31
663-45952-02-EL	17-31
663-45954-01-EL	17-31
663-45956-01-EL	17-31
6H5-45958-00-EL	17-31
663-45958-01-EL	17-31
663-45970-60-98	17-31
663-45972-60-98	17-31
663-45974-60-98	17-31
663-45976-00-98	17-31
663-45978-00-98	17-31
663-45987-02	17-26
670-45997-02	17-27
701-48101-10	31-1
	33-1
701-48102-10	31-2
	33-1
701-48110-22	31-3

PART NO.	REF. NO.
701-48110-22	33-1
701-48126-00	33-41
701-48152-11	33-13
701-48152-20	33-13
701-48153-12	33-34
703-48153-00	34-3
701-48189-11	16-54
703-48189-00	34-20
701-48196-11	33-7
701-48197-10	33-3
703-48197-00	34-6
701-48198-10	33-15
703-48198-00	34-17
703-48210-12	31-4
	34-1
701-48213-00	33-19
703-48215-00	34-46
702-48217-00	34-47
703-48219-00	34-33
701-48221-00	33-6
703-48221-00	34-60
701-48222-00	33-27
703-48222-00	34-30
703-48222-10	34-30
703-48223-00	34-31
703-48224-00	34-59
703-48225-00	34-32
703-48226-00	34-29
703-48227-00	34-27
701-48229-00	33-26
701-48232-00	33-31
701-48234-00	33-5
703-48234-00	34-21
701-48235-00	33-2
703-48235-00	34-4
701-48236-00	33-8
703-48236-00	34-19
702-48237-00	33-9
702-48238-00	33-10
703-48238-00	34-25
701-48239-00	33-29
701-48243-00	33-14
703-48243-00	34-18
703-48244-00	34-24
703-48245-00	34-14
701-48246-00	33-24
703-48246-00	34-26
701-48248-00	33-12

NUMERICAL INDEX

PART NO.	REF. NO.
701-48248-00	34-16
701-48249-00	33-11
703-48250-12	31-4
	34-1
701-48252-00	33-4
703-48252-00	34-15
701-48255-00	33-21
701-48261-00	33-38
701-48261-10	33-38
703-48261-10	34-2
703-48263-00	34-8
703-48264-00	34-9
703-48265-00	34-12
701-48266-00	33-30
701-48268-00	33-18
703-48268-00	34-7
701-48271-00	33-35
702-48271-10	33-35
703-48273-00	34-5
701-48280-00	33-47
703-48280-12	31-5
	34-1
701-48281-00	33-16
701-48282-00	33-28
701-48283-00	33-42
703-48284-00	34-56
701-48287-00	33-45
	34-45
702-48288-00	33-23
703-48290-01	31-7
701-48291-00	33-44
703-48293-00	34-44
703-48293-10	34-44
701-48310-10	31-6
701-48310-20	31-6
701-48310-40	31-6
701-48310-60	31-6
701-48310-80	31-6
701-48310-90	31-6
701-48320-00	31-6
701-48320-20	31-6
701-48320-30	31-6
701-48320-40	31-6
701-48320-50	31-6
701-48320-60	31-6
701-48320-70	31-6
701-48320-80	31-6
701-48320-90	31-6

FLOOD MARINE SERVICES

downloaded from www.yamahamotors.co.uk

PART NO.	REF. NO.
6H4-48344-00	31-8
663-48344-00	14-30
703-48345-01	33-37
	34-22
701-48350-00	31-6
701-48350-10	31-6
701-48350-20	31-6
701-48358-00	33-39
703-48358-00	34-23
6H4-48511-50-EJ	22-59
	31-10
6H5-48511-50-EJ	23-44
688-48511-00-EJ	31-10
6H4-48531-00-94	10-10
6H4-48531-10-94	10-10
	29-7
6H4-48532-00-94	10-11
6H4-48532-10-94	10-11
	29-8
6E5-61301-01	32-21
688-61301-01	32-21
6E5-61303-00	32-26
6E5-61311-11	32-27
688-61311-11	32-27
6E5-61313-00	32-30
6E5-61315-00	32-29
688-61350-10	32-11
689-61350-02	32-1
688-61351-10	32-12
689-61351-01	32-2
6H4-81332-00	18-22
6H4-81337-01	28-21
6J8-81365-00	6-37
	28-27
6F5-81800-10	28-1
689-81807-12	28-3
689-81809-11	28-6
689-81810-11	28-8
689-81811-11	28-9
689-81812-11	28-11
689-81813-10	28-12
689-81820-11	28-13
6H4-81822-00-98	28-30
689-81826-10	28-14
6F5-81830-11	28-4
689-81840-11	28-10
689-81847-11	28-5
689-81850-11	28-7

FLOOD MARINE SERVICES

downloaded from www.yamahamotors.co.uk

PART NO.	REF. NO.
689-81857-11	28-2
697-81901-60	39-9
663-81910-10	35-12
6H5-81920-00	29-24
6F5-81922-00	19-23
6G1-81941-10	28-40
	30-11
6H4-81945-00	28-42
6H4-81945-10	30-13
6H5-81950-00	29-19
6H4-81952-00	28-41
	30-12
6J8-81960-00	19-18
6G1-81970-61	29-2
	30-3
	35-8
6H4-81975-02	19-21
6H4-82105-01	29-1
	30-1
	19-28
6J8-82105-10	28-20
6H4-82117-00	23-53
6H5-82117-00	39-16
6Y5-82117-00	30-19
6E5-82119-00	30-18
6G1-82127-00	26-52
6H4-82127-00	11-42
6H5-82127-00	22-49
6E5-82148-00	11-3
	22-4
	23-62
6H1-82148-00	23-10
6H5-82149-00	22-50
	23-54
6Y5-82149-00	39-15
1E6-82151-00	37-8
	39-19
6G1-82151-00	29-3
	30-4
	35-9
6A0-82317-00	5-34
	20-45
6G1-82370-20	19-11
689-82510-00	36-7
703-82510-10	34-48
688-82520-00	39-13
6Y5-82521-00	39-17
663-82521-09	39-12

PART NO.	REF. NO.
688-82526-00	39-14
6H4-82531-02	19-4
703-82531-00	34-50
6H4-82537-00	10-29
6H3-82540-00	36-1
703-82540-00	34-54
689-82550-11	35-5
701-82550-50	33-40
6A0-82553-20	35-3
	35-6
6E5-82553-10	24-8
6H4-82553-00	36-3
6Y5-82553-00	39-18
6H4-82554-00	29-12
	30-29
	36-2
682-82556-00	10-28
	34-52
	35-2
	36-10
689-82560-00	19-12
6H1-82563-00	30-20
703-82563-01	34-59
689-82570-15	36-6
689-82571-02	36-11
703-82574-00	34-49
	36-8
6H4-82575-00	10-27
688-82575-01	34-51
	36-9
689-82575-12	35-1
688-8258A-10	36-20
688-8258A-20	34-53
688-8258A-30	36-20
688-8258A-50	36-19
663-82581-01	36-12
6E5-82582-00	29-28
6H4-82582-00	29-29
	30-9
6E5-82587-00	30-21
6H4-82588-00	29-16
	30-10
6H4-82590-11	29-18
6H4-82590-22	29-18
	30-8
701-82594-00	33-43
703-82594-00	34-28
6H5-83354-00	18-9

FLOOD MARINE SERVICES

downloaded from www.yamahamotors.co.uk

PART NO.	REF. NO.
6H5-83354-00	27- 9
688-83373-10	39- 4
688-83383-11	39- 1
703-83383-01	34-55
6Y5-83504-01	38- 2
6Y5-83510-30	37-10
6Y5-83514-00	37- 6
	37-14
688-83516-00	37- 3
	37-11
6Y5-83518-00	24- 4
	37-21
	38- 5
	38-11
	38-21
6Y5-83523-00	37- 5
	37-13
6Y5-83536-00	37-22
	38- 6
	38-12
	38-22
6Y5-83536-10	37- 4
	37-12
6Y5-83540-12	37- 2
6Y5-83544-00	38-14
	38-24
6Y5-83553-00	37- 7
663-83553-A0	38- 7
	38-18
	38-27
663-83553-Y0	38- 8
	38-17
	38-26
661-83557-00	19-14
688-83557-00	37-15
6E5-83558-00	16-18
	17-25
6E5-83558-10	16-18
6Y5-83577-00	38- 4
6H4-83589-00	20-54
6Y5-83590-00	38-10
688-83591-00	38-15
6E5-83614-01	30-22
6Y5-83660-00	37-20
688-83664-00	24- 5
	37-23
	38- 3
	38-13

PART NO.	REF. NO.
688-83664-00	38-23
688-83665-00	37-24
688-83666-00	37-26
688-83667-00	37-25
663-83668-00	37-27
6Y5-83670-01	24- 3
6E5-83672-01	24- 6
6H4-84301-01	20-58
663-84301-01	39- 6
663-84309-00	39- 7
6H4-84342-00	20-53
682-84381-00	19-26
6J8-85410-00	10-30
6H4-85415-10	10-31
6H5-85520-00	18- 4
	27- 4
6H5-85533-01	18- 5
	27- 5
6H5-85540-01	19- 1
6H5-85550-00	27- 1
6H5-85550-10	18- 1
6H5-85560-01	18- 2
	27- 2
6H5-85570-00	19- 7
6H5-85580-00	18- 6
	27- 6
6H5-85580-10	18- 7
	27- 7
6H5-85580-20	18- 8
	27- 8
6H4-85720-20	5-46
6H4-85720-30	20-52
6Y5-85750-00	38-20
688-85752-01	38-25
6H4-86120-00	4-41
6H4-87149-00	30-17
90101-08M86	11-44
	22-69
	23-56
90101-08339	11-15
90101-09M66	32- 5
	32-18
90101-09M70	32-24
90101-10M58	11-50
90101-12M37	13-17
90101-12M65	22-75
	23-67
90105-06M18	11-24

PART NO.
90105-06M18
90109-06M04
90109-06M21
90109-06M39
90109-06M40
90109-06M43
90116-06M22
90116-10175
90116-18M21
90119-06M13
90119-06M42
90119-06M51
90119-06M65
90119-06M67
90119-08M19
90119-08M29
90149-05M05
90149-14M12
90157-06M00
90157-06M01
90170-07021
90170-09M03
90170-09M05
90170-12138
90170-14M06
90170-18M10
90171-16011
90179-06M12
90179-16M05
90183-05M06
90185-05002
90185-06062
90185-08045
90185-09M01
90185-10051

NUMERICAL INDEX

REF. NO.	PART NO.
22-23	90185-12058
6-43	90185-22043
25-51	
5- 9	
20- 9	90201-05M00
5-10	90201-05M01
20-10	90201-05652
14- 2	90201-06M02
28-43	90201-06M31
30-14	
11-34	90201-06060
22-60	90201-06416
23-45	90201-08M93
22-45	
1- 4	90201-09425
25-21	
19- 3	
5-36	90201-10M20
20-47	
5-37	90201-10M63
1- 3	
1-16	90201-10M76
36-15	90201-12426
11- 7	
14-10	
10-34	90201-12537
14-32	90201-16M44
32- 8	90201-22M67
32-15	90201-22428
32-25	
16-37	90201-22429
32-31	90201-30M00
22-46	
17-29	
28-36	90201-50306
18-20	90202-05088
21-18	
17- 6	90202-12031
13-26	
11-46	90202-12060
22-71	90202-12092
23-58	90202-26M45
32- 4	90206-12M16
32-14	90206-12052
32-22	90206-12054
11-35	90209-06M04
22-61	90209-06M05
23-46	90209-08M02

REF. NO.	PART NO.
13-23	90209-10M14
11-13	90214-48M03
22-18	90243-04M00
23-19	90249-06M23
25-65	90249-06M24
25-10	90249-07M25
4- 6	90249-12M27
10- 7	90249-12M28
22- 9	90250-06023
23- 5	90266-04M01
6-21	
10-22	90269-02M09
5- 1	90280-03024
20- 1	
11-45	90282-04010
22-70	90338-05M03
23-57	90338-05M11
32- 3	90338-05M12
32-13	90340-08M04
32- 6	90340-14M00
32-17	90386-08032
32-23	90386-10M16
11-52	
22-77	90386-10M19
23-69	90386-12M64
13-21	90386-12M65
18-21	90386-12069
23-18	90386-12089
11-12	90386-18M14
22-17	90386-18M35
16-47	90386-18M44
11-27	90386-18M63
22-55	90386-22M15
23-37	
2- 6	90386-22M69
5-19	90386-30M60
20-19	
12- 9	
12-14	90386-30M77
17-19	
13-20	
19-27	90386-30M78
12-15	
10- 4	
13-22	90387-06M05
28-23	90387-06M19
3-18	90387-06M41
16-62	90387-06M65

REF. NO.	PART NO.
16-16	90387-06M69
16-59	90387-07M64
11- 6	90387-08M03
12-32	90387-10M38
12-32	90387-10M42
12-45	
12-12	90430-08020
12- 7	
16-45	90430-12072
9- 5	90430-14115
21- 5	
13- 6	
16-25	
41-25	90440-14M00
16-61	90445-07MA6
10- 2	
28-39	90445-07ME9
21-17	90445-07MF1
16- 7	90445-07M23
1-12	
13-11	90445-07M24
22-35	90445-07M31
23-23	90445-07M44
22-40	
22-43	90445-07M87
22-42	
10- 5	90445-09M37
13-18	
25-20	90445-09057
23-35	90445-09063
22-48	90445-11M05
23-33	90445-11M06
22-15	90445-11M07
23-17	90445-11M17
11-10	
11-30	
22-53	90445-11M23
23-41	
11-26	90446-09M08
22-54	90446-10M01
23-39	
11-28	
22-56	90446-10M02
23-38	90464-03M15
29-23	
14- 8	90464-05M16
10-21	90464-06M19
28-22	90464-07M05

PART NO.	REF. NO.	PART NO.	REF. NO.
90464-07M20	5-16	90501-10M21	22-37
	20-16		23-25
	29-30	90501-10227	6-46
	30- 2	90501-10326	4- 8
90464-09M13	28-15	90501-16M01	16-48
90464-11M23	20-25	90501-23215	13- 9
90464-12M35	19-24	90502-10M04	12- 4
90464-15M08	24- 9		22-27
90464-15M27	29-15	90502-20M03	23-66
	30-32	90506-12M25	12- 6
90464-16039	7-37	90506-32M22	12-24
90465-08028	24-11	90508-18M23	12-29
90465-11M10	16-19	90508-18M24	12-29
	17-23	90508-20M22	12-49
	24-10	90508-25M21	12-44
	37-16	90508-26M20	14- 4
90465-13M11	22- 2	90510-08002	6-19
90465-13M30	20-28	90601-31402	37-17
90465-13M36	19- 2		37-29
90465-13169	34-57	90890-44373	6-17
90465-18147	20-57	91316-06020	26-49
	29- 6	91490-16010	14-28
	29-27	91490-20010	12-26
	30- 7	91490-30030	17-30
90467-06016	3-29		22-38
90467-08004	1-27		23-26
	5-25	91690-30010	12- 3
	5-33	91690-30012	22-26
	7- 4		23-31
	7-13	91690-30020	29-14
	7-35		30-31
	20-44		36- 5
90467-10M04	5-43	91690-30316	14-21
	20-38	91690-30318	14-16
90467-11M08	20-26	91690-40018	6- 3
	20-51	91790-05020	14-26
90468-05M03	5-20	92503-06015	20-55
	20-20	92580-06012	23-63
90468-07M02	5-14	92580-06016	24- 7
	5-15	92680-06090	34-42
	5-40	92780-06025	33-20
	20-14	92901-04100	36-14
	20-15	92901-05100	18-11
	20-50		27-11
90468-18008	14-31	92901-05600	13-14
	31- 9		18-12
90480-09M21	10-20		27-12
90480-25161	19- 8	92990-05100	7-26

NUMERICAL INDEX

PART NO.	REF. NO.	PART NO.	REF. NO.
92990-05100	36-17	92990-06600	29-22
92990-05600	3- 4		29-26
	10-13		30-16
	14-27		39-11
	29- 5	92990-08100	11-49
	30- 6		15-14
	35-11		17- 9
	36-18		17-17
	39- 3		22-74
92990-06100	18-14		23-61
	18-16	92990-08600	6-32
	22-12		6-39
	23- 8		11-17
	26-50		11-39
	27-14		15- 4
	27-16		15-12
92990-06200	29-20		17-10
92990-06300	33-25		17-18
92990-06600	1-21		22-65
	1-29		23-50
	2-19		28-17
	3-10		28-19
	6- 6		28-29
	6-12		28-34
	6-28		34-37
	6-35	92990-10100	17-14
	7- 3		23-65
	7-29	92990-10600	11-41
	9- 8		13- 8
	10-15		17-15
	10-26		22-36
	10-35		22-67
	14-24		23-24
	16-14		23-52
	18-25	92990-12200	13-19
	19- 6		22-76
	19-10	92990-16200	17-28
	19-17	92990-18600	22-47
	20-56	92995-10600	11-51
	21- 8	92995-12200	23-68
	22-13	93101-22067	16-58
	22-31		41-14
	23- 9	93101-23070	16-27
	23-12		41-12
	28-32	93102-23096	18-18
	28-38		27-18
	28-45	93102-25M28	2-15
			40-10

PART NO.	REF. NO.	PART NO.	REF. NO.
93104-16M04	2-16	93430-10M00	12-13
	40- 9	93440-62057	2- 5
93210-04228	4-27	93602-20M02	2-10
93210-04230	4-19	93604-08062	16-32
	40-29	93606-12019	1- 5
93210-06M77	25-69		15- 2
93210-07M78	25-57		15-17
93210-08287	8-17		17-12
	8-19	93700-06004	11-20
93210-10M74	25-61		22-28
93210-13595	5- 4		23-14
	20- 4	94702-00271	1-30
93210-16275	32-10	95303-06600	6-23
	32-20		14-11
93210-18M75	25-63	95380-03600	4-39
93210-19MA7	5- 8		7-21
	20- 8	95380-05600	5-21
93210-29M94	11-29		14- 7
	22-52		20-21
	23-40		34-10
93210-37M25	7- 7		36-16
	40-16	95380-06600	6-13
93210-41042	16-28		28-44
	41-11		30-15
93210-49ME0	16-11		33-46
	41- 7		34-43
93210-57M09	2-17	95380-08600	7-11
	40-11		11-18
93210-66M98	16-56		17-11
	41-13	95380-10600	11-53
93210-71M76	25- 5	95380-12600	22-78
93306-00702	16-53		23-70
93306-305U8	2- 3	95380-14700	32-28
	2- 4	95428-31316	39- 8
93315-32224	16- 3	95600-12100	26-51
93317-22204	16-57	95670-06640	28-35
93332-000V4	16-39	95780-08300	24- 2
93332-00023	16- 6	97013-06012	6-41
93410-12M08	22-44		7-10
93410-18M02	23-34		19-22
93410-28M06	11-32		29-17
	22-58		29-25
	23-43		30-25
93430-06M02	6-25	97013-06035	1-28
	12-22		6-27
93430-06024	33-36	97021-08014	28-28
	34-13	97090-08035	11-48
93430-10M00	12- 8		22-73

PART NO.	REF. NO.
97090-08035	23-60
97313-05016	10-12
97313-06010	10- 8
97313-06014	1- 7
	19- 5
	19-16
	28-37
97313-06016	14-19
	30-23
97313-06018	18-24
97313-06020	2-18
	3- 9
	6-22
	10-14
	14-23
	19- 9
97313-06025	1-20
	6-34
	14- 9
	29-21
97313-06030	6-11
	10-23
	28-31
97313-06095	3-13
97313-08016	28-18
97313-08020	6-38
97313-08030	6-31
	28-16
97313-08050	28-33
97375-08075	17- 8
97380-05025	34-11
97395-06010	22-30
	23-11
97395-06012	19-19
	22-10
	23- 6
97395-06016	6- 5
	9- 7
	10-25
	16-13
	21- 7
	22-11
	23- 7
97395-06018	33-22
97395-06020	13-25
97395-06025	7- 2
97395-06040	7-28
97395-08025	11-38

PART NO.	REF. NO.
97395-08025	22-64
	23-49
97395-08030	15-11
	15-13
	34-36
97395-08045	16-34
	41-23
97395-08055	16-33
	41-22
97395-08080	15- 3
97395-08085	17-16
97395-10040	17-13
97395-10045	23-64
97395-10060	11-40
	22-66
	23-51
97780-40116	37-18
	37-30
	39-10
97780-60120	39- 2
97780-60516	13-13
97880-05016	11- 4
97895-06008	22- 5
	28-25
97895-06035	3-16
97895-06040	28-24
	3-17
97895-06055	4- 4
97980-04114	40-28
	4-40
97980-05310	18-23
97985-05210	36-13
98303-04008	18-10
98501-05012	27-10
	18-13
98501-06025	27-13
	18-15
98501-06030	27-15
	29- 4
98503-05025	30- 5
	35-10
	34-41
98580-03015	34-39
98580-04006	4-11
98580-04008	34-38
98580-04010	33-17
98580-05010	33-33
	34-40

NUMERICAL INDEX	REF. NO.	PART NO.	REF. NO.
	3- 3	98580-05016	
	7-25	98580-05530	
	8- 6	98586-05016	
	1- 9	98680-04016	
	13- 7	98680-05525	
	17- 5	98680-05535	
	34-34	98780-05012	
	34-35	98780-05016	
	4-38	98980-03006	
	12-23	99080-05600	
	12-34		
	12-46		
	6-29	99530-10014	

PART NO.	REF. NO.
----------	----------

PART NO.	REF. NO.
----------	----------