


YAMAHA

CONTENTS

PARTS CATALOGUE

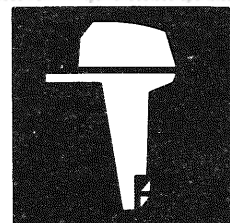

40H '93 (6H4)

2R6H4-300E1

A1

Fig. 1	CYLINDER, CRANKCASE	A3
Fig. 2	CRANKSHAFT, PISTON	A4
Fig. 3	INTAKE	A5
Fig. 4	CARBURETOR	A6
Fig. 5	OIL PUMP (40HMO/40HRO MODEL)	A7
Fig. 6	STARTER	B1
Fig. 7	FUEL 1	B2
Fig. 8	FUEL 2	B3
Fig. 9	TOP COWLING (40HMO/40HRO MODEL)	B4
Fig. 10	BOTTOM COWLING	B5
Fig. 11	BRACKET 1	B6
Fig. 12	BRACKET 2	B7
Fig. 13	STEERING	C1
Fig. 14	CONTROL	C2
Fig. 15	UPPER CASING	C3
Fig. 16	LOWER CASING, DRIVE 1	C4
Fig. 17	LOWER CASING, DRIVE 2	C5
Fig. 18	MAGNETO (40HMO/40HRO MODEL)	C6
Fig. 19	ELECTRICAL	C7
Fig. 20	ALTERNATE 1 (40HEO/40HEPO/40HETO MODEL)	D1
Fig. 21	ALTERNATE 2 (40HEO/40HEPO/40HETO MODEL)	D2
Fig. 22	ALTERNATE 3 (40HEPO MODEL)	D3
Fig. 23	ALTERNATE 4 (40HETO MODEL)	D4
Fig. 24	ALTERNATE 5 (40HETO MODEL)	D5
Fig. 25	ALTERNATE 6 (40HETO MODEL)	D6
Fig. 26	ALTERNATE 7 (40HEPO MODEL)	D7
Fig. 27	ALTERNATE 8 (40HEO/40HEPO/40HETO MODEL)	E1
Fig. 28	ALTERNATE 9 (40HEO/40HEPO/40HETO MODEL)	E2
Fig. 29	ALTERNATE 10 (40HEO/40HEPO MODEL)	E3
Fig. 30	ALTERNATE 11 (40HETO MODEL)	E4
Fig. 31	REMOTE CONTROL	E5
Fig. 32	STEERING GUIDE ATTACHMENT	E6
Fig. 33	REMOTE CONTROL ASSY 1	E7
Fig. 34	REMOTE CONTROL ASSY 2	F1
Fig. 35	OPTIONAL PARTS 1	F2
Fig. 36	OPTIONAL PARTS 2	F3
Fig. 37	OPTIONAL PARTS 3	F4
Fig. 38	OPTIONAL PARTS 4	F5
Fig. 39	OPTIONAL PARTS 5	F6
Fig. 40	REPAIR KIT 1	F7
Fig. 41	REPAIR KIT 2	G1
	NUMERICAL INDEX	

FOREWORD

This Parts Catalogue is related to the parts in use for the Yamaha outboard motor 40H'93 (6H4). When you are ordering replacement parts for the 40H'93(6H4), refer to this Parts Catalogue and quote both part numbers and part names correctly.

1. Modifications or additions which have been made after issue of the Parts Catalogue will be announced in the Yamaha Parts News.
It is advisable that according to the Yamaha Parts News you make necessary corrections to the Parts Catalogue on hand to keep it up-to-date.

2. Abbreviations

The following abbreviations are used in this Parts Catalogue.

- UR Use size (thickness) and/or number as required.
- UN Use as many as you need.
- AP Alternate Parts
- STD Standard
- O/S Over Size

3. Parts, which are to be supplied in the form of assemblies, are listed with an indention of one letter's space, and a dot (.) is put against the name of each part.

EXAMPLE

CARBURETOR ASS'Y

. JET, pilot

. NOZZLE, main

4. Indication of No. of constituent parts for assembly.



The numeral appearing to the right of each constituent part under the description indicates the quantity of such parts for each individual assembly unit.

EXAMPLE

Part No.	Description	Q'ty	Remarks
6E0-85500-70	C.D.I. MAGNETO ASS'Y	1	
6E0-85550-70	. ROTOR ASS'Y	1	
6E0-15723-00-94	. . PULLEY, starter	1	

5. Initial Serial No. and Color Code

Engine Serial No.		
40HMO	S : 187069 and following	
	L : 484867 and following	
40HEO	S : 105012 and following	
	L : 424698 and following	
40HRO	S : 281321 and following	
	L : 591179 and following	
40HEPO	S : 250719 and following	
	L : 563014 and following	
40HETO	S : 230764 and following	
	L : 532534 and following	

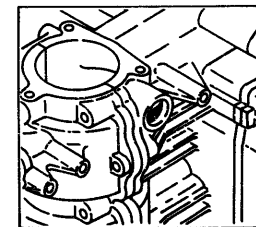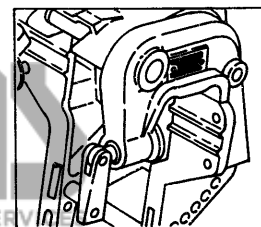

Color Code	Color Name	Abbreviate
EJ	METALLIC MARINE BLUE	MMB

CRANK CYLINDER
ASSY

Fig. 1 CYLINDER. CRANKCASE

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H4-W0090-42-EJ	CRANK CYLINDER ASSY (Ref.No. 2 to 40 and Fig. 2, Ref.No. 1 to 19)	1	21	6H4-11111-01-94	HEAD, cylinder 1	1
2	6H4-15100-12-94	CRANKCASE ASSY	1	22	6H4-11181-A0	GASKET, cylinder head 1	1
3	650-11370-00	.CHECK VALVE ASSY	3	23	90340-14M00	PLUG, straight screw	1
4	624-14485-00	.PIPE, joint	2	24	90430-14115	GASKET	1
5	6H4-11372-00	.NIPPLE, hose	1	25	6H4-11191-01-9M	COVER, cylinder head 1	1
6	624-14485-00	.PIPE, joint	1	26	6H4-11193-A1	GASKET, head cover 1	1
7	688-11370-00	.CHECK VALVE ASSY	1	27	90119-08M29	BOLT, with washer	14
8	90445-07M46	HOSE	1	28	6E5-12411-20	THERMOSTAT	1
9	90445-07M27	HOSE	1	29	6H4-12413-00-9M	COVER, thermostat	1
10	90445-07M24	HOSE	1	30	6J8-12414-A0	GASKET, cover	1
11	90467-06016	CLIP	6	31	97313-06025	BOLT	2
12	90445-07MA3	HOSE	1	32	92990-06600	WASHER, plate	2
13	90467-06016	CLIP	2	33	6H4-41113-00-9M	OUTER COVER, exhaust	1
14	90119-08M19	BOLT, with washer	8	34	6H4-41111-00-9M	INNER COVER, exhaust	1
15	90119-06M13	BOLT, with washer	6	35	6H4-41112-A0	GASKET, exhaust inner cover	1
16	93606-12019	PIN, dowel	2	36	6H4-41114-A0	GASKET, exhaust outer cover	1
17	6H4-11119-00	HANGER, engine	1	37	90445-09M37	HOSE	1
18	97313-06014	BOLT	2	38	90467-08004	CLIP	2
19	688-11325-00	ANODE	2	39	97013-06035	BOLT	14
20	98680-04016	SCREW, oval head	2	40	92990-06600	WASHER, plate	14
				41	94702-00271	PLUG, spark (NGK BR7HS 10)	3

A3

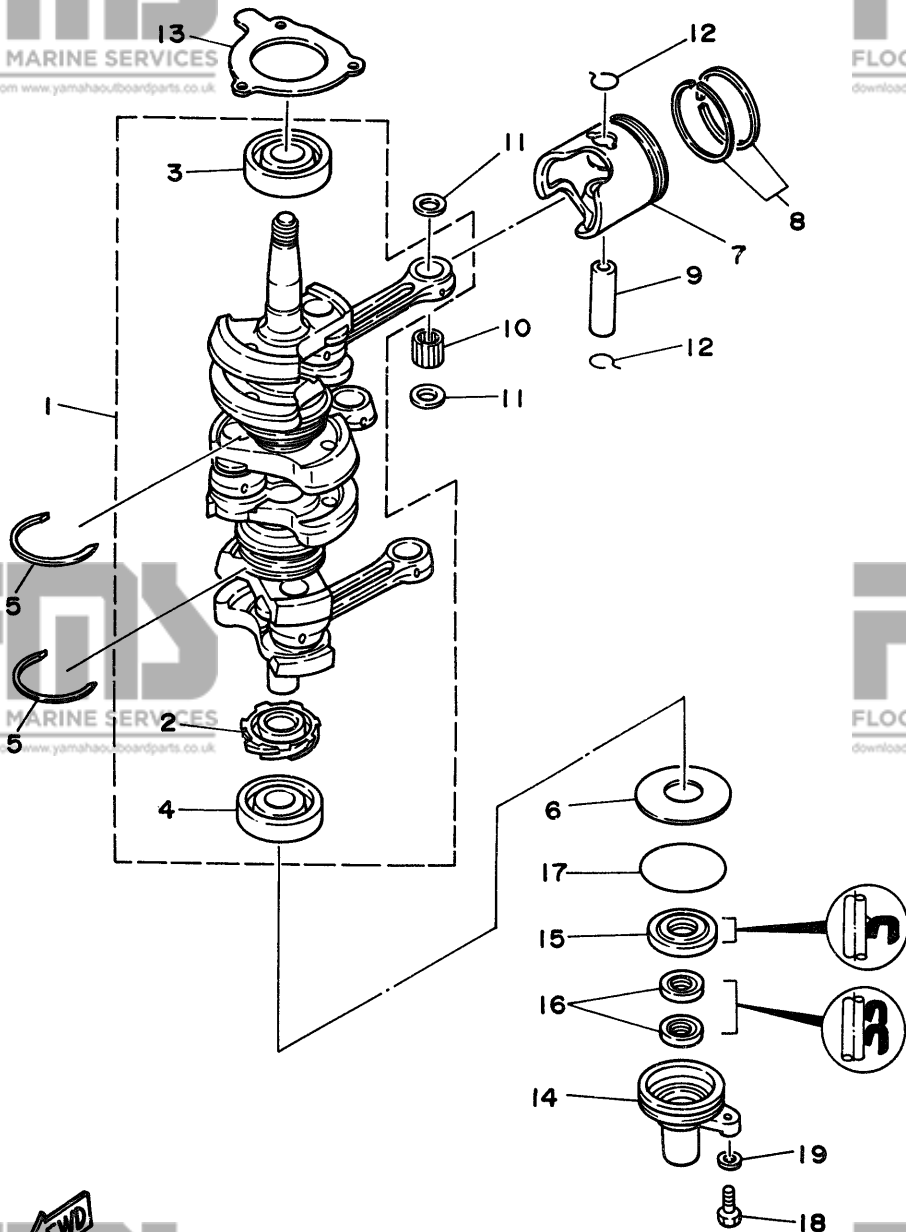


Fig. 2 CRANKSHAFT. PISTON

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H4-11400-14	CRANKSHAFT ASSY	1	9	648-11633-00	PIN, piston	3
2	6H4-11536-00	.GEAR, drive	1	10	93602-20M02	PIN, dowel	93
3	93306-305U8	.BEARING	1	11	6H4-11641-00	WASHER, piston pin	6
4	93306-305U8	.BEARING	1	12	6H4-11634-01	CLIP, piston pin	6
5	93440-62057	CIRCLIP	2	13	6H4-15369-A1	GASKET, oil seal housing	1
6	90201-50306	WASHER, plate	1	14	6H4-15396-02-5B	HOUSING, oil seal	1
7	6H4-11631-01-95	PISTON (STD)	3	15	93102-25M28	OIL SEAL	1
	6H4-11635-01	PISTON (0.25MM O/S)	3 AP	16	93104-16M04	OIL SEAL	2
	6H4-11636-01	PISTON (0.50MM O/S)	3 AP	17	93210-57M09	O-RING	1
8	6H4-11601-00	PISTON RING SET (STD)	3	18	97313-06020	BOLT	1
	6H4-11601-10	PISTON RING SET (1ST O/S)	3 AP	19	92990-06600	WASHER, plate	1
	6H4-11601-20	PISTON RING SET (2ND O/S)	3 AP				

Fig. 3 INTAKE

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H5-13610-00	REED VALVE ASSY	3	15	6H3-14457-01	SEAL	3
2	6H4-W0004-00	.REED SET	1	16	97895-06040	SCREW, pan head	2
3	98580-05016	SCREW, pan head	6	17	97895-06055	SCREW, pan head	2
4	92990-05600	WASHER, plate	6	18	90209-06M05	WASHER	4
5	6H4-13641-30-94	MANIFOLD 1 (40HMO/40HRO Model)	1 UR	19	6H4-41257-00	ROD, choke 2 (40HMO/40HRO Model)	2
	6H4-13641-12-94	MANIFOLD 1 (40HEO/40HEPO/40HETO Model)	1 UR	20	661-41262-02	JOINT, choke lever (40HMO/40HRO Model)	4
6	6H1-14485-00	.PIPE, joint (40HMO/40HRO Model)	3 UR	21	6H4-41271-01	KNOB, choke (40HMO/40HRO Model)	1
	6H1-14485-00	.PIPE, joint (40HEO/40HEPO/40HETO Model)	4 UR	22	6H4-41259-01	ROD, choke 3 (40HMO/40HRO Model)	1
7	6H4-13624-01-94	PLATE, reed valve	1	23	6J8-41262-00	JOINT, choke lever (40HMO/40HRO Model)	1
8	6H4-13621-A1	GASKET, valve seat	2	24	6J8-41274-00	GROMMET 2 (40HMO/40HRO Model)	1
9	97313-06020	BOLT	12	25	6H4-41217-01	ROD, accel. lever (40HMO/40HRO Model)	1
10	92990-06600	WASHER, plate	12	26	689-41273-00	GROMMET (40HMO/40HRO Model)	1 UR
11	6H4-14198-01	GASKET	3		6G1-42748-00	GROMMET (40HEO/40HEPO/40HETO Model)	1 UR
12	6H4-14406-00	HINGE	1	27	90445-07M24	HOSE (40HEO/40HEPO/40HETO Model)	1
13	97313-06095	BOLT	6	28	90467-06016	CLIP (40HEO/40HEPO/40HETO Model)	2
14	6H4-14431-01	SILENCER, intake 1	1				

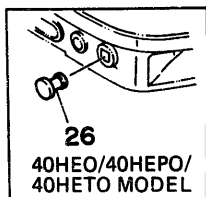
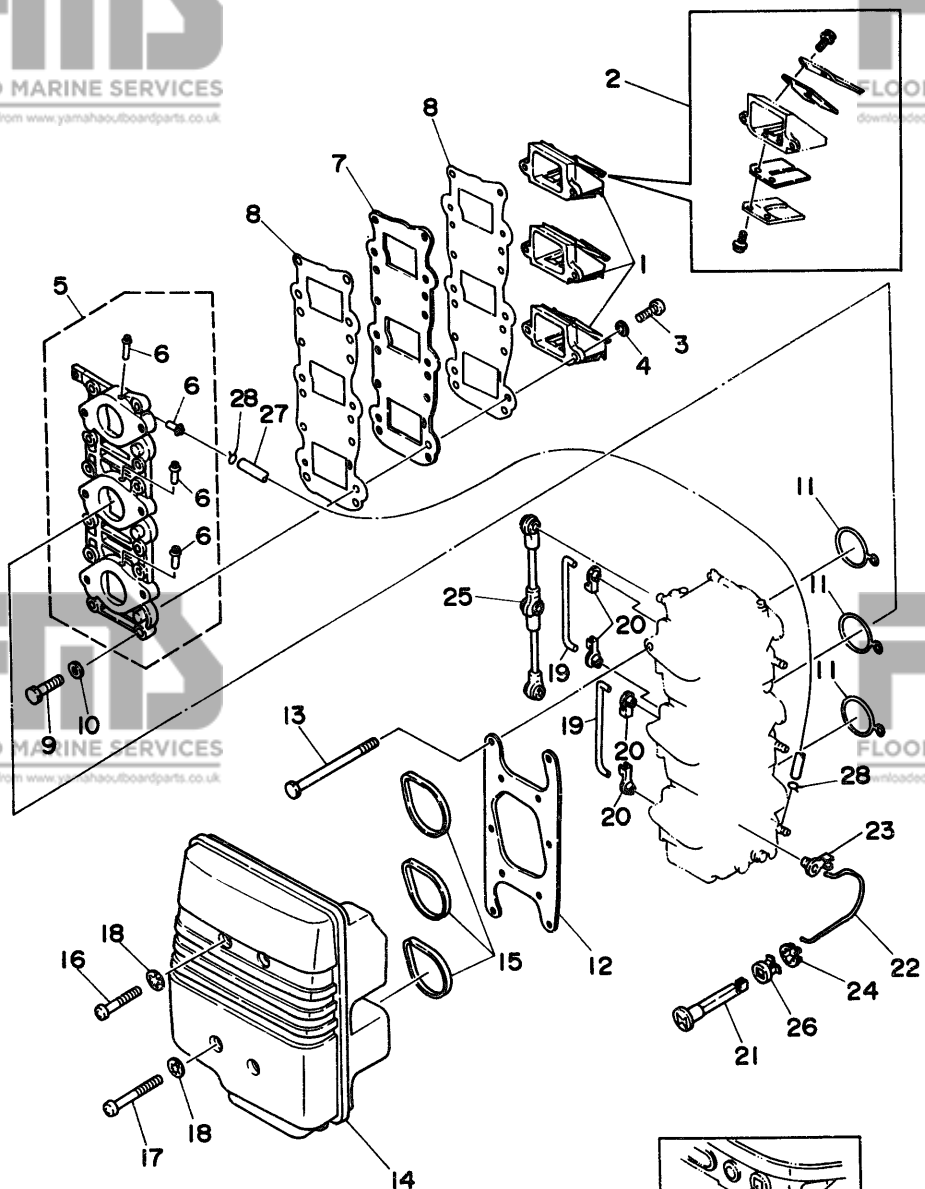


Fig. 4 CARBURETOR

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H4-14301-0B	CARBURETOR ASSY 1 (40HMO/40HRO Model)	1 UR	21	676-14943-30	.JET, main (#115) (Upper/Lower) (40HMO/40HRO Model)	2 UR
	6H4-14301-12	CARBURETOR ASSY 1 (40HEO/40HEPO/40HETO Model)	1 UR		676-14943-31	.JET, main (#120) (Upper/Lower) (40HEO/40HEPO/40HETO Model)	2 UR
2	6H4-14302-0B	CARBURETOR ASSY 2 (40HMO/40HRO Model)	1 UR		676-14943-31	.JET, main (#120) (Center) (40HMO/40HRO Model)	1 UR
	6H4-14302-12	CARBURETOR ASSY 2 (40HEO/40HEPO/40HETO Model)	1 UR		676-14943-32	.JET, main (#125) (Center) (40HEO/40HEPO/40HETO Model)	1 UR
3	6H4-14303-0B	CARBURETOR ASSY 3 (40HMO/40HRO Model)	1 UR	22	676-14966-00	.CAP	3
	6H4-14303-12	CARBURETOR ASSY 3 (40HEO/40HEPO/40HETO Model)	1 UR	23	6H4-14948-11	.JET (#60)	3
4	97980-04114	.SCREW, with washer	21	24	679-14555-00	.SPRING	3
5	6K5-14592-00	.SCREW	3	25	692-14923-00	.SCREW, pilot	3
6	90201-05652	.WASHER, plate	3	26	6H4-14590-00	.NEEDLE VALVE ASSY	3
7	6H1-14523-00	.SCREW, stop	1	27	93210-04228	.O-RING	3
8	90501-10326	.SPRING, compression	1	28	6H4-14147-00	.O-RING	3
9	6H2-14578-00	.COLLAR	1	29	6H4-24452-01	.COVER (40HEO/40HEPO/40HETO Model)	1
10	6H4-14548-00	.PIN, float arm	3	30	6H4-14567-00	.SCREW (40HEO/40HEPO/40HETO Model)	4
11	98580-04008	.SCREW, pan head	3	31	6H4-24412-00	.BODY 1 (40HEO/40HEPO/40HETO Model)	1
12	663-14159-00	.CLIP	3	32	6H4-14592-10	.SCREW (40HEO/40HEPO/40HETO Model)	2
13	676-14186-00	.PIN, float	3	33	6H4-14561-00	.O-RING (40HEO/40HEPO/40HETO Model)	1
14	6H4-14985-01	.FLOAT	3	34	6H4-14562-00	.O-RING (40HEO/40HEPO/40HETO Model)	1
15	6H4-14146-00	.PLATE	3	35	6H4-24413-00	.BODY 2 (40HEO/40HEPO/40HETO Model)	1
16	6H4-14984-00	.GASKET, float chamber	3	36	6H4-24486-00	.O-RING (40HEO/40HEPO/40HETO Model)	1
17	6H4-14980-00	.BODY, float chamber (40HMO/40HRO Model)	3 UR	37	6L5-21421-00	.VALVE, check (40HEO/40HEPO/40HETO Model)	2
	6H4-14980-00	.BODY, float chamber (Upper/Center) (40HEO/40HEPO/40HETO Model)	2 UR	38	98980-03006	.SCREW, bind (40HEO/40HEPO/40HETO Model)	2
	6H4-14980-10	.BODY, float chamber (Lower) (40HEO/40HEPO/40HETO Model)	1 UR	39	95380-03600	.NUT (40HEO/40HEPO/40HETO Model)	2
18	6H3-14992-00	.SCREW, drain	3	40	97980-05310	.SCREW, with washer (40HEO/40HEPO/40HETO Model)	2
19	93210-04230	.O-RING	3	41	6H4-86120-00	.SOLENOID VALVE ASSY (40HEO/40HEPO/40HETO Model)	1
20	6H4-14947-07	.JET, needle	3	42	6H5-24434-00	.GASKET, body (40HEO/40HEPO/40HETO Model)	2
				43	6H4-24411-00	.DIAPHRAGM (40HEO/40HEPO/40HETO Model)	1

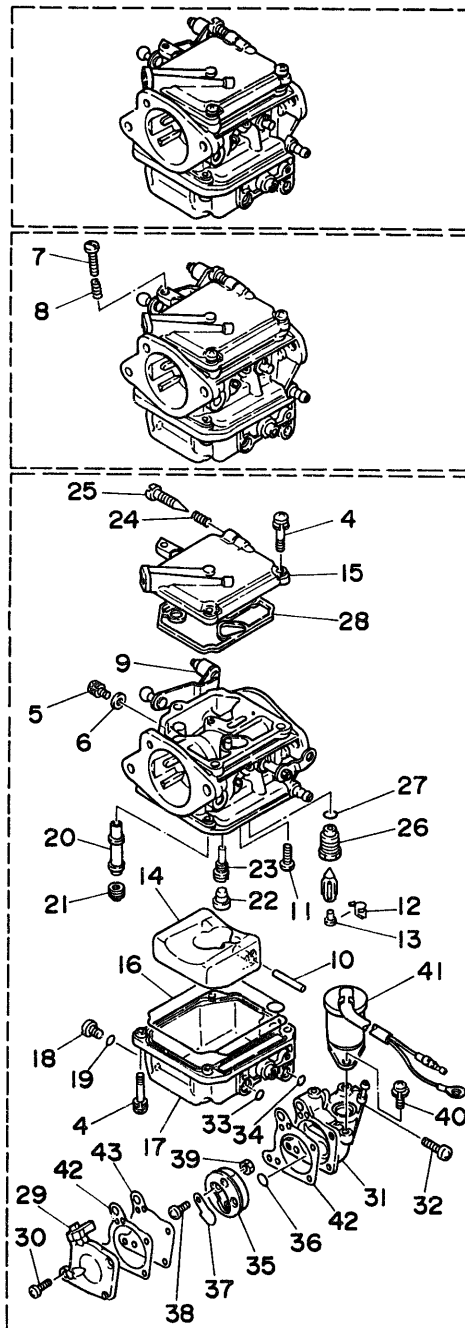
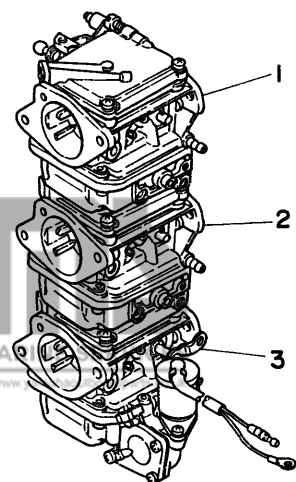


Fig. 5 OIL PUMP (40HMO/40HRO MODEL)

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	90201-08M93	WASHER, plate	1	23	90467-08004	CLIP	2
2	6H4-11537-01	GEAR, driven	1	24	6H4-21773-00	GROMMET	1
3	6H1-13117-01	COLLAR, distance	1	25	6H1-21756-00	NET, filter	1
4	93210-13595	O-RING	1	26	6H4-21770-00	OIL TANK CAP ASSY	1
5	6H4-13200-04	OIL INJECTION PUMP ASSY	1	27	6H4-24633-00	CHAIN, ball	1
6	93210-19MA7	O-RING	1	28	6H4-24634-00	HOOK, chain ball	1
7	90109-06M39	BOLT	1	29	6H4-21757-00	WASHER, special 1	1
8	90109-06M40	BOLT	1	30	90445-09M37	HOSE	1
9	90445-07M44	HOSE	1	31	90467-08004	CLIP	2
10	90445-07M23	HOSE	1	32	6A0-82317-00	DAMPER, ignition coil	3
11	90445-07MA6	HOSE	1	33	624-42542-00	PIPE	3
12	90468-07M02	CLIP	3	34	90119-06M65	BOLT, with washer	2
13	90468-07M02	CLIP	3	35	90119-06M67	BOLT, with washer	1
14	90464-07M20	CLAMP	1	36	90445-07M87	HOSE	3
15	6H4-41241-01	ROD, link	1	37	6E9-13183-70	VALVE, check	3
16	6H1-41237-00	JOINT, link	1	38	90468-07M02	CLIP	6
17	90202-05088	WASHER, plate	1	39	90445-11M17	HOSE	1
18	90468-05M03	CLIP	1	40	90446-10M01	HOSE	2
19	95380-05600	NUT	1	41	90467-10M04	CLIP	1
20	6R5-41237-00	JOINT, link	1	42	6J8-21744-00	BREATHER	1
21	6H4-21707-12	OIL TANK COMP.	1	43	90445-11M23	HOSE	1
22	90446-09M08	HOSE	1	44	6H4-85720-21	OIL LEVEL GAUGE ASSY	1


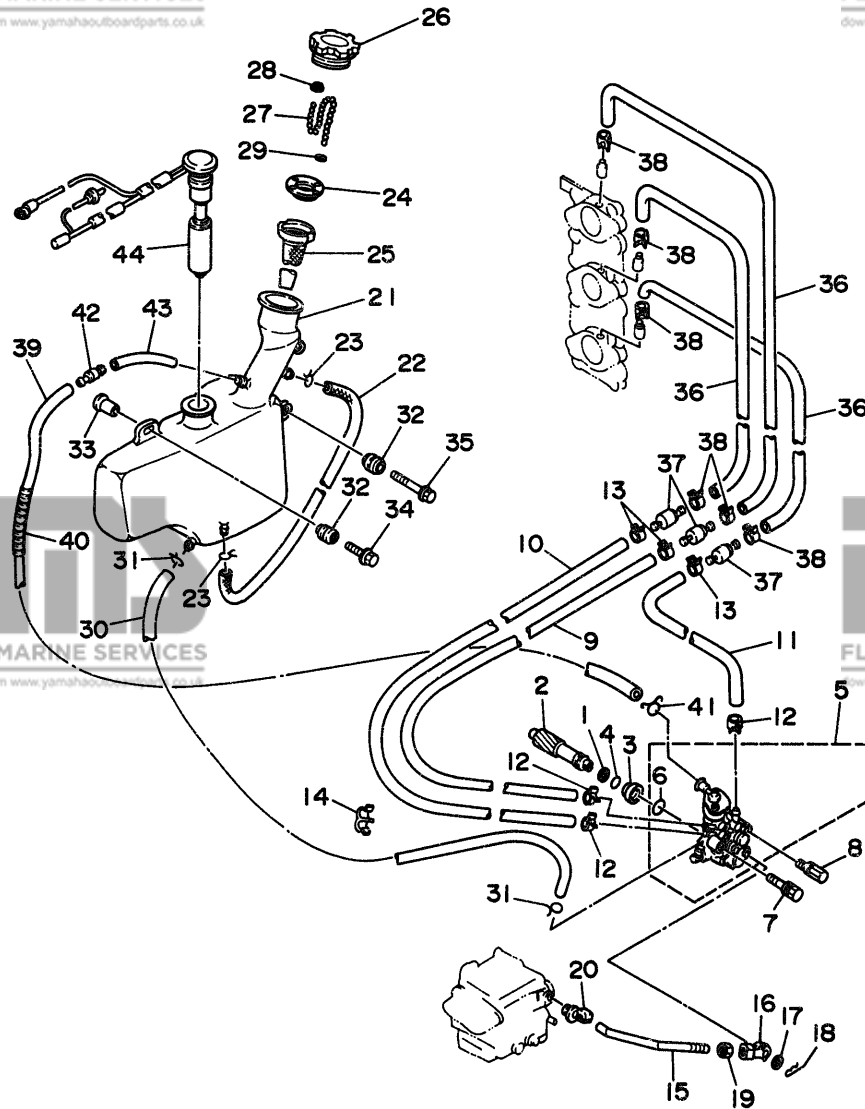


Fig. 6 STARTER

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H4-15710-02-94	STARTER ASSY	1	25	93430-06M02	.CIRCLIP	1
2	6H4-15711-02-94	.CASE, starter	1	26	6H4-15705-00	.SPRING, drive pawl	1
3	91690-40018	.PIN, spring	1	27	97395-06035	BOLT	3
4	6H4-15758-00-94	.GUIDE, rope	1	28	92990-06600	WASHER, plate	3
5	97395-06016	.BOLT	2	29	99530-10014	PIN, dowel	1
6	92990-06600	.WASHER, plate	2	30	6H4-15771-01-94	STAY 1	1
7	6H4-15762-00	.SEAL, rubber 2	1	31	97313-08030	BOLT	2
8	6A0-15789-00	.DAMPER	1	32	92990-08600	WASHER, plate	2
9	6F5-15752-00	.ROLLER, wire	1	33	6H4-15772-02-94	STAY 2	1
10	90387-06M69	.COLLAR	1	34	97313-03025	BOLT	3
11	97313-06030	.BOLT	1	35	92990-06600	WASHER, plate	3
12	92990-06600	.WASHER, plate	1	36	6H4-15723-01-94	PULLEY, starter	1
13	95380-06600	.NUT	1	37	6J8-81365-A0	GASKET, hole cover	1
14	6H4-15787-01	.ADAPTOR	1	38	97313-08020	BOLT	3
15	689-15755-01	.HANDLE, starter	1	39	92990-08600	WASHER, plate	3
16	6F5-15779-02	.COVER	1	40	6H4-15774-10	STAY 4	1
17	*	.WIRE (L:2095mm)	1	41	97395-06012	BOLT	1
18	6H4-15714-00	.DRUM, sheave	1	42	6H4-15746-00	ARM	1
19	90510-08002	.SPRING, spiral	1	43	90109-06M04	BOLT	1
20	6H4-15717-00	.SHAFT, starter	1	44	6H4-15770-10	CABLE COMP., starter stop	1
21	90201-06060	.WASHER, plate	1	45	656-15748-00	PLUNGER, starter stop	1
22	97313-06020	.BOLT	1	46	90501-10227	SPRING, compression	1
23	95303-06600	.NUT	1	47	6H4-15747-10	LINK	1
24	676-15741-03	.PAWL, drive	1	48	661-41262-02	JOINT, choke lever	2

*Cut from 50m rolls, parts No. 90890-44373, cutting length 2.095m.

Fig. 7 FUEL 1

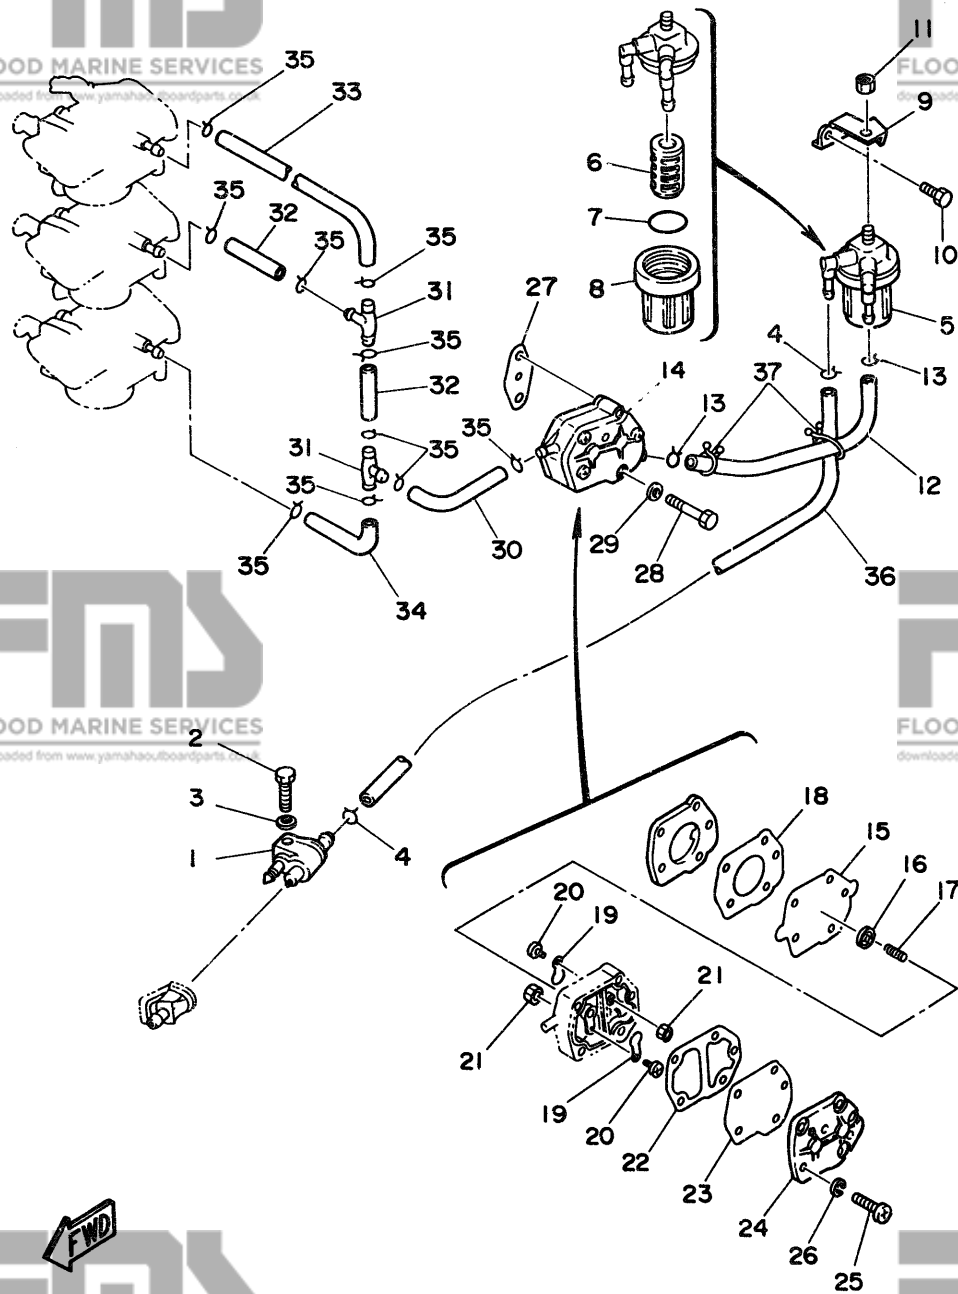

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6G1-24304-02	FUEL PIPE JOINT COMP. 1	1	20	6A0-14325-00	.SCREW, pan head	2
2	97395-06025	BOLT	1	21	95380-03600	.NUT	2
3	92990-06600	WASHER, plate	1	22	648-24435-02	.GASKET, body 2	1
4	90467-08004	CLIP	2	23	663-24411-00	.DIAPHRAGM	1
5	655-24560-01	FILTER ASSY	1	24	648-24413-01	.BODY 2	1
6	6F5-24563-00	.ELEMENT, filter	1	25	98580-05530	.SCREW, pan head	3
7	93210-37M25	.O-RING	1	26	92990-05100	.WASHER, spring	3
8	655-24521-01	.CUP, filter	1	27	650-24431-A0	GASKET, fuel pump 1	1
9	6H4-24566-01	BRACKET, filter	1	28	97395-06040	BOLT	2
10	97013-06012	BOLT	1	29	92990-06600	WASHER, plate	2
11	95380-08600	NUT	1	30	90445-09063	HOSE	1
12	6H4-24314-00	PIPE 4	1	31	688-24378-00	PIPE, joint 4	2
13	90467-08004	CLIP	2	32	90445-09057	HOSE	2
14	6A0-24410-05	FUEL PUMP ASSY	1	33	6H4-24313-00	PIPE 3	1
15	648-24411-00	.DIAPHRAGM	1	34	6H4-24312-00	PIPE 2	1
16	648-24424-00	.SEAT, spring	1	35	90467-08004	CLIP	10
17	648-24423-00	.SPRING, diaphragm	1	36	6H4-24311-00	PIPE, fuel 1	1
18	648-24434-01	.GASKET, body	1	37	90464-16039	CLAMP	3
19	6A0-24421-01	.VALVE, check	2				

Fig. 8 FUEL 2

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6Y1-W2420-62-24	FUEL TANK ASSY	1	# 12	90445-11M06	.HOSE (L:2050mm)	1
2	6Y1-24246-00	.GRAPHIC, side	2	13	6Y1-24360-02	.PRIMER PUMP ASSY	1
3	6Y1-24257-00	.GRAPHIC	1	# 14	90445-11M05	.HOSE (L:850mm)	1
4	6Y1-24260-02	.FUEL METER ASSY	1	15	650-24351-51	.BAND 1	4
5	6Y1-24268-00	.GASKET, fuel meter	1	16	6G1-24305-00	.FUEL PIPE JOINT COMP. 2	1
6	98586-05016	.SCREW, pan head	4	17	93210-08287	..O-RING	1
7	6Y1-24329-00	.SEAL	4	18	6Y1-24305-01	.FUEL PIPE JOINT COMP. 2	1
8	6Y1-24610-00	.CAP ASSY	1	19	93210-08287	..O-RING	1
9	6Y1-24167-00	.STRAINER	1	20	656-W2810-02	TOOL KIT	1
10	6Y1-24256-80	.GRAPHIC, fuel tank 9	1	21	6E0-28193-00-94	PLUG, water check	1
11	6Y1-24306-05	FUEL PIPE COMP. 1	1				

Also available in 30m rolls. (Parts No. 90890-56878)

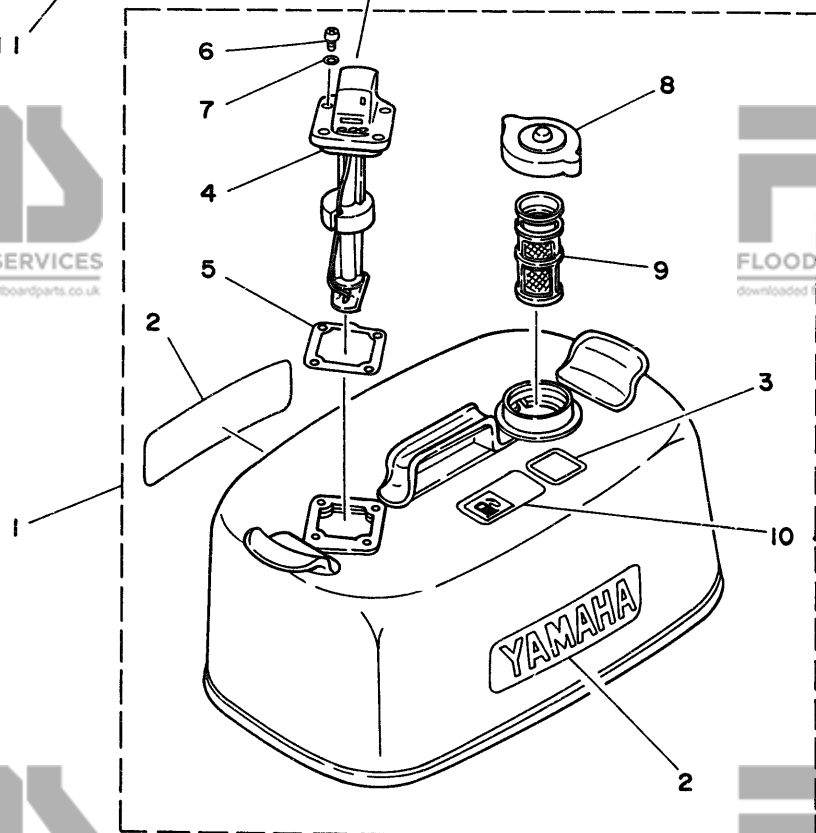
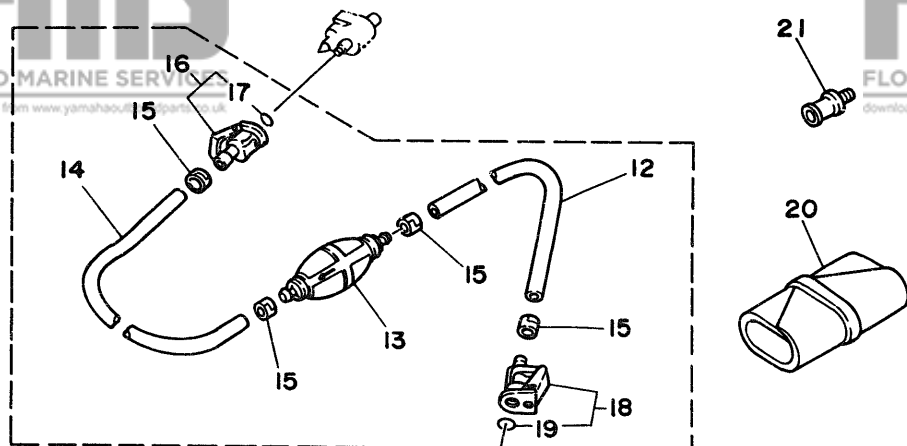


Fig. 9 TOP COWLING (40HMO/40HRO MODEL)

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H4-42630-NO-EJ	TOP COWLING ASSY (40HRO Model)	1 UR	7	90119-06M99	.BOLT, with washer	4
	6H4-42630-VO-EJ	TOP COWLING ASSY (40HMO Model)	1 UR	8	6H4-42686-02	.EMBLEM, front	1
2	6H4-42615-00	.SEAL	1	9	6H4-42687-01	.EMBLEM, rear	1
3	6H4-42651-00	.HOOK	1	10	6H4-W0070-N2	.GRAPHIC SET (40HRO Model)	1 UR
4	6H4-42652-00	.HOOK	1		6H4-W0070-V1	.GRAPHIC SET (40HMO Model)	1 UR
5	90266-04M01	.RIVET	4	11	6H4-15761-00	.SEAL, rubber 1	1
6	6H4-42613-00-EJ	.MOLDING, air duct	1				

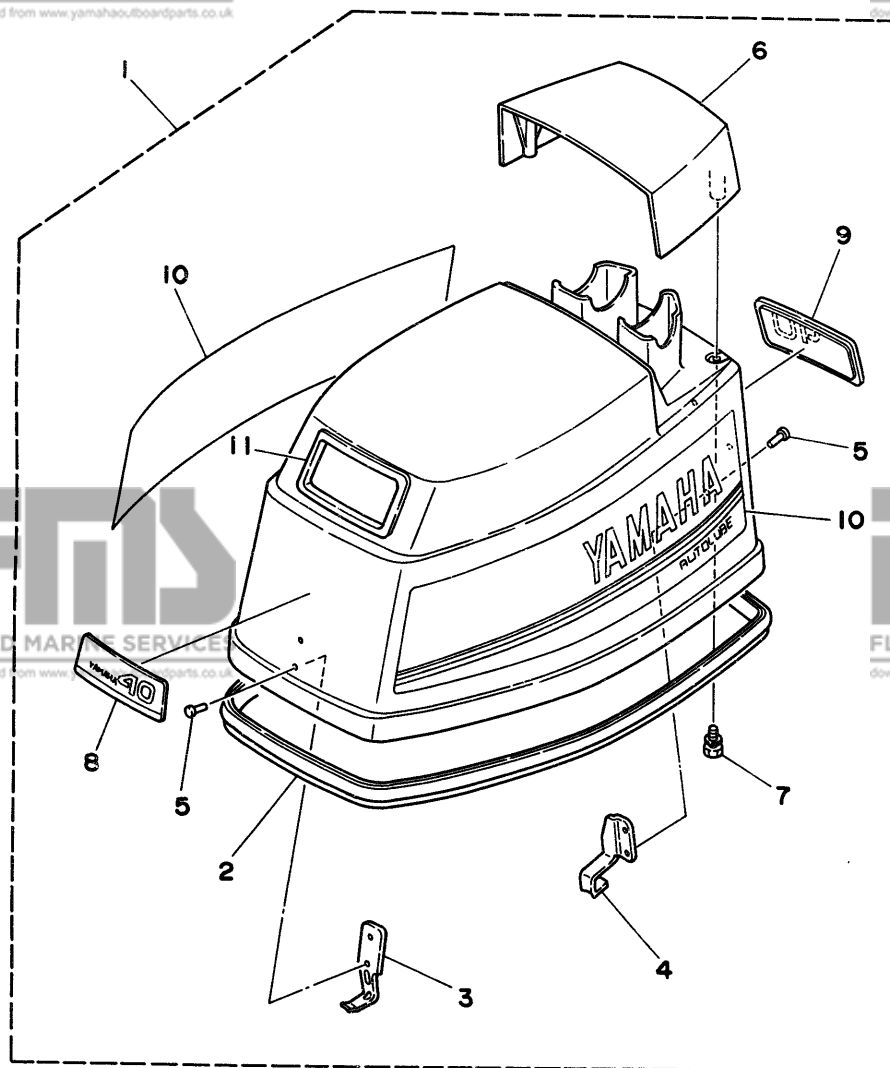


Fig. 10 BOTTOM COWLING

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H4-42711-05-EJ	COWLING, bottom	1 UR	17	6H4-42724-20	GROMMET	1
	6H4-42711-23-EJ	COWLING, bottom (40HETO Model)	1 UR			(40HEO/40HEPO/40HETO Model)	1 UR
2	90338-05M03	PLUG (40HMO/40HEO/40HRO Model)	1	18	6E5-44391-00	NIPPLE, hose	1
3	6H4-42815-00	LEVER, clamp	1	19	6H4-42716-00	RUBBER, seal 1	1
4	90206-12052	WASHER, wave	1	20	682-42727-00	GROMMET	1
5	90386-12069	BUSH	2	21	90480-09M21	GROMMET	4
6	6H4-42816-00	LEVER, clamp	1	22	90387-06M41	COLLAR	4
7	90201-06M02	WASHER, plate	1	23	90201-06416	WASHER, plate	4
8	97313-06010	BOLT	1	24	97313-06030	BOLT	4
9	6H4-42726-00	GROMMET	1 UR	25	6H4-42741-20	APRON	1
	6H5-42726-00	GROMMET (40HEPO Model)	1 UR	26	97395-06016	BOLT	4
	6H1-42726-10	GROMMET (40HETO Model)	1 UR	27	92990-06600	WASHER, plate	4
10	6H4-48531-00-94	BRACKET, remote control 1	1 UR	28	6E9-82575-01	ENGINE STOP SWITCH ASSY	1
	6H4-48531-10-94	BRACKET, remote control 1 (40HETO Model)	1 UR	29	682-82556-00	.STOPPER	1
11	6H4-48532-00-94	BRACKET, remote control 2	1 UR	30	6H4-82537-00	ATTACHMENT, stop switch	1
	6H4-48532-10-94	BRACKET, remote control 2 (40HETO Model)	1 UR	31	6J8-85410-00	EMERGENCY SIGNAL LIGHT ASSY	1
12	97395-05016	BOLT	1	32	90465-18147	CLAMP	1
13	92990-05600	WASHER, plate	1	33	6H4-85415-10	MARK, signal lamp	1
14	6H3-42727-00	GROMMET	1	34	6E5-24367-01	CLAMP, fuel pipe 2 (40HETO Model)	1
15	97395-06020	BOLT	2	35	90157-06M01	SCREW, pan head (40HETO Model)	1
16	92990-06600	WASHER, plate	2	36	92990-06600	WASHER, plate (40HETO Model)	1
17	6H4-42724-00	GROMMET	1 UR	37	6H4-42726-40	GROMMET (40HRO Model)	1
				38	6F5-84340-00	SOCKET CORD ASSY (40HRO Model)	1

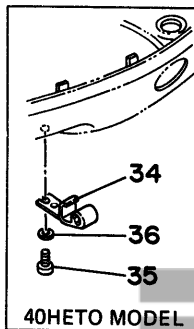
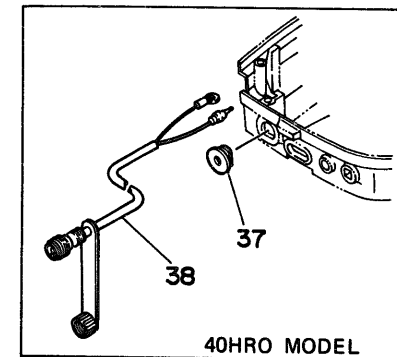
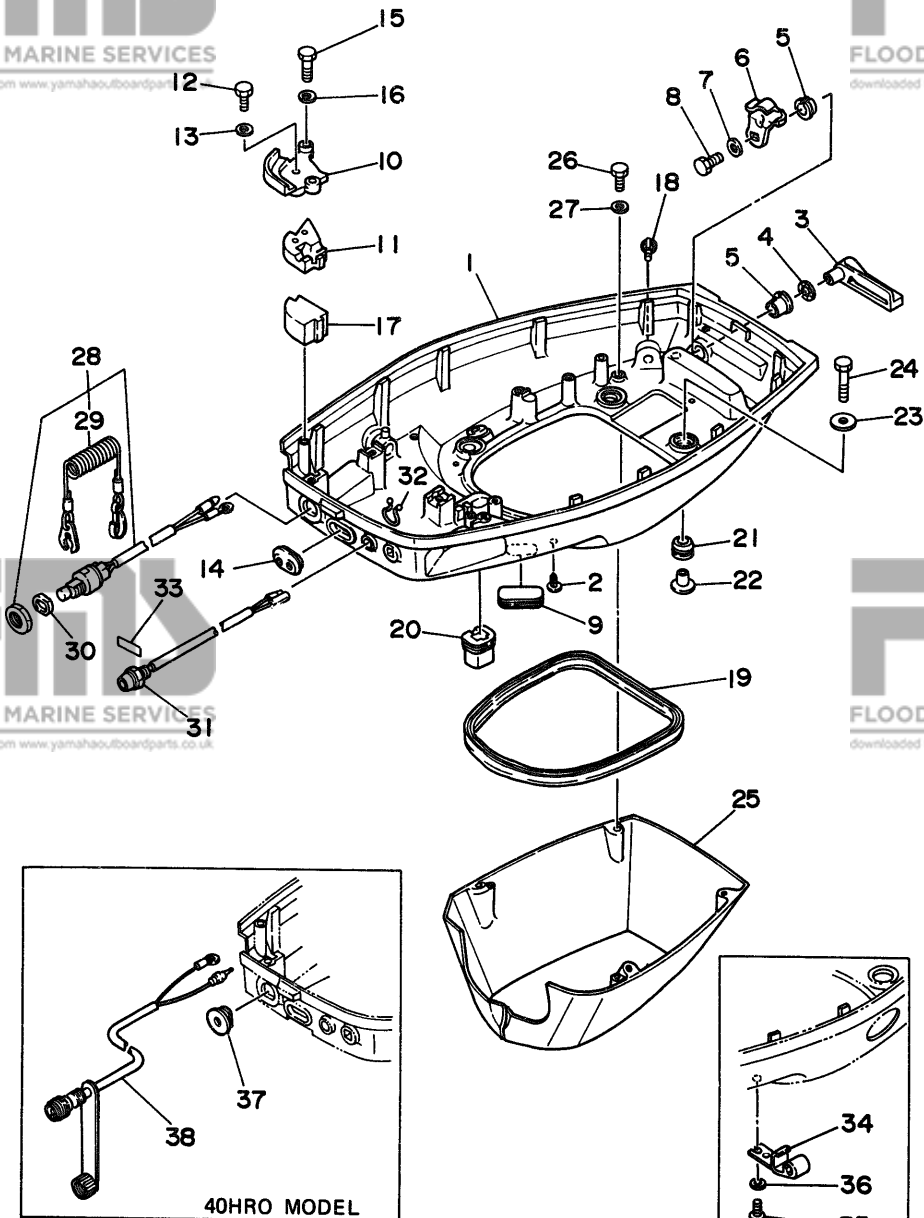


Fig. 11 BRACKET 1

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H4-43111-04-EJ	BRACKET, clamp	1	28	90386-30M78	BUSH	1
2	6H4-43112-04-EJ	BRACKET, clamp	1	29	93210-29M94	O-RING	2
3	6E5-82148-00	WIRE, lead 4	1	30	90386-30M60	BUSH	1
4	97895-06008	SCREW, pan head	1	31	6H4-44551-01-EJ	HOUSING, lower mount rubber	1
5	616-43118-00-EJ	HANDLE, transom clamp	2	32	93410-28M06	CIRCLIP	1
6	90243-04M00	PIN	2	33	6H4-42121-02-5B	BRACKET	1
7	90149-14M12	SCREW	2	34	90116-10175	BOLT, stud	2
8	648-43114-01	PAD, transom clamp	2	35	90185-10051	NUT, self-locking	2
9	6J8-43131-01	BOLT, clamp bracket	1	36	6H4-44557-00	MOUNT DAMPER, lower front (Short)	1 UR
10	90386-22M69	BUSH	2		6H4-44557-10	MOUNT DAMPER, lower front (Long)	1 UR
11	6J8-43113-01	PLATE, clamp bracket	1	37	6H4-44553-01	COVER, lower mount	1
12	90201-22428	WASHER, plate	2	38	97395-08025	BOLT	4
13	90185-22043	NUT, self-locking	2	39	92990-08600	WASHER, plate	4
14	6G5-43145-00	CAP, clamp bracket	2	40	97395-10060	BOLT	2
15	90101-08339	BOLT	1	41	92990-10600	WASHER, plate	2
16	90387-08M03	COLLAR	1	42	6H4-82127-00	WIRE, lead 2	1
17	92990-08600	WASHER, plate	1	43	6H4-44514-00	MOUNT DAMPER, upper side	2
18	95380-08600	NUT	1	44	90101-08M86	BOLT	2
19	6J8-43311-04-EJ	BRACKET, swivel	1	45	90201-09425	WASHER, plate	2
20	93700-06M03	NIPPLE, grease	3	46	90185-08045	NUT, self-locking	2
21	663-45119-00	CAP, grease nipple	3	47	6H4-44511-00-94	COVER, upper mount	1
22	6J8-42528-00	PLATE, friction	1	48	97090-08035	BOLT	3
23	689-43373-01	SEAL, damper	1	49	92990-08100	WASHER, spring	3
24	90105-06M18	BOLT, washer based	1	50	90101-10M58	BOLT	4
25	6H4-42510-12-EJ	STEERING BRACKET ASSY	1	51	92995-10600	WASHER	8
26	90386-30M77	BUSH	2	52	90201-12426	WASHER, plate	4
27	90201-30M00	WASHER, plate	1	53	95380-10600	NUT	8



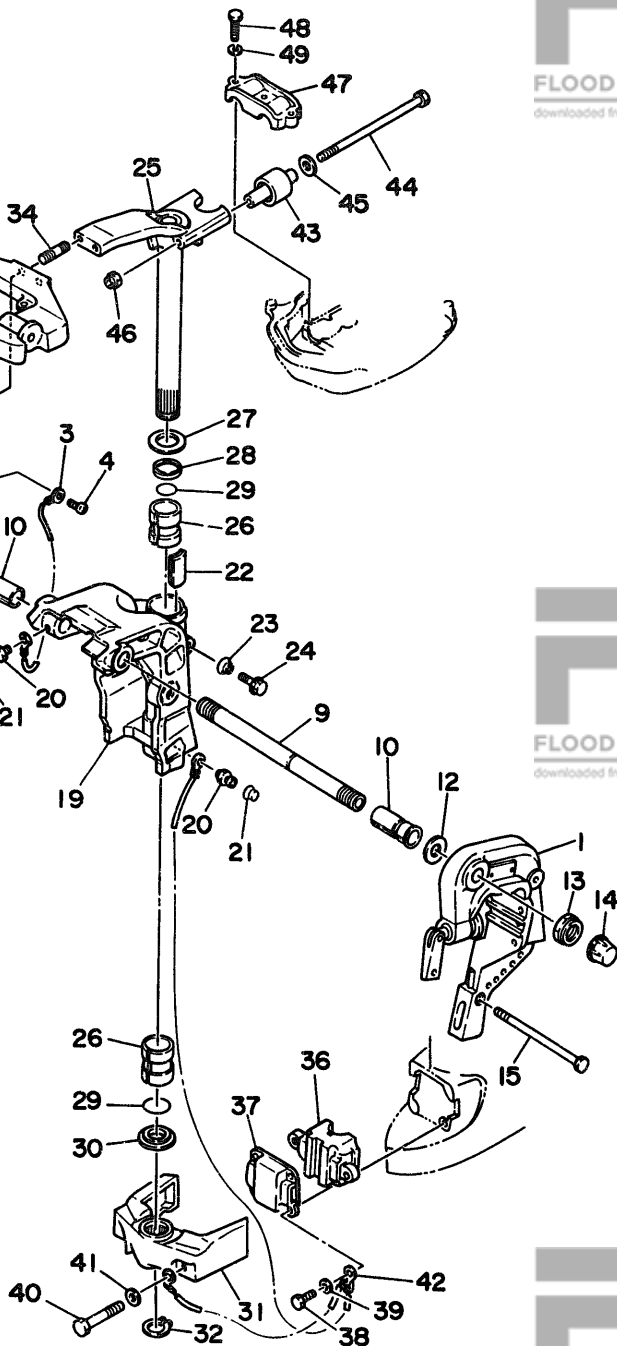


Fig. 12 BRACKET 2

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H4-43160-01	TILT ROD ASSY	1	27	6J8-43631-00	LEVER, tilt	1
2	676-43165-00	.PLATE, tilt lock	1	28	6J8-43633-00	COVER, tilt lever	1
3	91690-30010	.PIN, spring	1	29	90508-18M24	SPRING, torsion	1 UR
4	90502-10M04	SPRING, conical	1	30	90508-18M23	SPRING, torsion (For Shallow Water Drive)	1 UR
5	6J8-43181-01	LEVER, tilt stop	1	31	6J8-43641-00	LEVER, tilt	1
6	90506-12M25	SPRING, tension	1	32	90249-06M23	PIN	1 UR
7	90249-12M28	PIN	1	33	90249-06M24	PIN (For Shallow Water Drive)	1 UR
8	93430-10M00	CIRCLIP	1	34	6J8-43617-00	ROD, tilt lock	1
9	90202-12031	WASHER, plate	2	35	99080-05600	CIRCLIP	1
10	682-43318-01	COVER	1	36	6J8-43681-01	LEVER, shallow water drive	1
11	6J8-43627-00	STOPPER	2	37	6J8-43673-00	WASHER 1	2
12	90249-12M27	PIN	2	38	6J8-43631-10	LEVER, tilt	1
13	93430-10M00	CIRCLIP	2	39	6J8-43633-00	COVER, tilt lever	1
14	90202-12031	WASHER, plate	2	40	6H4-43616-00	ROD, tilt lock	1
15	90206-12M16	WASHER, wave	2	41	6J8-43641-00	LEVER, tilt	1
16	6J8-43614-00	PLATE, tilt lock	1	42	6J8-43617-10	ROD, tilt lock	1
17	6J8-43615-00	PLATE, tilt lock	1	43	6J8-43186-00	LEVER	1
18	6J8-43613-01	ARM, tilt lock	1	44	6J8-43187-00	LEVER 2	1
19	6H4-43659-00	SHAFT, reverse lock	1	45	90508-25M21	SPRING, torsion	1
20	6J8-43611-01	SHAFT, tilt lock	1	46	90249-07M25	PIN	1
21	90387-07M64	COLLAR	1	47	99080-05600	CIRCLIP	1
22	93430-06M02	CIRCLIP	1	48	6J8-41262-00	JOINT, choke lever	3
23	99080-05600	CIRCLIP	1	49	6J8-43616-10	ROD, tilt lock	1
24	90506-32M22	SPRING, tension	2		90508-20M22	SPRING, torsion	1
25	6H4-43674-00	WASHER (Without Shallow water Drive)	2				
26	91490-20010	PIN, cotter	2				

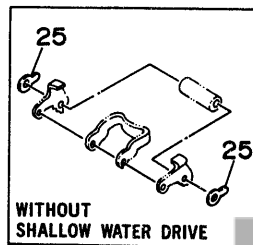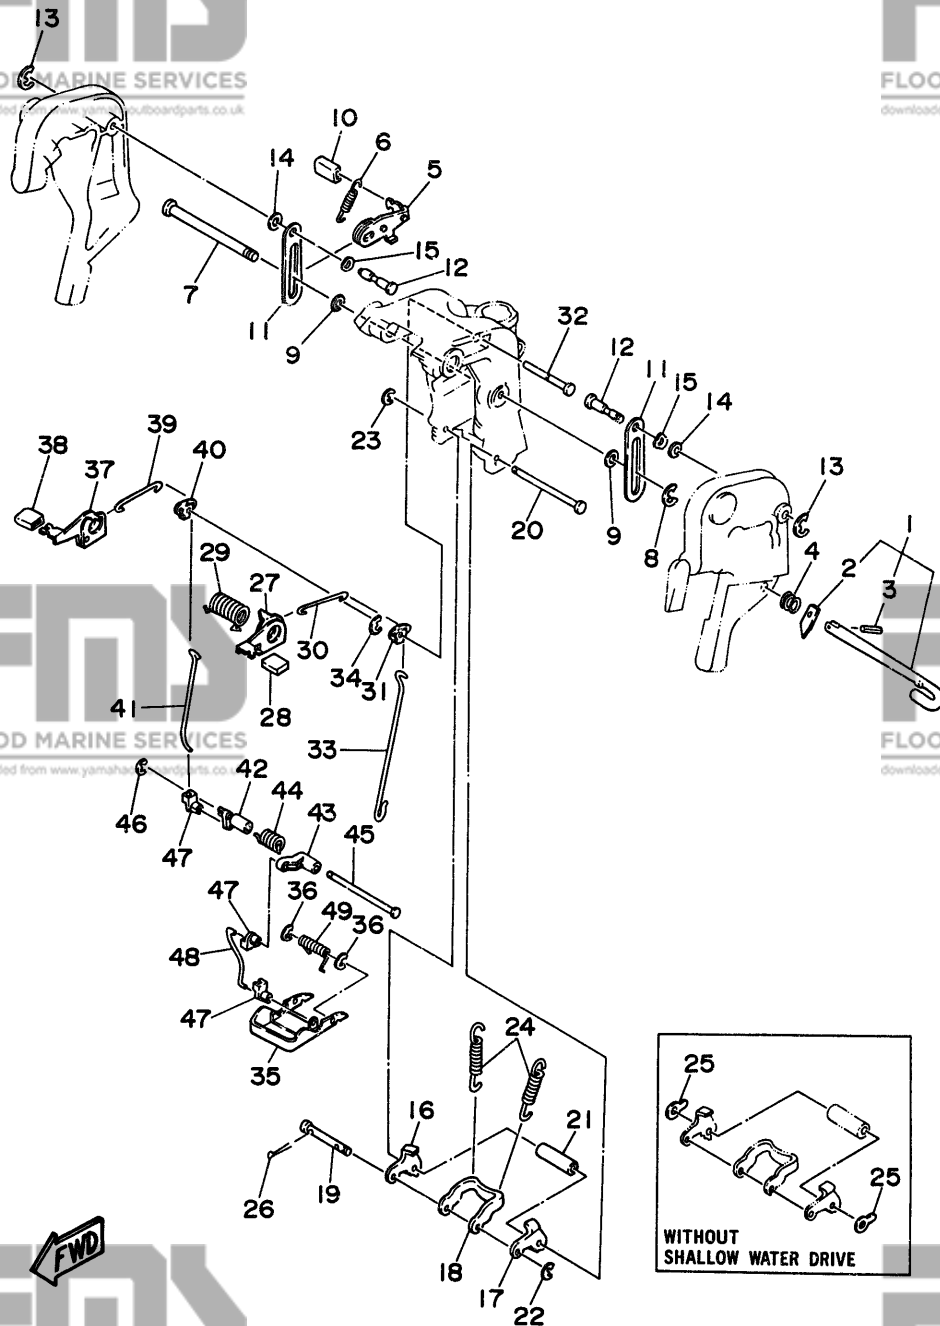

**HANDLE STEERING
ASS'Y**

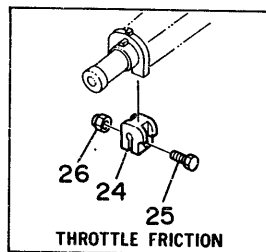
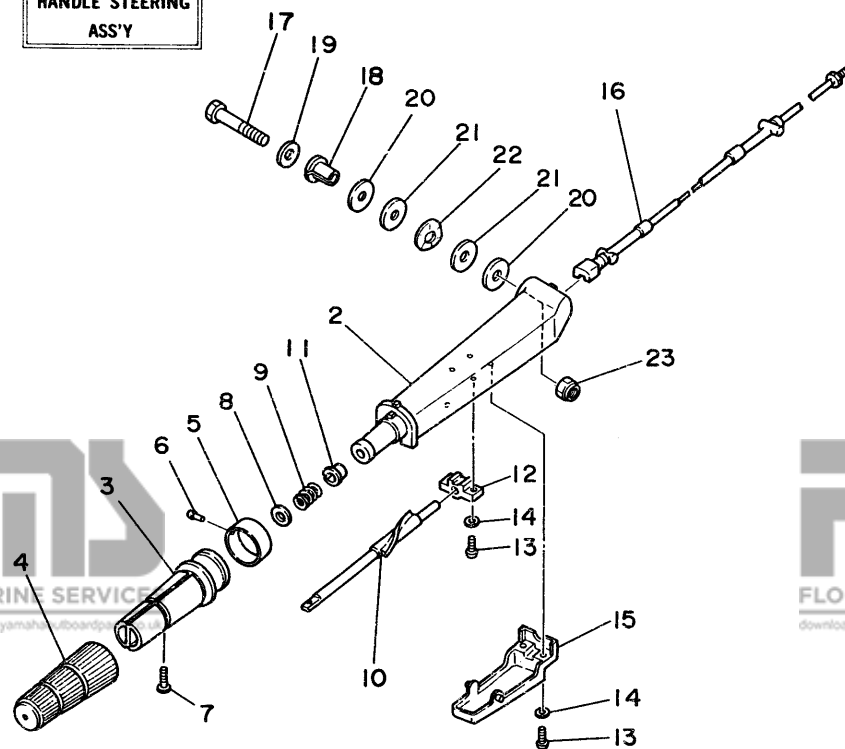


Fig. 13 STEERING

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H4-W0084-04-EJ	HANDLE STEERING ASSY (Ref. No. 2 to 26)	1	14	92901-05600	WASHER, plate	4
2	6H4-42111-01-EJ	HANDLE, steering	1	15	6H4-42131-00	COVER, handle steering	1
3	664-42119-00	GRIP, steering handle	1	16	6H4-26311-03	CABLE, throttle	1
4	6G1-42177-00	RUBBER, handle	1	17	90101-12M37	BOLT	1
5	6L2-42137-00	INDICATOR, throttle	1	18	90386-12089	BUSH	1
6	90269-02M09	RIVET	1	19	92990-12200	WASHER, plain	1
7	90149-05M13	SCREW	1	20	90202-12092	WASHER, plate	2
8	92990-10600	WASHER, plate	1	21	90201-12537	WASHER, plate	2
9	90501-23215	SPRING, compression	1	22	90206-12054	WASHER, wave	1
10	6H4-42138-01	LEVER, throttle	1	23	90185-12058	NUT, self-locking	1
11	90386-08032	BUSH	1	24	656-42126-01	FRICTION, steering handle grip	1
12	6H4-42159-00	STAY	1	25	97395-06020	BOLT	1
13	97880-05016	SCREW, pan head	4	26	90185-06062	NUT, self-locking	1

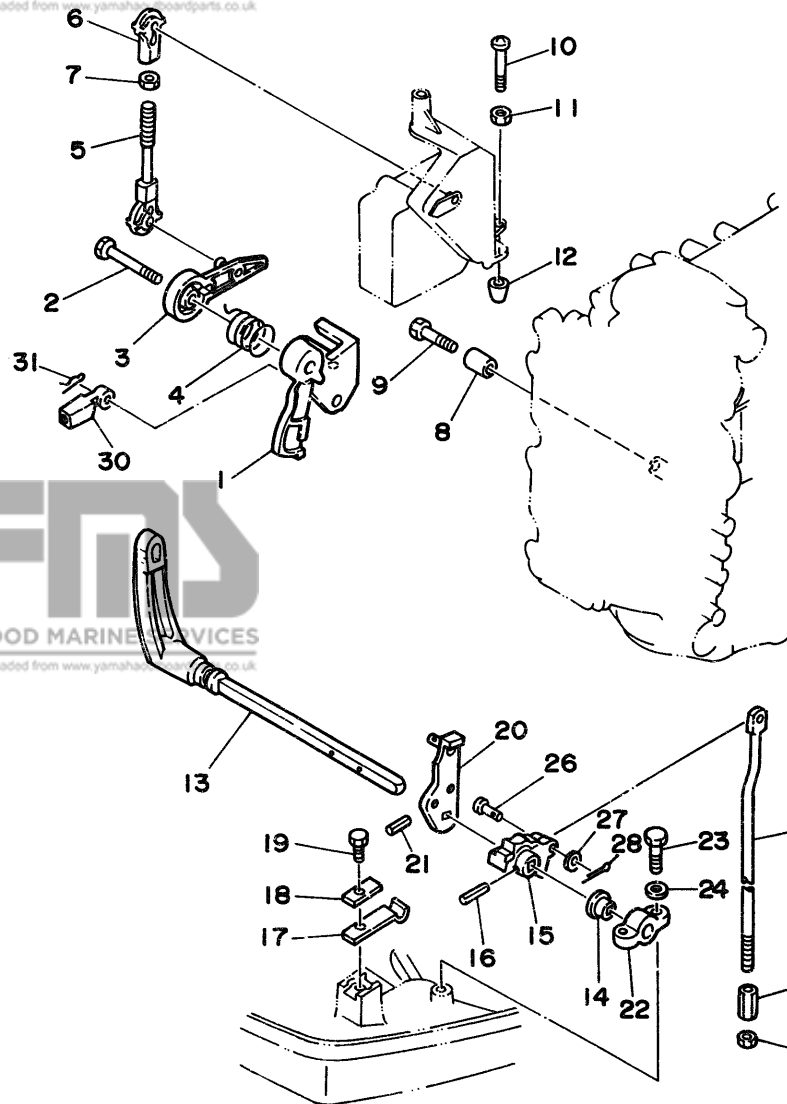


Fig. 14 CONTROL

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H4-41213-14	CAM, accel. (40HMO Model)	1 UR	15	6H4-44121-02	LEVER, shift rod	1
	6H4-41213-04	CAM, accel. (40HEO/40HEPO/40HRO/40HETO Model)	1 UR	16	91690-30318	PIN, spring	1
2	90109-06M43	BOLT	1	17	6H4-44116-00	SPRING	1
3	6H4-41632-01	LEVER, magneto control	1	18	682-44117-00	BRACKET	1
4	90508-26M20	SPRING, torsion	1	19	97313-06016	BOLT	1
5	6G5-41636-01	ROD, magneto control	1	20	6H4-44125-01	LEVER, shift rod	1
6	6H4-41237-00	JOINT, link	1	21	91690-30316	PIN, spring	1
7	95380-05600	NUT	1	22	6F5-41662-00	BRACKET	1
8	90387-06M19	COLLAR	1	23	97313-06020	BOLT	2
9	97313-06025	BOLT	1	24	92990-06600	WASHER, plate	2
10	90157-06M13	SCREW, pan head	1	25	6H4-44143-00	ROD, shift	1
11	95380-06600	NUT	1	26	91790-05020	PIN, clevis	1
12	688-44194-00	CAP	1	27	92990-05600	WASHER, plate	1
13	6H4-44111-00	HANDLE, gear shift (40HMO/40HRO Model)	1 UR	28	91490-16010	PIN, cotter	1
	6H4-44111-10	HANDLE, gear shift (40HEO/40HEPO/40HETO Model)	1 UR	29	648-44146-00	CONNECTOR, shift rod	1
14	682-44132-00	BUSHING	1	30	663-48344-00	CABLE END, remote control	1
				31	90468-18008	CLIP	1
				32	90170-07021	NUT	1

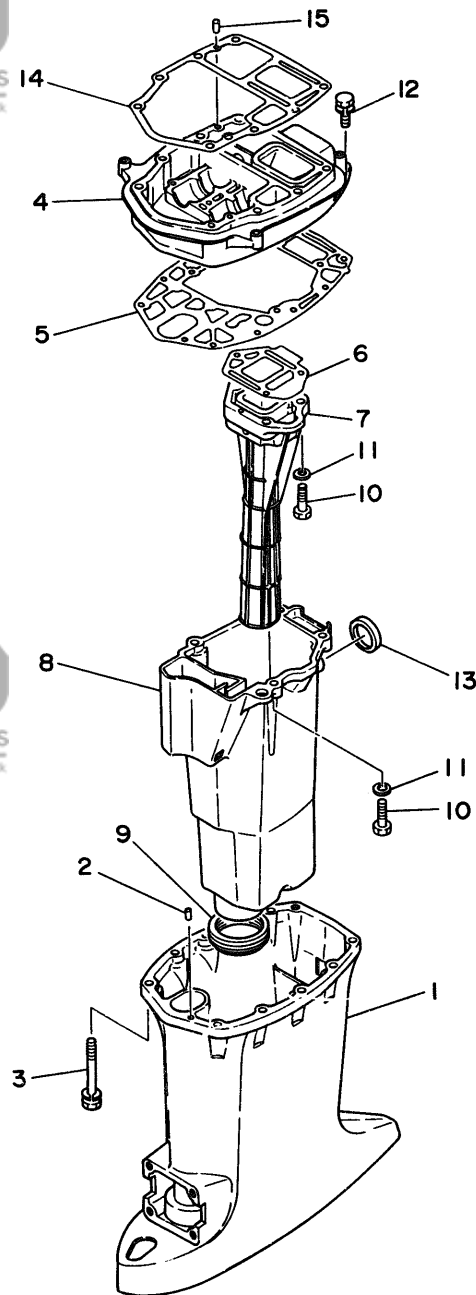


Fig. 15 UPPER CASING

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H4-45111-00-EJ	CASING, upper (Short)	1 UR	8	6H4-14711-00-5B	MUFFLER 1 (Short)	1 UR
	6H4-45111-10-EJ	CASING, upper (Long)	1 UR		6H4-14711-10-5B	MUFFLER 1 (Long)	1 UR
2	93606-12019	PIN, dowel	2	9	663-45123-00	GASKET, muffler	1
3	90119-08M83	BOLT, with washer	8	10	97395-08030	BOLT	7
4	6H4-41137-00-94	GUIDE, exhaust	1	11	92990-08600	WASHER, plate	7
5	6H4-45114-A1	GASKET, upper casing	1	12	90119-08M79	BOLT, with washer	2
6	6H4-41134-A0	GASKET, exhaust manifold	1	13	6H4-41133-00	GASKET, exhaust manifold 1	1
7	6H4-41131-01-5B	MANIFOLD, ext. 1	1	14	6H4-45113-A0	GASKET, upper casing	1
				15	93606-12019	PIN, dowel	2

LOWER UNIT
ASSY

Fig. 16 LOWER CASING. DRIVE 1

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H4-45300-02-EJ	LOWER UNIT ASSY (Short)	1 UR	34	97395-08045	BOLT	2
		(Ref. No. 2 to 62)		35	6H4-45501-00	DRIVE SHAFT COMP. (Short)	1 UR
	6H4-45300-12-EJ	LOWER UNIT ASSY (Long)	1 UR		6H4-45501-10	DRIVE SHAFT COMP. (Long)	1 UR
		(Ref. No. 2 to 62)		36	6H4-45551-00	PINION	1
2	6H4-45301-01-EJ	CASING, lower	1	37	90170-12138	NUT	1
3	93315-32224	BEARING, cylindrical	1	38	6H4-45560-00	GEAR	1
4	6H4-45536-00	SLEEVE, drive shaft	1	39	93332-000V4	BEARING	1
5	663-45587-01-10	SHIM (T:0.10MM)	1 UR	40	6H4-45567-01-10	SHIM (T:0.10MM)	1 UR
	663-45587-01-12	SHIM (T:0.12MM)	1 UR		6H4-45567-01-12	SHIM (T:0.12MM)	1 UR
	663-45587-01-15	SHIM (T:0.15MM)	1 UR		6H4-45567-01-15	SHIM (T:0.15MM)	1 UR
	663-45587-01-18	SHIM (T:0.18MM)	1 UR		6H4-45567-01-18	SHIM (T:0.18MM)	1 UR
	663-45587-01-30	SHIM (T:0.30MM)	1 UR		6H4-45567-01-30	SHIM (T:0.30MM)	1 UR
	663-45587-01-40	SHIM (T:0.40MM)	1 UR		6H4-45567-01-40	SHIM (T:0.40MM)	1 UR
	663-45587-01-50	SHIM (T:0.50MM)	1 UR		6H4-45567-01-50	SHIM (T:0.50MM)	1 UR
6	93332-00001	BEARING	1	41	679-45611-01	SHAFT, propeller	1
7	90340-08M04	PLUG, straight screw	2	42	676-45635-00	PLUNGER, shift	1
8	90430-08020	GASKET	3	43	663-45634-00	SLIDE, shift	1
9	688-45341-00	PLUG, drain	1	44	6H4-45631-00	CLUTCH, dog	1
10	6H4-45321-01	PLATE	1	45	90250-06023	PIN, straight	1
11	93210-49ME0	O-RING	1	46	663-45633-00	RING, cross pin	1
12	661-44147-00	BOOT, shift rod	1	47	90201-22429	WASHER, plate	1
13	97395-06016	BOLT	1	48	90501-16M01	SPRING, compression	1
14	92990-06600	WASHER, plate	1	49	6H4-44150-01	SHIFT CAM ASSY (Short)	1 UR
15	6H4-45378-00	NIPPLE, hose	1		6H4-44150-12	SHIFT CAM ASSY (Long)	1 UR
16	90209-10M14	WASHER	1	50	6H4-44160-00	DETENT COMP.	1
17	90445-07ME9	HOSE (Short)	1 UR	51	6H4-45571-00	GEAR	1
	90445-07M31	HOSE (Long)	1 UR	52	679-45331-00-94	HOUSING, bearing	1
18	6E5-83558-00	END, nipple	1 UR	53	93306-00702	BEARING	1
	6E5-83558-10	END, nipple (40HETO Model)	1 UR	54	663-45577-01-10	SHIM (T:0.10MM)	1 UR
19	90465-11M10	CLAMP	2		663-45577-01-12	SHIM (T:0.12MM)	1 UR
20	6J8-44311-00	HOUSING, water pump	1		663-45577-01-15	SHIM (T:0.15MM)	1 UR
21	663-44322-00	INSERT, cartridge	1		663-45577-01-18	SHIM (T:0.18MM)	1 UR
22	6H4-44352-02	IMPELLER	1		663-45577-01-30	SHIM (T:0.30MM)	1 UR
23	663-44315-A0	GASKET, water pump	1		663-45577-01-40	SHIM (T:0.40MM)	1 UR
24	663-44366-00	DAMPER, water seal	1		663-45577-01-50	SHIM (T:0.50MM)	1 UR
25	90280-03024	KEY, woodruff	1	55	663-45576-00	WASHER, thrust	1
26	663-44341-00-94	HOUSING, water pump	1	56	93210-66M98	O-RING	1
27	93101-23070	OIL SEAL	2	57	93317-22204	BEARING, cylindrical	1
28	93210-41042	O-RING	1	58	93101-22067	OIL SEAL	2
29	663-44316-A0	GASKET, water pump	1	59	90214-48M03	WASHER, claw	1
30	663-44323-00	OUTER PLATE, cartridge	1	60	697-45384-00	NUT	1
31	663-44324-A0	GASKET, cartridge	1	61	90282-04010	KEY, straight	1
32	93604-08062	PIN, dowel	2	62	90209-08M02	WASHER	4
33	97395-08055	BOLT	2				

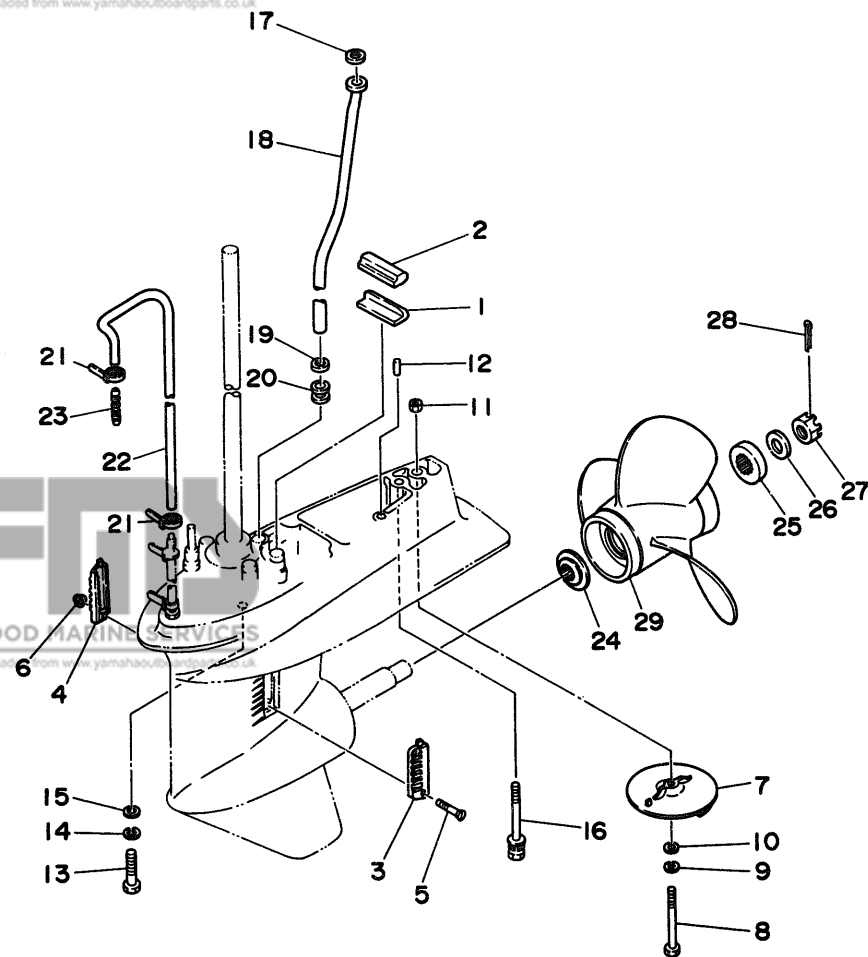


Fig. 17 LOWER CASING. DRIVE 2

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	663-45376-00-94	GUIDE, seal damper	1	27	90171-16011	NUT, castle	1
2	688-45375-00	DAMPER, seal	1	28	91490-30030	PIN, cotter	1
3	688-45214-02	COVER, water inlet	1	29	663-45941-01-EL	PROPELLER (3X10-3/4"X17"-G)	1 UR
4	688-45215-02	COVER, water inlet	1		663-45943-02-EL	PROPELLER (3X11"X15"-G)	1 UR
5	98680-05535	SCREW, oval head	1		663-45945-02-EL	PROPELLER (3X11-1/8"X13"-G)	1 UR
6	90185-05002	NUT, self-locking	1		663-45947-02-EL	PROPELLER (3X11-5/8"X11"-G)	1 UR
7	664-45371-01	TAB-TRIM	1		663-45949-01-EL	PROPELLER (3X10-3/4"X16"-G)	1 UR
8	97375-08075	BOLT	1		663-45952-02-EL	PROPELLER (3X11-3/8"X12"-G)	1 UR
9	92990-08100	WASHER, spring	1		663-45954-01-EL	PROPELLER (3X11-3/4"X10"-G)	1 UR
10	92990-08600	WASHER, plate	1		663-45956-01-EL	PROPELLER (3X12-1/4"X9"-G)	1 UR
11	95380-08600	NUT	1		663-45958-01-EL	PROPELLER (3X11-1/4"X14"-G)	1 UR
12	93606-12019	Pin, dowel	2		6H5-45943-00-EL	PROPELLER (3X10"X15"-G)	1 UR
13	97395-10040	BOLT	4			(With Lip Cup)	1 UR
14	92990-10100	WASHER, spring	4		6H5-45945-00-EL	PROPELLER (3X10-3/8"X13"-G)	1 UR
15	92990-10600	WASHER, plate	4			(With Lip Cup)	1 UR
16	90119-08M92	BOLT, with washer	1		6H5-45952-00-EL	PROPELLER (3X10-5/8"X12"-G)	1 UR
17	90202-12060	WASHER, plate	1			(With Lip Cup)	1 UR
18	6H4-44361-00	TUBE, water (Short)	1 UR		6H5-45958-00-EL	PROPELLER (3X10-1/4"X14"-G)	1 UR
	6H4-44361-10	TUBE, water (Long)	1 UR			(With Lip Cup)	1 UR
19	90430-12072	GASKET	1			STAINLESS STEEL PROPELLER	
20	663-44367-00	DAMPER, water seal	1		663-45970-60-98	PROPELLER (3X11-3/4"X12"-G)	1 UR
21	90465-11M10	CLAMP (40HETO Model)	2 UR		663-45972-60-98	PROPELLER (3X12"X11"-G)	1 UR
22	90445-07MF1	HOSE (40HETO Model)	1 UR		663-45974-60-98	PROPELLER (3X11-1/2"X13"-G)	1 UR
23	6E5-83558-00	END, nipple (40HETO Model)	1 UR		663-45930-00-98	PROPELLER (3X10-1/4"X14"-G)	1 UR
24	663-45987-02	SPACER	1		663-45976-00-98	PROPELLER (3X10-1/4"X15"-G)	1 UR
25	670-45997-02	SPACER	1		663-45978-00-98	PROPELLER (3X10-1/4"X16"-G)	1 UR
26	92990-16200	WASHER, plain	1				

Fig. 18 MAGNETO (40HMO/40HRO MODEL)

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H5-85550-10	ROTOR ASSY	1	14	92990-06100	.WASHER, spring	2
2	6H5-85560-02	BASE ASSY	1	15	98501-06030	.SCREW, pan head	4
3	6H4-15359-04-94	.HOUSING, oil seal	1	16	92990-06100	.WASHER, spring	4
4	6H5-85520-00	.COIL, charge	1	17	90464-03M15	.CLAMP	2
5	6H5-85533-01	.COIL, lighting	1	18	93102-23096	.OIL SEAL	1
6	6H5-85580-00	.COIL, pulser	1	19	6H4-11545-00	KEY, woodruff	1
7	6H5-85580-10	.COIL, pulser	1	20	90179-16M05	NUT	1
8	6H5-85580-20	.COIL, pulser	1	21	90201-16M44	WASHER, plate	1
9	6H4-83354-00	.WIRE, earth lead 1	1	22	6H4-81332-00	PLATE, timing	1
10	98501-05012	.SCREW, pan head	6	23	97985-05210	SCREW, with washer	1
11	92901-05100	.WASHER, spring	6	24	97313-06018	BOLT	3
12	92901-05600	.WASHER, plate	6	25	92990-06600	WASHER, plate	3
13	98501-06025	.SCREW, pan head	2				

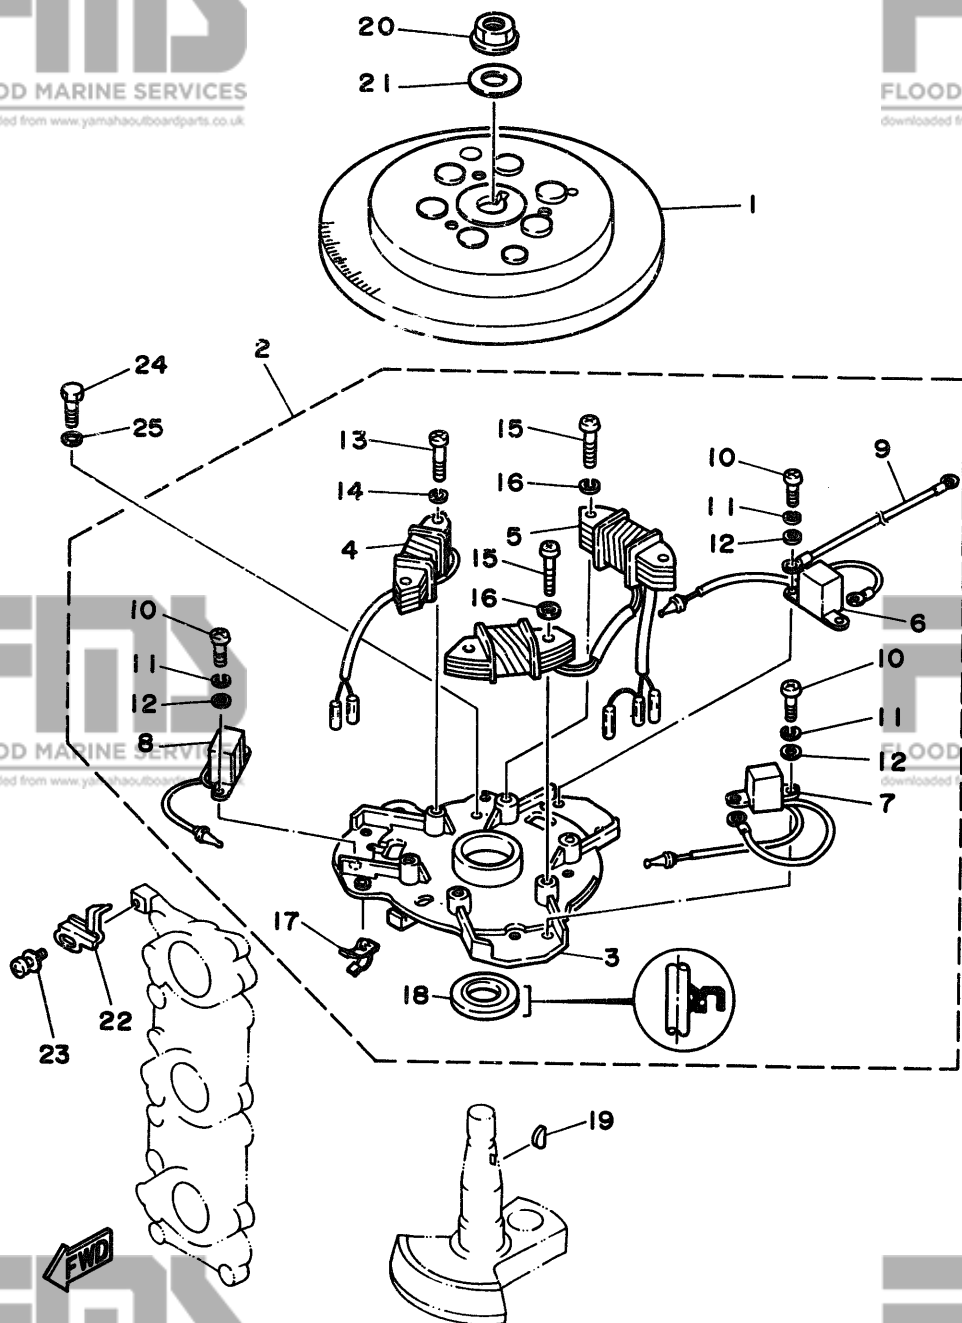


Fig. 19 ELECTRICAL

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H5-85540-02	C.D.I. UNIT ASSY	1	17	92990-06600	WASHER, plate	1
2	90465-13M36	CLAMP	1	18	6H4-82560-00	THERMO SWITCH ASSY	1
3	90119-06M51	BOLT, with washer	2	19	6J8-81960-00	RECTIFIER & REGULATOR ASSY (40HMO/40HRO Model)	1
4	6H4-82531-02	WIRE, lead	1	20	97395-06012	BOLT (40HMO/40HRO Model)	1
5	97395-06014	BOLT	1	21	92990-06600	WASHER, plate (40HMO/40HRO Model)	1
6	92990-06600	WASHER, plate	1	22	6H4-81975-02	PLATE, rectifier fitting (40HMO/40HRO Model)	1
7	6H5-85570-00	IGNITION COIL ASSY	3	23	97013-06012	BOLT (40HMO/40HRO Model)	2
8	90480-25161	GROMMET	1	24	6F5-81922-00	GROMMET (40HMO/40HRO Model)	1
9	97395-06020	BOLT	3	25	90464-12M35	CLAMP (40HMO/40HRO Model)	1
10	92990-06600	WASHER, plate	3	26	90440-14M00	PIPE (40HMO/40HRO Model)	1
11	6G1-82370-20	PLUG CAP ASSY	3	27	682-84381-00	2P CONCENT (40HMO/40HRO Model)	1
12	689-82560-00	THERMO SWITCH ASSY	1	28	90202-26M45	WASHER, plate (40HMO/40HRO Model)	1
13	90446-10M02	HOSE	1	29	6J8-82105-10	WIRE, harness (40HMO/40HRO Model)	1 AP
14	6G1-83557-00	TUBE	1				
15	90464-05M16	CLAMP	1				
16	97395-06014	BOLT	1				

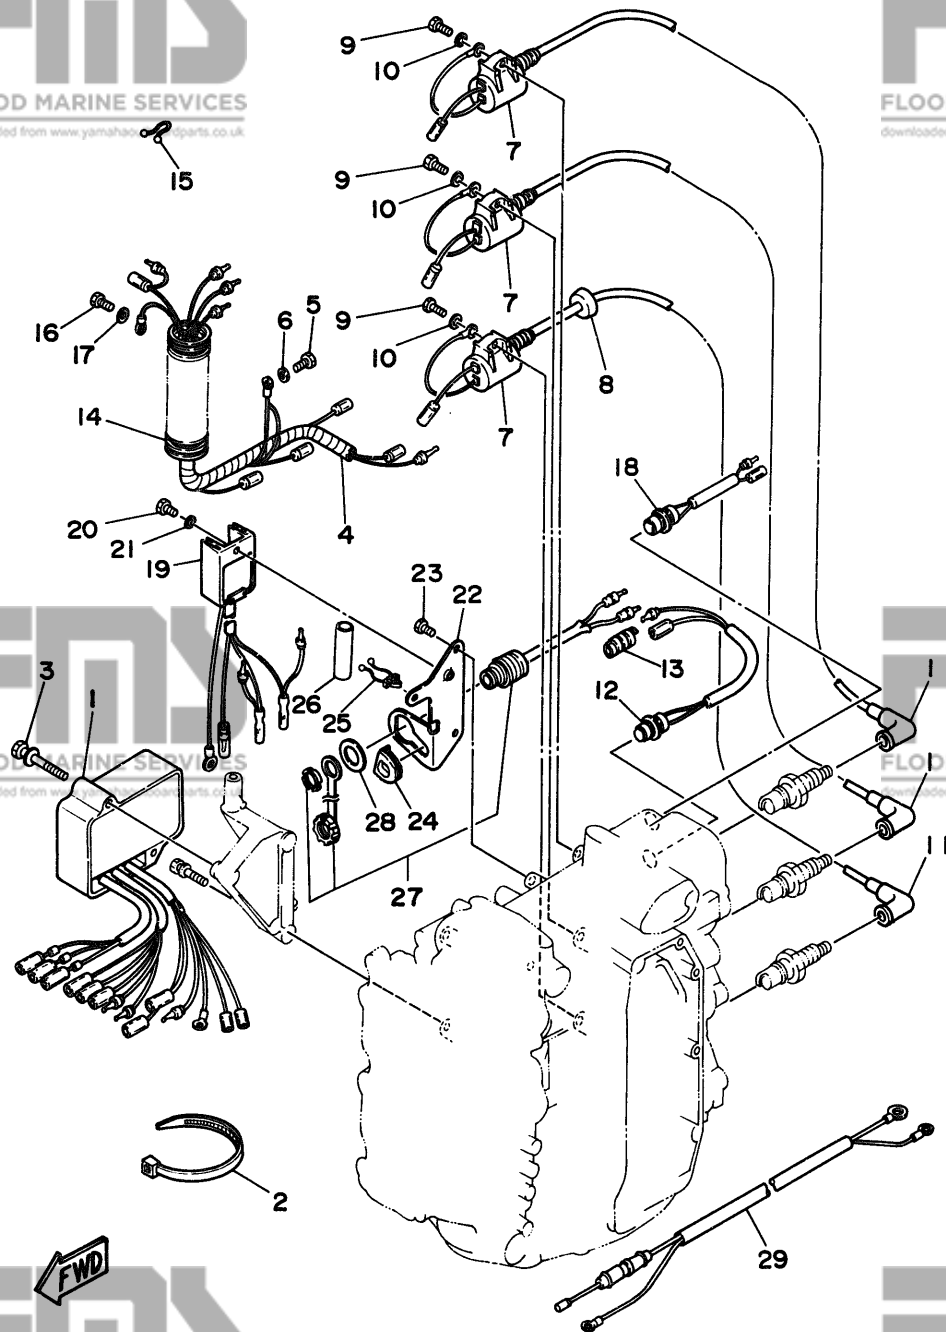


Fig. 20 ALTERNATE 1 (40HEO/40HEPO/40HETO MODEL)

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	90201-08M93	WASHER, plate	1	29	6H5-24633-00	CHAIN, ball	1
2	6H4-11537-01	GEAR, driven	1	30	6J8-21758-00	WASHER, special 2	1
3	6H1-13117-01	COLLAR, distance	1	31	6H1-21757-00	WASHER, special 1	2
4	93210-13595	O-RING	1	32	90445-11M23	HOSE	1
5	6H4-13200-04	OIL INJECTION PUMP ASSY	1	33	90445-11M07	HOSE	1
6	93210-19MA7	O-RING	1	34	6J8-21744-00	BREATHER	1
7	90109-06M39	BOLT	1	35	6E5-24378-00	PIPE, joint 4	1
8	90109-06M40	BOLT	1	36	90467-10M04	CLIP	1
9	90445-07M44	HOSE	1	37	90445-11M17	HOSE	1
10	90445-07M23	HOSE	1	38	90446-10M01	HOSE	2
11	90445-07MA6	HOSE	1	39	6J8-13411-00	STRAINER, oil	1
12	90468-07M02	CLIP	3	40	6J8-13414-00	GASKET, strainer cover	1
13	90468-07M02	CLIP	3	41	6L2-13416-00	PIPE, oil 1	1
14	90464-07M20	CLAMP	1	42	90467-08004	CLIP	1
15	6H4-41241-01	ROD, link	1	43	6A0-82317-00	DAMPER, ignition coil	3
16	6H1-41237-00	JOINT, link	1	44	624-42542-00	PIPE	3
17	90202-05088	WASHER, plate	1	45	90119-06M65	BOLT, with washer	3
18	90468-05M03	CLIP	1	46	90445-07M87	HOSE	3
19	95380-05E00	NUT	1	47	6E9-13183-70	VALVE, check	3
20	6R5-41237-00	JOINT, link	1	48	90468-07M02	CLIP	6
21	6H4-21707-04	OIL TANK COMP.	1	49	90467-11M08	CLIP	1
22	90445-11M17	HOSE	1	50	6H5-85720-12	OIL LEVEL GAUGE ASSY	1
23	90464-11M23	CLAMP	1	51	6H4-84342-00	SEAT, emblem	1
24	90467-11M08	CLIP	2	52	6H4-83589-00	GASKET	1
25	6H4-21752-00	TUBE, filler 1	1	53	92503-06015	SCREW, pan head	1
26	90465-13M30	CLAMP	1	54	92990-06600	WASHER, plate	1
27	6H1-2176M-01	HOOK	1	55	90465-18147	CLAMP	1
28	6H4-21770-00	OIL TANK CAP ASSY	1	56	6H4-84301-01	PILOT LIGHT ASSY 1	1

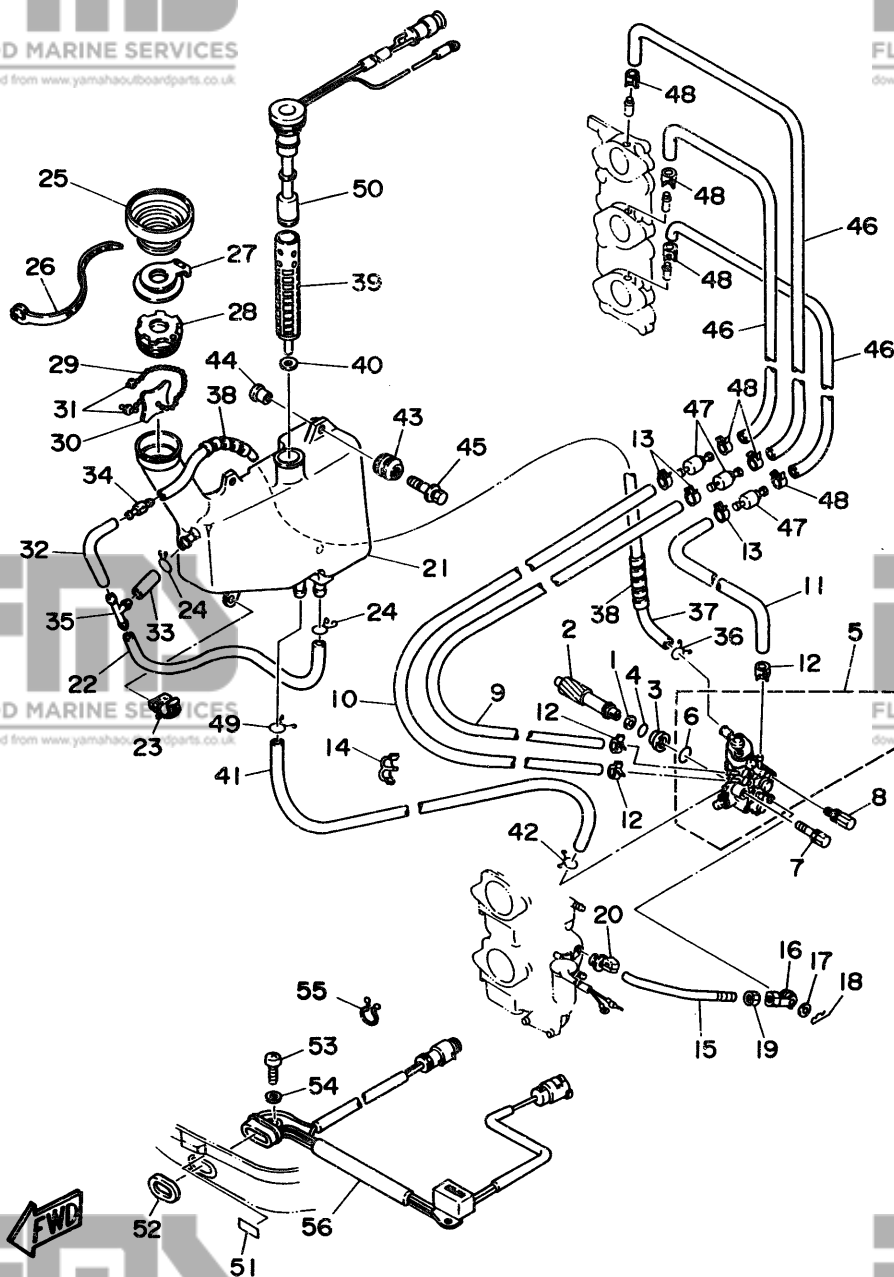


Fig. 21 ALTERNATE 2 (40HEO/40HEPO/40HETO MODEL)

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H4-42630-60-EJ	TOP COWLING ASSY	1	10	6H4-W0070-60	.GRAPHIC SET	9
2	6H4-42615-00	.SEAL	1	11	6H4-13436-00	.MARK	1
3	6H4-42651-00	.HOOK	1	12	6H1-2177H-01	.DISK CAP 2	1
4	6H4-42652-00	.HOOK	1	13	6H3-21732-00	.SEAL 1	1
5	90266-04M01	.RIVET	4	14	6H3-21735-00	.SEAL 2	1
6	6H4-42613-10-EJ	.MOLDING, air duct	1	15	6H1-42694-00	.BAND	1
7	90119-06M99	.BOLT, with washer	4	16	90338-05M12	.PLUG	1
8	6H4-42686-11	.EMBLEM, front	1	17	90183-05M06	.NUT, spring	1
9	6H4-42687-10	.EMBLEM, rear	1				


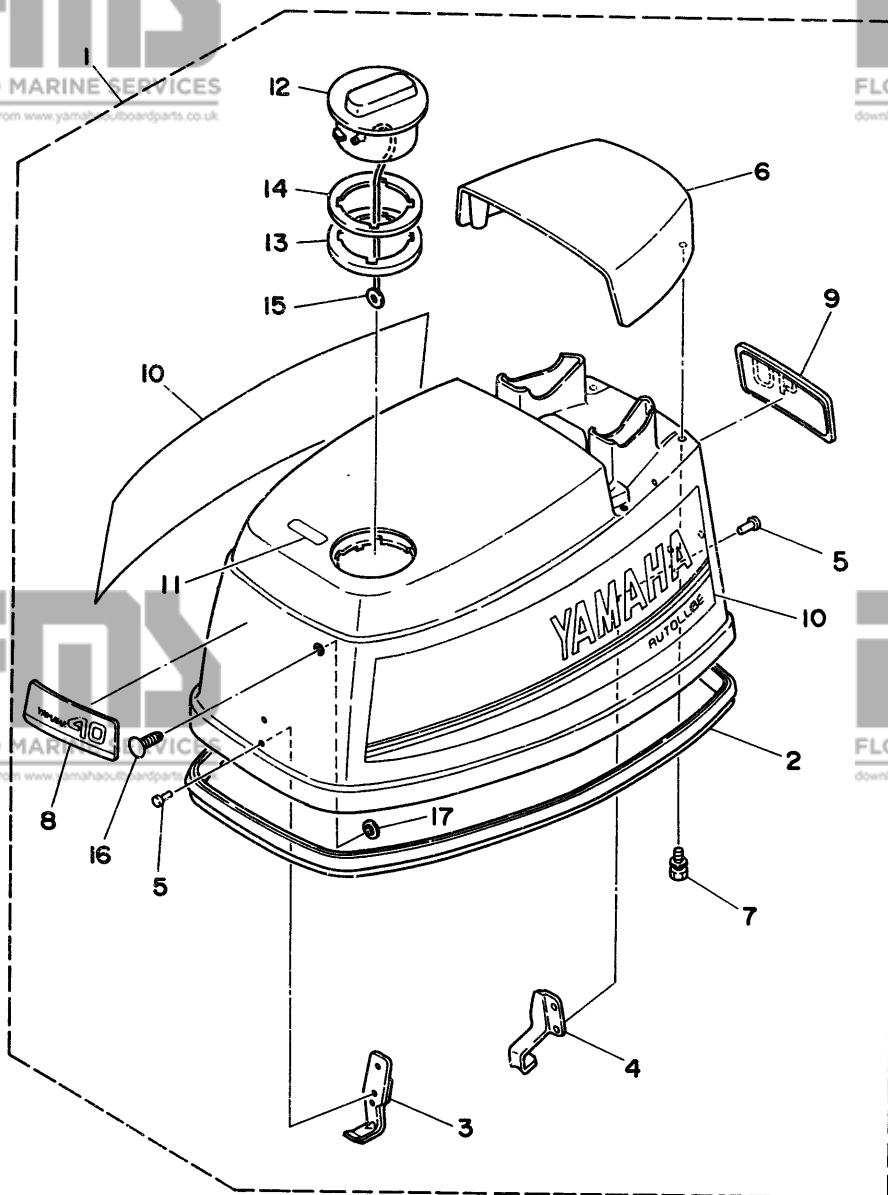


Fig. 22 ALTERNATE 3 (40HEPO MODEL)

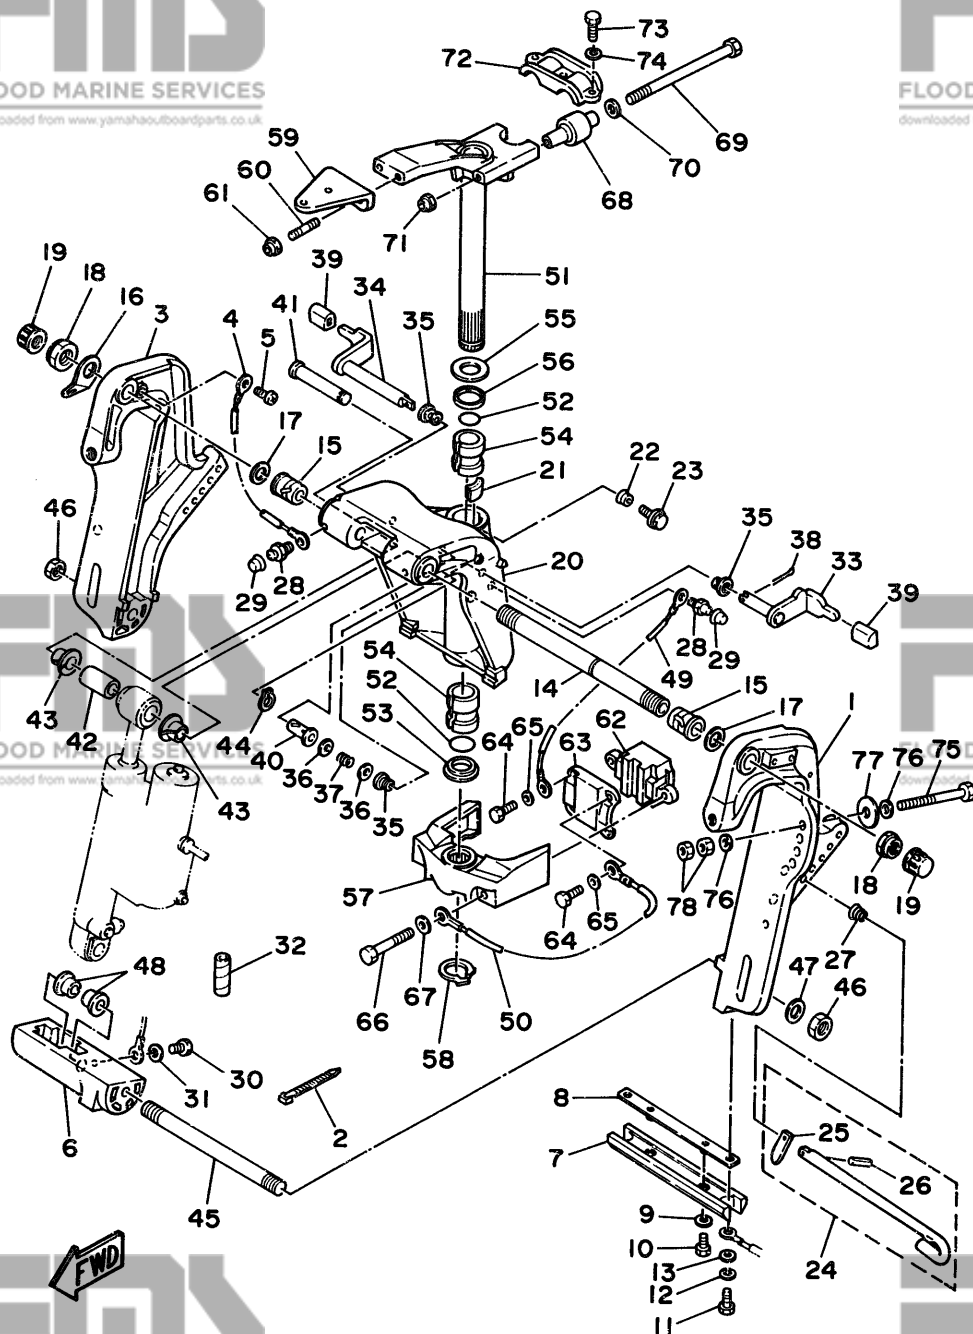

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H5-43111-02-EJ	BRACKET, clamp	1	41	6H5-43126-02	PIN, upper shock mount	1
2	90465-13M11	CLAMP	1	42	90386-12M65	BUSH	1
3	6H5-43112-03-EJ	BRACKET, clamp	1	43	90386-12M64	BUSH	2
4	6E5-82148-00	WIRE, lead 4	1	44	93410-12M08	CIRCLIP	1
5	97895-06008	SCREW, pan head	1	45	90116-18M21	BOLT, stud	1
6	6H5-43128-01-EJ	SPACER, clamp bracket	1	46	90170-18M10	NUT	2
7	6H1-45251-02	ANODE	1	47	92990-18600	WASHER	1
8	6H1-44526-00	PLATE	1	48	90386-18M44	BUSH	2
9	90201-06M31	WASHER, plate	2	49	6H5-82127-00	WIRE, lead 2	1
10	97395-06012	BOLT	2	50	6H5-82149-00	WIRE, lead 3	1
11	97395-06016	BOLT	2	51	6H4-42510-02-EJ	STEERING BRACKET ASSY	1
12	92990-06100	WASHER, spring	2	52	93210-29M94	O-RING	2
13	92990-06600	WASHER, plate	2	53	90386-30M60	BUSH	1
14	6J8-43131-01	BOLT, clamp bracket	1	54	90386-30M77	BUSH	2
15	90386-22M15	BUSH	2	55	90201-30M00	WASHER, plate	1
16	6J8-43131-01	PLATE, clamp bracket	1	56	90386-30M78	BUSH	1
17	90201-22428	WASHER, plate	2	57	6H4-44551-01-EJ	HOUSING, lower mount rubber	1
18	90185-22043	NUT, self-locking	2	58	93410-28M06	CIRCLIP	1
19	6G5-43145-00	CAP, clamp bracket	2	59	6H4-48511-51-EJ	HOOK, steering	1
20	6H5-43311-04-EJ	BRACKET, swivel	1	60	90116-10175	BOLT, stud	2
21	6J8-42528-00	PLATE, friction	1	61	90185-10051	NUT, self-locking	2
22	689-43373-01	SEAL, damper	1	62	6H4-44557-00	MOUNT DAMPER, lower front (Short)	1 UR
23	90105-06M18	BOLT, washer based	1		6H4-44557-10	MOUNT DAMPER, lower front (Long)	1 UR
24	676-43160-02	TILT ROD ASSY	1	63	6H4-44553-01	COVER, lower mount	1
25	676-43165-00	PLATE, tilt lock	1	64	97395-08025	BOLT	4
26	91690-30012	PIN, spring	1	65	92990-08600	WASHER, plate	4
27	90502-10M04	SPRING, conical	1	66	97395-10060	BOLT	2
28	93700-06M03	NIPPLE, grease	3	67	92990-10600	WASHER, plate	2
29	663-45119-00	CAP, grease nipple	3	68	6H4-44514-00	MOUNT DAMPER, upper side	2
30	97395-06010	BOLT	1	69	90101-08M06	BOLT	2
31	92990-06600	WASHER, plate	1	70	90201-09425	WASHER, plate	2
32	90446-07M40	HOSE	2	71	90185-08045	NUT, self-locking	2
33	6H5-43181-02	LEVER, tilt stop	1	72	6H4-44511-00-94	COVER, upper mount	1
34	6H5-43185-02	LEVER, tilt stop	1	73	97090-08G35	BOLT	3
35	90386-10M16	BUSH	3	74	92990-08100	WASHER, spring	3
36	92990-10600	WASHER, plate	2	75	90101-12M65	BOLT	4
37	90501-10M21	SPRING, compression	1	76	92990-12200	WASHER, plain	8
38	91490-30030	PIN, cotter	1	77	90201-12426	WASHER, plate	4
39	663-43318-00	COVER	2	78	95380-12600	NUT	8
40	90386-10M19	BUSH	1				

Fig. 23 ALTERNATE 4 (40HETO MODEL)

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	697-43111-04-EJ	BRACKET, clamp	1	37	6H4-42510-02-EJ	STEERING BRACKET ASSY	1
2	697-43112-03-EJ	BRACKET, clamp	1	38	90201-30M00	WASHER, plate	1
3	6H1-45251-02	ANODE	1	39	90386-30M78	BUSH	1
4	6H1-44526-00	PLATE	1	40	90386-30M77	BUSH	2
5	90201-06M31	WASHER, plate	2	41	93210-29M94	O-RING	2
6	97395-06012	BOLT	2	42	90386-30M60	BUSH	1
7	97395-06016	BOLT	2	43	6H4-44551-01-EJ	HOUSING, lower mount rubber	1
8	92990-06100	WASHER, spring	2	44	93410-28M06	CIRCLIP	1
9	92990-06600	WASHER, plate	2	45	6H5-48511-51-EJ	HOOK, steering	1
10	6H1-82148-00	WIRE, lead 4	1	46	90116-10175	BOLT, stud	2
11	97395-06010	BOLT	1	47	90185-10051	NUT, self-locking	2
12	92990-06600	WASHER, plate	1	48	6H4-44557-00	MOUNT DAMPER, lower front (Short)	1 UR
13	697-43311-03-EJ	BRACKET, swivel	1	6H4-44557-10	MOUNT DAMPER, lower front (Long)	1 UR	
14	90269-C3010	RIVET	1	49	6H4-44553-01	COVER, lower mount	1
15	93700-06M03	NIPPLE, grease	3	50	97395-08025	BOLT	4
16	663-45119-00	CAP, grease nipple	3	51	92990-08600	WASHER, plate	4
17	688-43131-03	BOLT, clamp bracket	1	52	97395-10060	BOLT	2
18	90386-22M15	BUSH	2	53	92990-10600	WASHER, plate	2
19	90201-22M67	WASHER, plate	2	54	6H5-82117-00	WIRE, lead	1
20	90185-22043	NUT, self-locking	1	55	6H5-82149-00	WIRE, lead 3	1
21	665-43145-00	CAP, clamp bracket	2	56	6H4-44514-00	MOUNT DAMPER, upper side	2
22	688-43181-04	LEVER, tilt stop	1	57	90101-08M86	BOLT	2
23	688-43185-04	LEVER, tilt stop	1	58	90201-09425	WASHER, plate	2
24	90386-10M16	BUSH	4	59	90185-08045	NUT, self-locking	2
25	92990-10600	WASHER, plate	1	60	6H4-44511-00-94	COVER, upper mount	1
26	90501-10M21	SPRING, compression	1	61	97090-08035	BOLT	3
27	91490-30030	PIN, cotter	2	62	92990-08100	WASHER, spring	3
28	663-43318-00	COVER	2	63	6E5-82148-00	WIRE, lead 4	1
29	90387-10M38	COLLAR	1	64	92580-06012	SCREW, pan head	1
30	697-43160-00	TILT ROD ASSY	1	65	97395-10045	BOLT	6
31	688-43165-00	PLATE, tilt lock	1	66	92990-10100	WASHER, spring	1
32	91690-30012	PIN, spring	1	67	90502-20M03	SPRING, conical	1
33	6E5-43126-02	PIN, upper shock mount	1	68	90101-12M65	BOLT	4
34	90386-18M63	BUSH	2	69	92995-12200	WASHER	8
35	93410-18M02	CIRCLIP	1	70	90201-12426	WASHER, plate	4
36	90386-18M35	BUSH	2	71	95380-12600	NUT	8

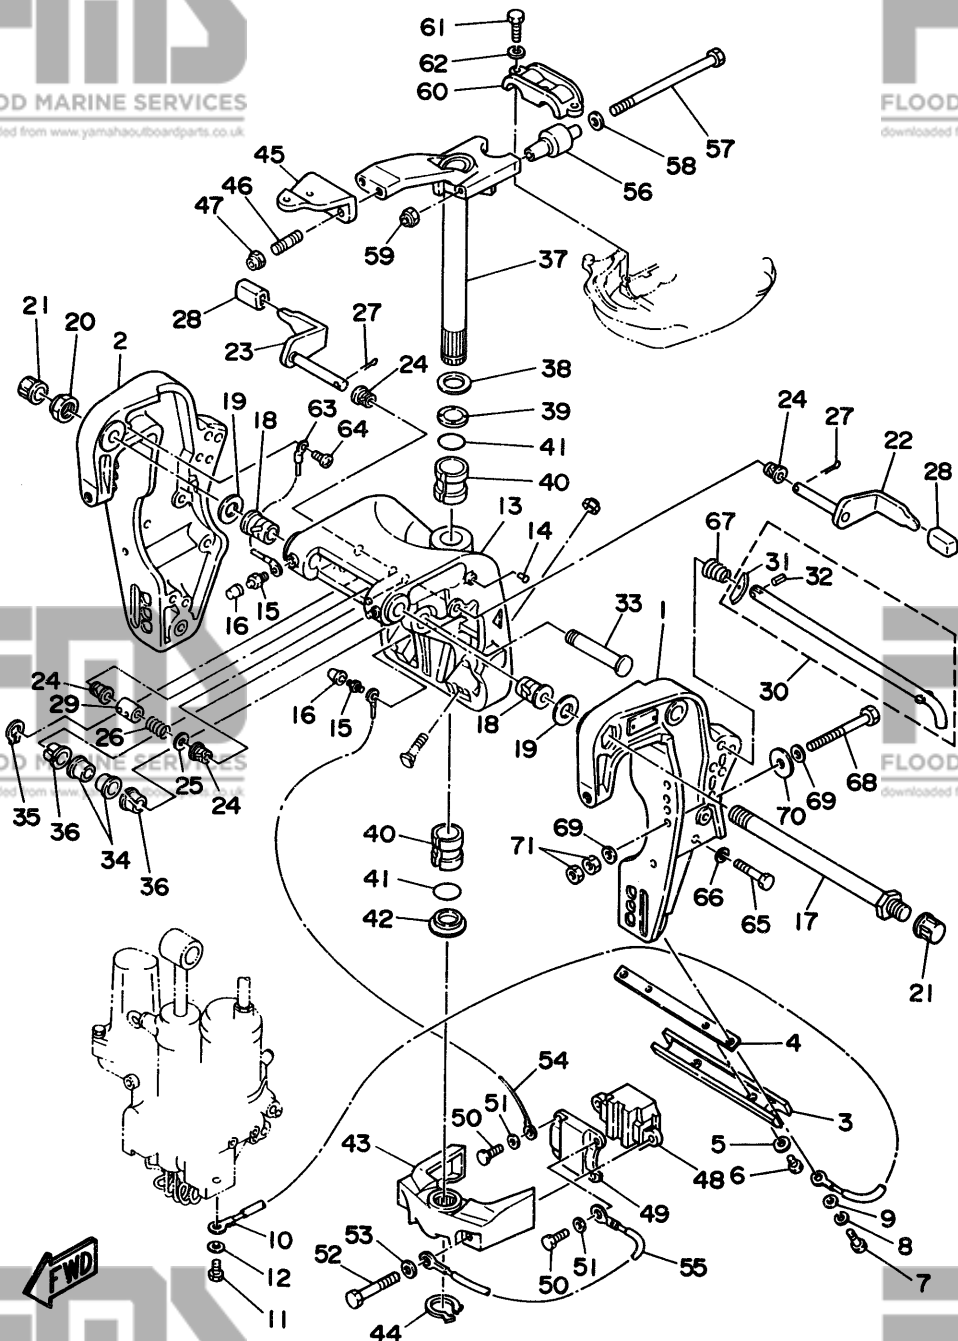


Fig. 24 ALTERNATE 5 (40HETO MODEL)

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	688-43376-01	BOLT, thrust receiver	2	8	6H5-83672-00	TRIM SENDER	1
2	95780-08300	NUT, flange	2	9	98580-06016	SCREW, pan head	2
3	6Y5-83670-10	TRIM GAUGE	1	10	6E5-82553-10	EXTENSION, wire lead	1
4	688-83664-00	.DAMPER	1	11	90464-09M13	CLAMP	1
5	6Y5-83577-00	.PLATE, fitting	1	12	90440-14M00	PIPE	1
6	6Y5-83536-20	.SOKET, meter	1	13	90465-11M10	CLAMP	3
7	6Y5-83518-00	.BULB, meter	1	14	90465-08028	CLAMP	1

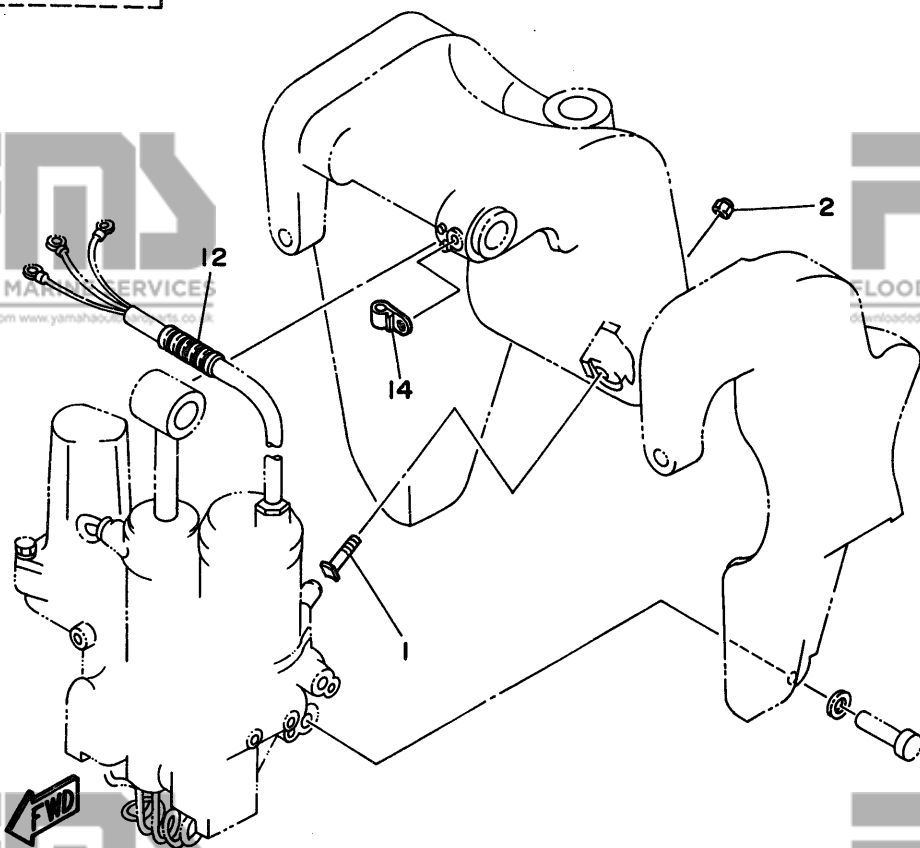
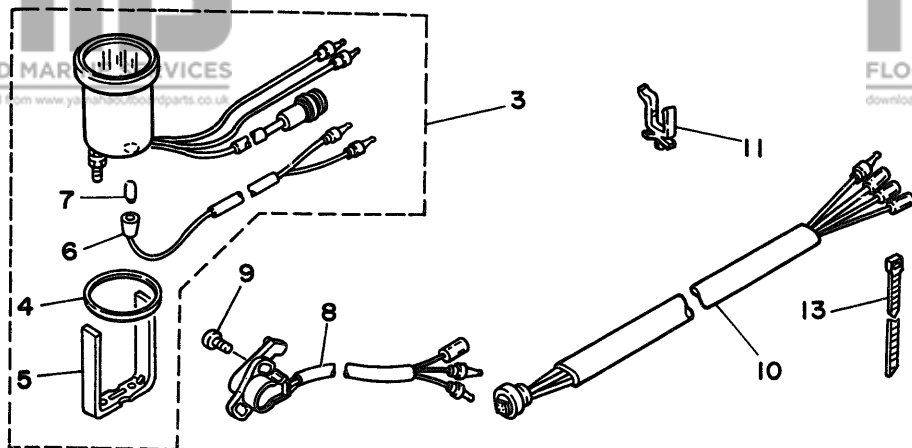


Fig. 25 ALTERNATE 6 (40HETO MODEL)

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H3-43800-07-EJ	POWER TRIM & TILT ASSY	1	31	6G5-43808-02	.SEAT, valve comp. 1	1
2	6H1-43880-02	.MOTOR ASSY	1	32	6E5-43883-00	.O-RING	1
3	697-4380E-01	.TILT CYLINDER ASSY	1	33	6E5-43843-00	.SCREW, valve lock	1
4	6E5-43861-00	.O-RING	1	34	6H3-43855-00	.SPRING, up relief	1
5	6E5-43862-00	.O-RING	2	35	6E5-43859-00	.PIN, valve support	1
6	6E5-43872-00	.RING, back up	2	36	6E5-43877-01	.BALL	1
7	6E5-43814-01	.PISTON, free	1	37	6E5-43895-00	.SEAT, relief valve	1
8	6E5-43828-00	.BODY, reservoir	1	38	6E5-43896-00	.O-RING	1
9	6E5-43829-00	.PLUG, reservoir	1	39	6E5-43816-10	.FILTER 1	1
10	6E5-43863-00	.O-RING	1	40	6E5-43817-10	.FILTER 2	1
11	6E5-43818-00	.PIN, lower shock mount	1	41	90109-06M21	.BOLT	1
12	90386-18M14	.BUSH	2	42	6E5-43897-00	.O-RING	1
13	90119-06M42	.BOLT, with washer	3	43	6E5-43878-01	.BOLT, socket	2
14	90119-06M71	.BOLT, with washer	3	44	6E5-43888-01	.BOLT, socket	1
15	6E5-43820-03	.PISTON SUB ASSY	2	45	6E5-43831-00	.CONNECTOR, shaft	1
16	6E5-43864-00	.O-RING	1	46	6E5-43830-00	.GEAR PUMP ASSY	1
17	6E5-43874-01	.RING, back up	1	47	93210-07M78	.O-RING	2
18	6E5-43821-01	.SCREW, trim cylinder end	2	48	6E5-43847-00	.SEAT, manual valve	2
19	6E5-43822-01	.SEAL, trim dust	2	49	6E5-43854-01	.SPRING, manual release	1
20	6E5-43862-00	.O-RING	2	50	6E5-4382A-00	.ADAPTOR 1	1
21	6E5-43865-00	.O-RING	2	51	93210-10M74	.O-RING	1
22	6E5-43802-00	.VALVE SUB ASSY	2	52	6E5-43845-01	.SCREW, manual release	1
23	6E5-43866-00	.O-RING	1	53	93210-18M75	.O-RING	1
24	6E5-43867-00	.O-RING	1	54	6H1-43875-00	.RING, snap	1
25	6E5-43841-01	.PISTON, shuttle	1	55	90201-05M00	.WASHER, plate	3
26	6E5-43868-00	.O-RING	1	56	6E5-4381A-00	.SHAFT	1
27	6E5-43869-00	.O-RING	2	57	6E5-43849-01	.PIN, valve support	1
28	6E5-43833-01	.PIPE	1	58	6E5-43824-01	.SPRING, compression	1
29	6E5-43834-01	.PIPE	1	59	93210-06M77	.O-RING	1
30	6E5-43835-01	.PIPE	1	60	6E5-43842-00	.SCREW, valve seat	1

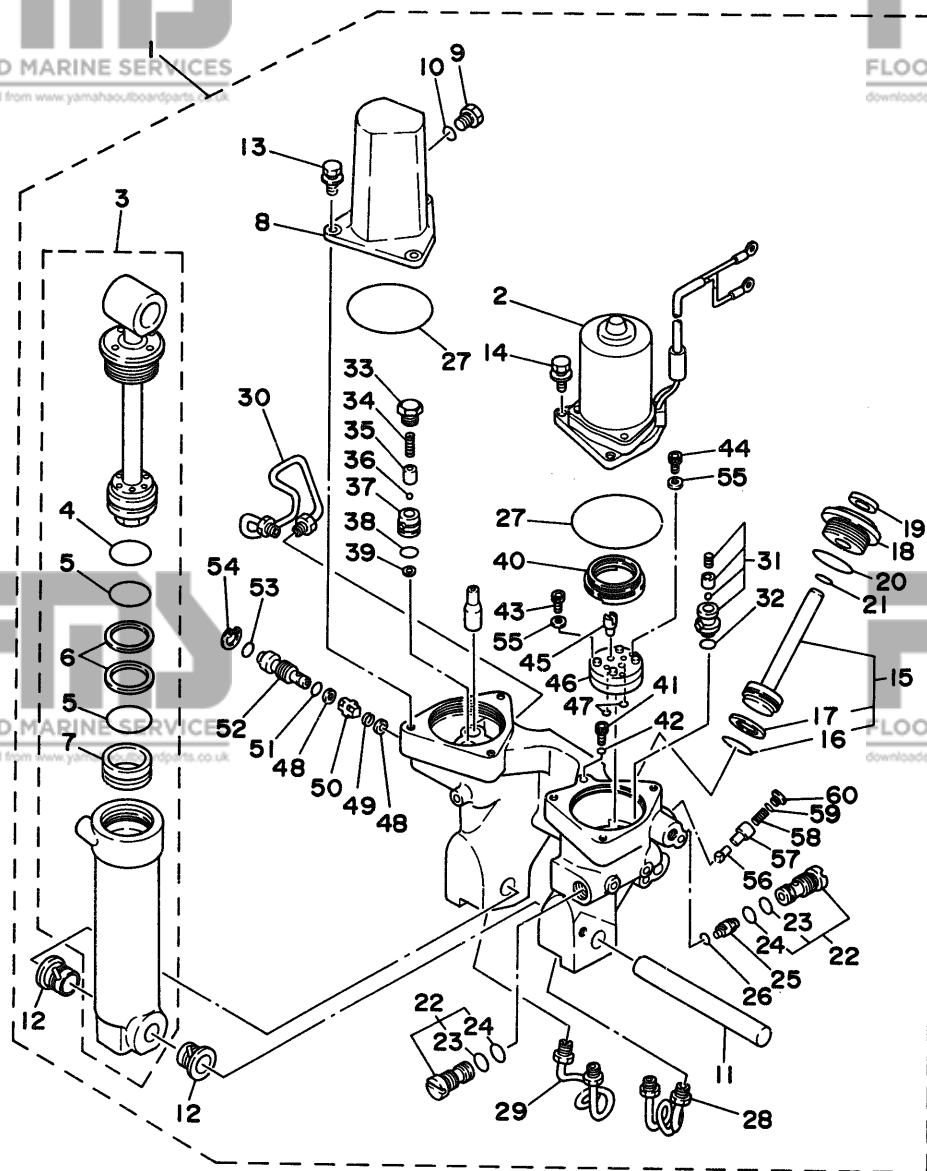


Fig. 26 ALTERNATE 7 (40HEPO MODEL)

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H5-43840-04-EJ	POWER TILT ASSY	1	29	6H5-43813-00	.CYLINDER, tilt	1
2	6H5-43828-00	.BODY, reservoir	1	30	6H5-4385A-00	.PISTON, tilt	1
3	6H5-43841-00	.PISTON, shuttle	1	31	6H5-43801-00	.ROD	1
4	6H5-43861-00	.O-RING	1	32	6H5-43858-00	.BALL	5
5	6H5-43891-00	.BRUSH	2	33	6H5-43857-00	.SPRING, absorber valve	5
6	6H5-43862-00	.O-RING	2	34	6H5-43893-00	.WASHER	1
7	6H5-43649-00	.PIN, valve support	2	35	6H5-43814-00	.PISTON, free	1
8	6H5-43853-00	.SPRING, main valve	1	36	6H5-43883-00	.O-RING	2
9	6H5-4382E-00	.ADAPTOR 2	2	37	6H5-43871-00	.RING, back up	2
10	6H5-43863-00	.O-RING	2	38	6H5-4381E-00	.BRACKET	1
11	6H5-43846-02	.SCREW, manual valve seat	1	39	6H5-43896-00	.O-RING	1
12	6H5-43864-00	.O-RING	1	40	6H5-43873-00	.RING, back up	1
13	6H5-43865-00	.O-RING	1	41	6H5-4381A-00	.SHAFT	5
14	6H5-43875-00	.RING, snap	1	42	6H5-43812-00	.SEAL, dust	1
15	6H5-43866-00	.O-RING	2	43	6H5-43897-00	.O-RING	1
16	6H5-43837-00	.GEAR, driven	1	44	6H5-43880-02	.MOTOR ASSY	1
17	6H5-43836-00	.GEAR, drive	1	45	6H5-43826-00	.PLUG, taper screw	3
18	6H5-43858-10	.BALL	5	46	6H5-43811-00	.SCREW, cylinder end	2
19	6H5-43856-00	.SPRING, down relief	2	47	6H5-4381F-00	.BRACKET	1
20	6H5-43844-00	.PIN, valve support	2	48	6H5-43887-00	.BOLT, through	4
21	6H5-43867-00	.O-RING	1	49	6H5-43886-00	.BOLT	3
22	6H5-43868-00	.O-RING	1	50	6H5-43872-00	.RING, back up	1
23	6H5-43853-10	.SPRING, main valve	1	51	91316-06020	.BOLT	4
24	6H5-43859-00	.PIN, valve support	6	52	92990-06100	.WASHER, spring	12
25	6H5-43855-01	.SPRING, up relief	1	53	95600-12100	.NUT, u	1
26	6H5-4386F-00	.RING, straight	1	54	6G1-82127-00	.WIRE, lead 2	1
27	6H5-43829-00	.PLUG, reservoir	1	55	6H5-4388A-00	.BOLT	1
28	6H5-43865-00	.O-RING	1				

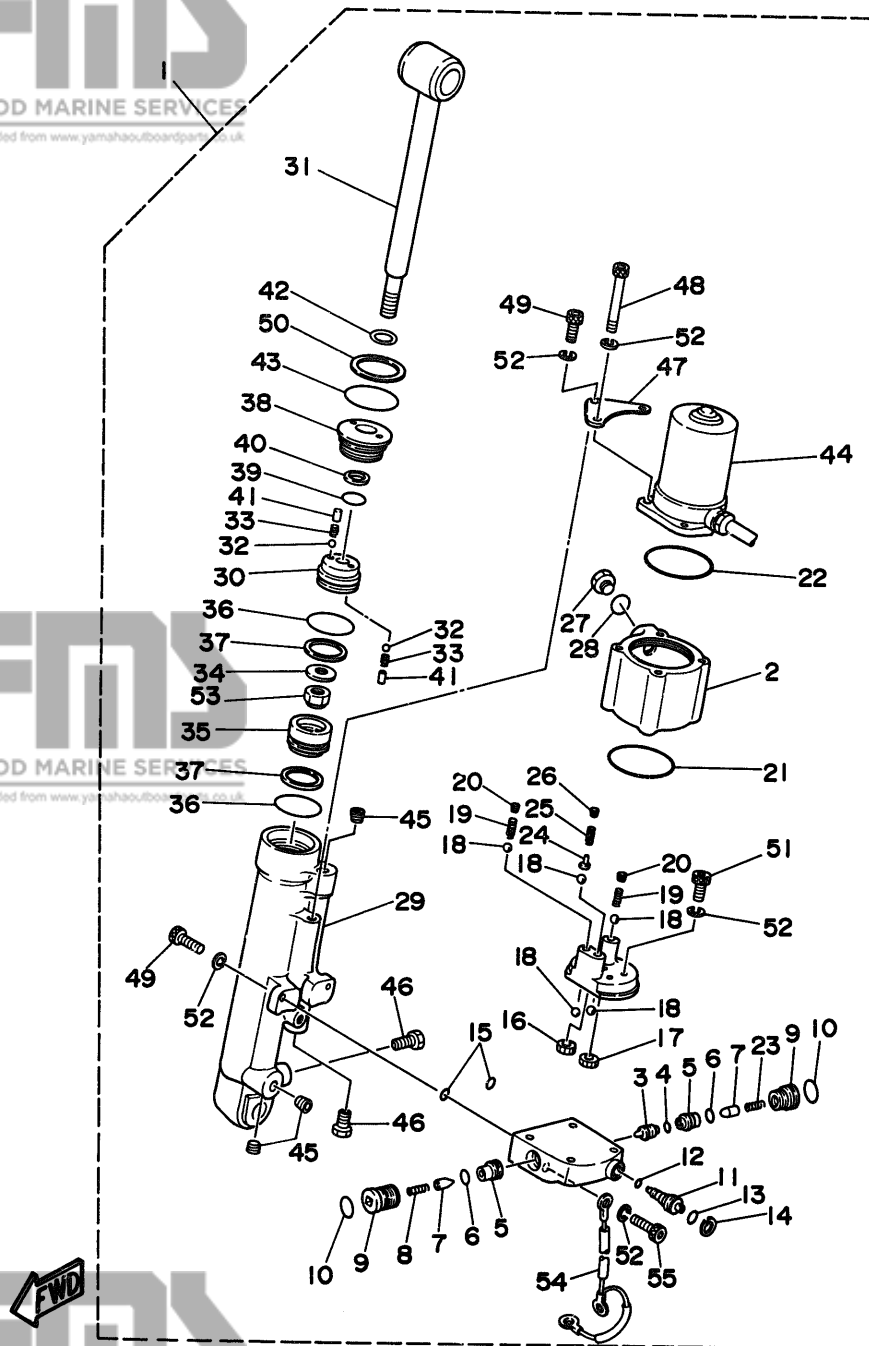


Fig. 27 ALTERNATE 8 (40HEO/40HEPO/40HETO MODEL)

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H5-85550-00	ROTOR ASSY	1	10	98501-05012	.SCREW, pan head	6
2	6H5-85560-02	BASE ASSY	1	11	92901-05100	.WASHER, spring	6
3	6H4-15359-04-94	.HOUSING, oil seal	1	12	92901-05600	.WASHER, plate	6
4	6H5-85520-00	.COIL, charge	1	13	98501-06025	.SCREW, pan head	2
5	6H5-85533-01	.COIL, lighting	1	14	92990-06100	.WASHER, spring	2
6	6H5-85580-00	.COIL, pulser	1	15	98501-06030	.SCREW, pan head	4
7	6H5-85580-10	.COIL, pulser	1	16	92990-06100	.WASHER, spring	4
8	6H5-85580-20	.COIL, pulser	1	17	90464-03M15	.CLAMP	2
9	6H4-83354-00	.WIRE, earth lead 1	1	18	93102-23096	.OIL SEAL	1

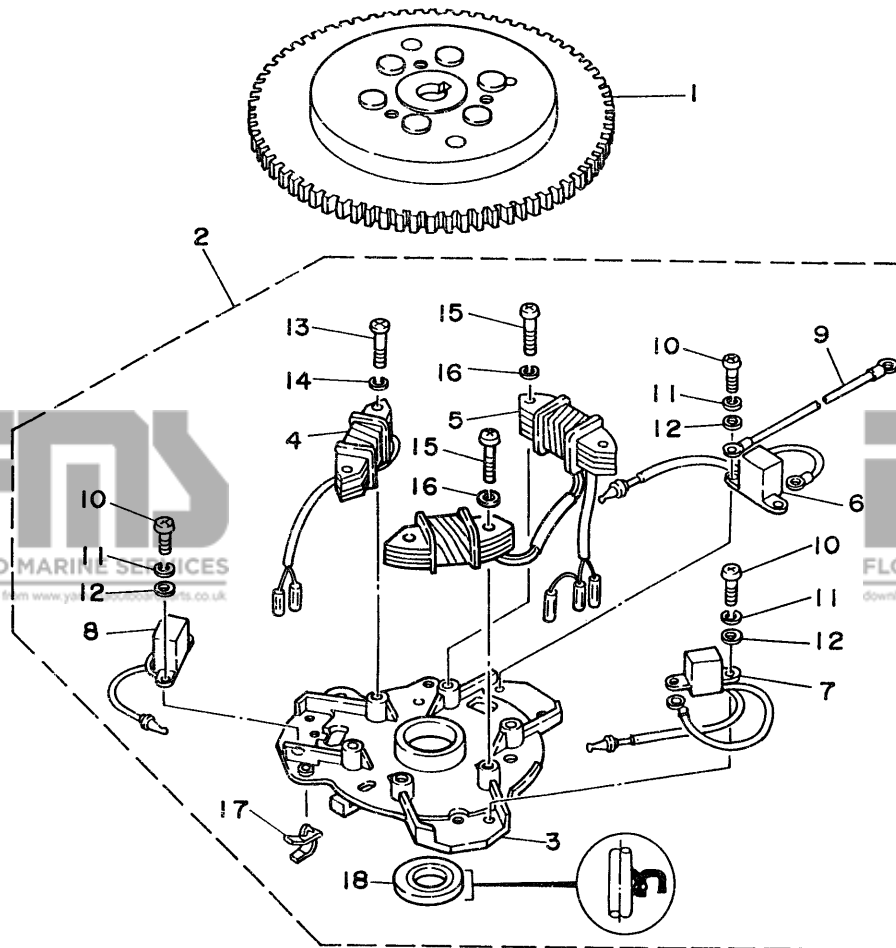


Fig. 28 ALTERNATE 9 (40HEO/40HEPO/40HETO MODEL)

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6F5-81800-11	STARTING MOTOR ASSY	1	23	97895-06040	SCREW, pan head	1
2	689-81857-11	.PISTON STOPPER SET	1	24	97895-06035	SCREW, pan head	2
3	689-81807-12	.GEAR ASSY, starting motor	1	25	6J8-15723-E1	PULLEY, starter	1
4	6F5-81830-11	.FRONT BRACKET ASSY	1	26	6J8-81365-A0	GASKET, hole cover	1
5	689-81847-11	.O-RING	2	27	97021-08014	BOLT	3
6	689-81809-11	.WASHER KIT	1	28	92990-08600	WASHER, plate	3
7	689-81850-12	.ARMATURE ASSY	1	29	6H4-81822-01-98	BRACKET, starting motor	1
8	689-81810-11	.STATOR ASSY	1	30	97313-06030	BOLT	4
9	689-81811-11	.BRUSH 1	1	31	92990-06600	WASHER, plate	4
10	689-81840-11	.BRUSH HOLDER ASSY	1	32	97313-08050	BOLT	1
11	689-81812-11	.BRUSH 2	1	33	92990-08600	WASHER, plate	1
12	689-81813-10	.SPRING, brush	2	34	95570-06640	BOLT, stud	1
13	689-81820-11	.REAR BRACKET ASSY	1	35	90179-06M24	NUT	1
14	689-81826-10	.BOLT	2	36	97313-06014	BOLT	2
15	97313-08030	BOLT	2	37	92990-06600	WASHER, plate	2
16	92990-08600	WASHER, plate	2	38	90338-05M11	PLUG	1
17	97313-08016	BOLT	1	39	6G1-81941-10	STARTER RELAY ASSY	1
18	92990-08600	WASHER, plate	1	40	6H4-81952-00	HOLDER, relay	1
19	6H4-82117-00	WIRE, lead	1	41	6H4-81945-00	PLATE, switch fitting	1
20	6H4-81337-01	COVER, flywheel	1	42	90116-06M22	BOLT, stud	1
21	90387-06M65	COLLAR	3	43	95380-06600	NUT	2
22	90209-06M04	WASHER	3	44	92990-06600	WASHER, plate	1

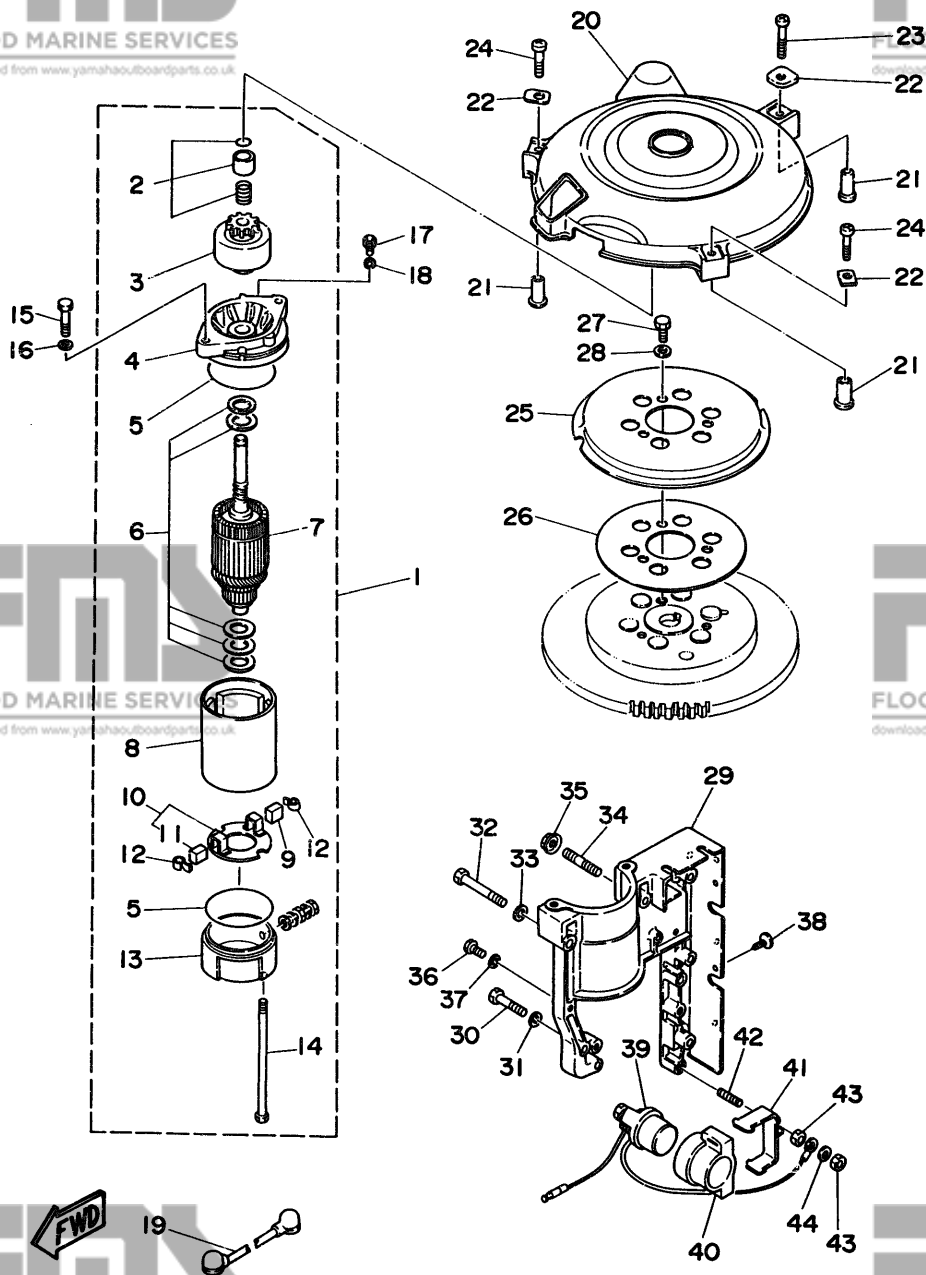


Fig. 29 ALTERNATE 10 (40HEO/40HEPO MODEL)

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H4-82105-01	WIRE HARNESS	1	16	6H4-82588-00	PLATE	1
2	6G1-81970-61	RECTIFIER ASSY	1	17	97013-06012	BOLT	1
3	6G1-82151-00	.FUSE	1	18	6H4-82590-22	WIRE HARNESS ASSY (40HEPO Model)	1 UR
4	98503-05025	SCREW, pan head	1	19	6H4-82590-11	WIRE HARNESS ASSY (40HEO Model)	1
5	92990-05600	WASHER, plate	1	20	6H5-81950-00	RELAY ASSY (40HEPO Model)	1
6	90465-18147	CLAMP	1	21	92990-06200	WASHER, plain (40HEPO Model)	2
7	6H4-48531-10-94	BRACKET, remote control 1	1	22	97313-06025	BOLT (40HEO Model)	2
8	6H4-48532-10-94	BRACKET, remote control 2	1	23	92990-06600	WASHER, plate (40HEPO Model)	2
9	6H4-42724-20	GROMMET	1	24	90387-06M05	COLLAR (40HEPO Model)	2
10	6H4-42725-00	GROMMET	1	25	6H5-81920-00	TERMINAL ASSY (40HEPO Model)	1
11	676-42726-00	GROMMET	1	26	97013-06012	BOLT (40HEPO Model)	1
12	6H4-82554-00	STAY, neutral switch	1	27	92990-06600	WASHER, plate (40HEPO Model)	1
13	6H4-44173-01	LEVER, shift control	1	28	6E5-82582-00	COVER, wire harness (40HEPO Model)	1
14	91690-30020	PIN, spring	1				
15	90464-15M27	CLAMP	1				
				28	90464-07M20	CLAMP (40HEPO Model)	1

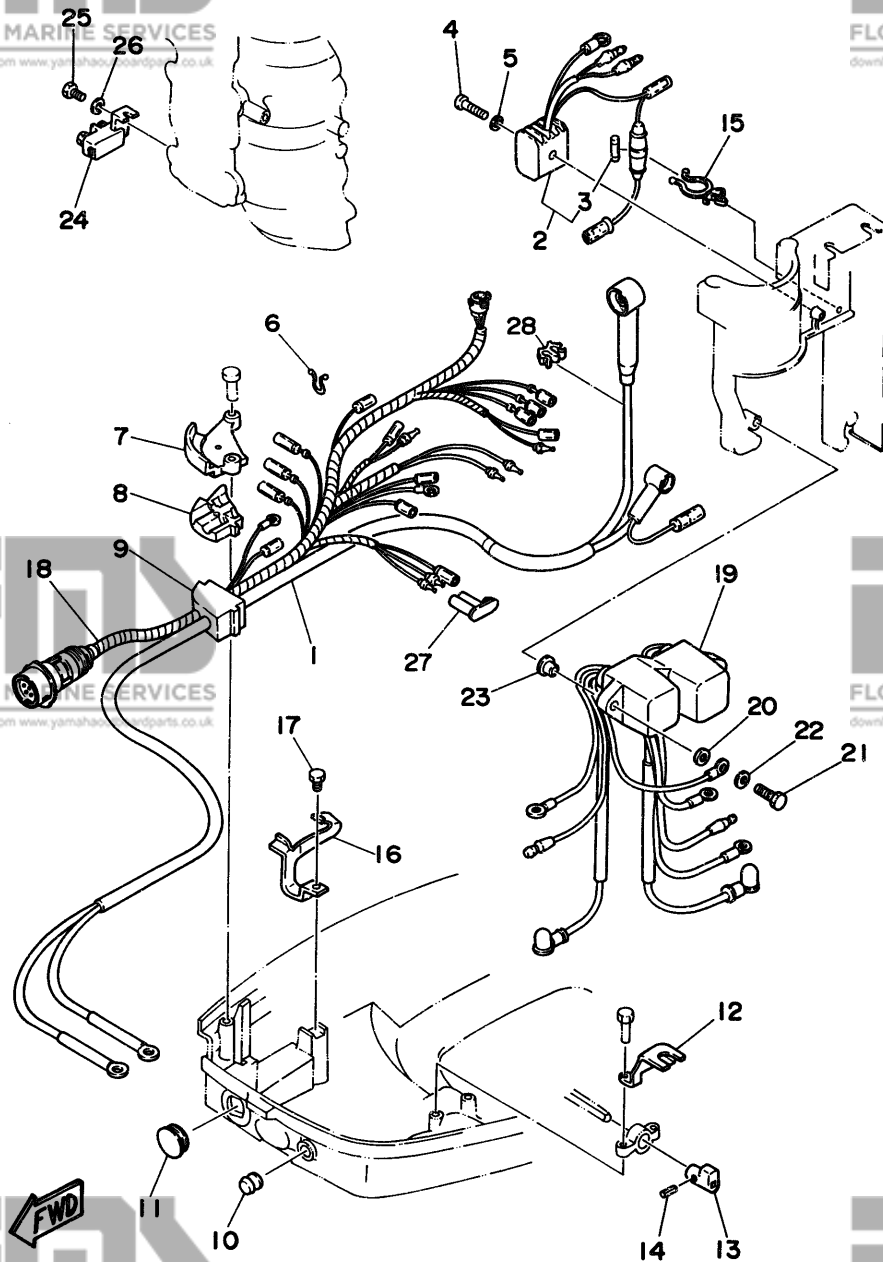


Fig. 30 ALTERNATE 11 (40HETO MODEL)

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H4-82105-01	WIRE HARNESS	1	18	6H5-81949-00	WIRE, lead	1
2	90464-07M20	CLAMP	1	19	61A-81949-00	WIRE, lead	1
3	6G1-81970-61	RECTIFIER ASSY	1	20	682-82119-00	COVER, lead wire	1
4	6G1-82151-00	FUSE	1	21	6H1-82563-00	TRIM & TILT SWITCH ASSY	1
5	98503-05025	SCREW, pan head	1	22	6E5-82587-00	GASKET	1
6	92990-05600	WASHER, plate	1	23	6E5-83614-01	BRACKET	1
7	90465-18147	CLAMP	1	24	97313-06016	BOLT	2
8	6H4-82590-22	WIRE HARNESS ASSY	1	25	90464-07M05	CLAMP	1
9	6H4-82588-00	PLATE	1	26	97013-06012	BOLT	1
10	6H1-81950-00	RELAY ASSY	1	27	6H4-42725-00	GROMMET	1
11	97395-06025	BOLT	2	28	676-42726-00	GROMMET	1
12	92990-06600	WASHER, plate	2	29	6H4-42724-20	GROMMET	1
13	6H4-81945-20	PLATE, switch fitting	1	30	6H4-82554-00	STAY, neutral switch	1
14	90480-13M24	GROMMET	3	31	6H4-44173-01	LEVER, shift control	1
15	90387-06M05	COLLAR	3	32	91690-30020	PIN, spring	1
16	90105-06M15	BOLT, washer based	2	33	90464-15M27	CLAMP	1
17	90105-06M16	BOLT, washer based	1				

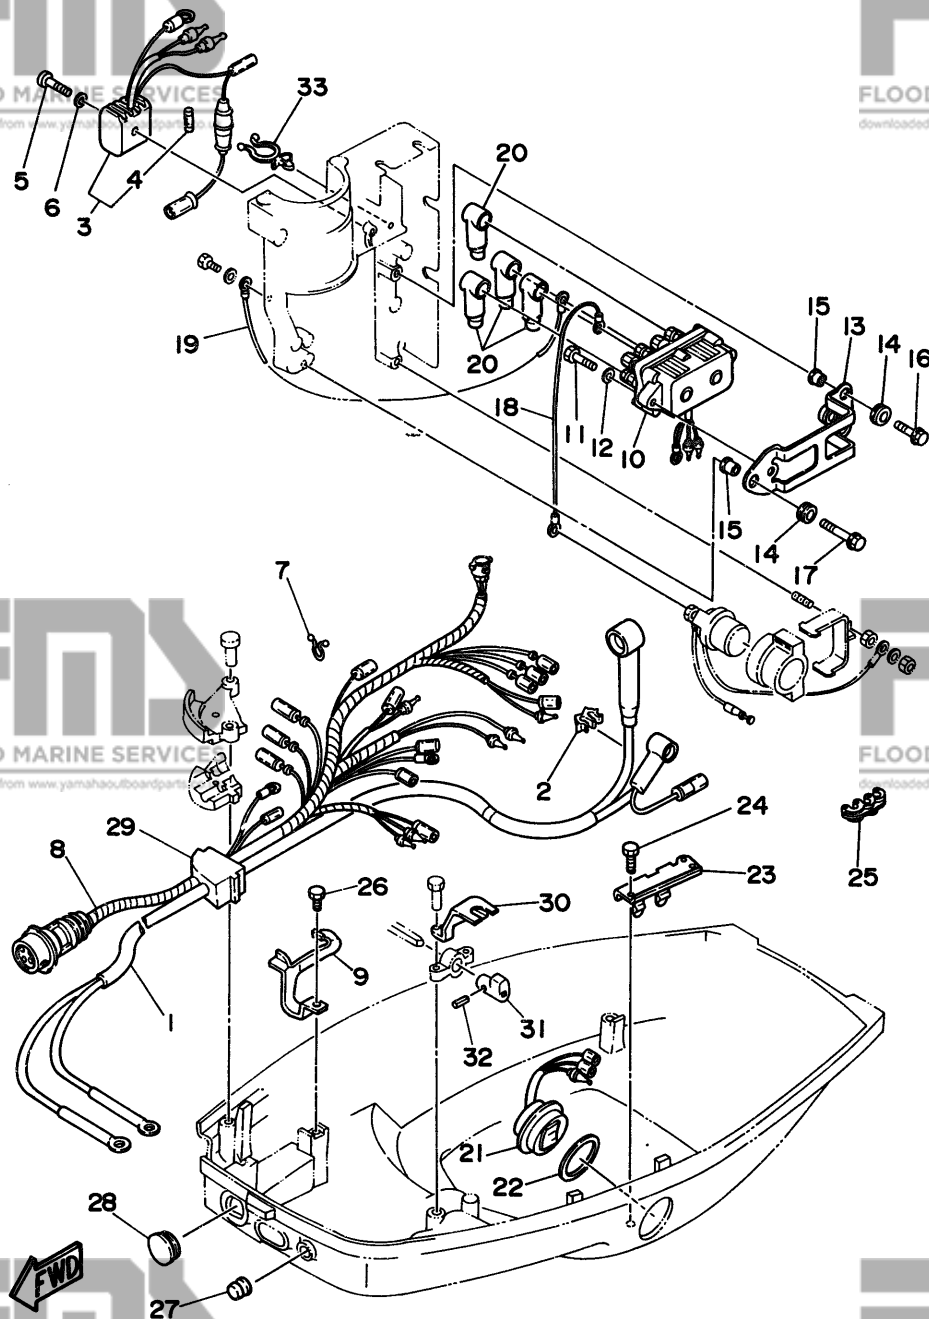


Fig. 31 REMOTE CONTROL

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
* 1	701-48101-11	REMOTE CONTROL ASSY (Right)	1 UR	6	701-48320-30	CABLE, remote control (L:14F)	2 UR
* 2	701-48102-11	REMOTE CONTROL ASSY (Left)	1 UR	701-48320-50	CABLE, remote control (L:15F)	2 UR	
* 3	701-48110-23	REMOTE CONTROL ASSY (Twin)	1 UR	701-48320-60	CABLE, remote control (L:16F)	2 UR	
* 4	703-48210-12	REMOTE CONTROL ASSY (10P) (Single)	1 UR	701-48320-80	CABLE, remote control (L:17F)	2 UR	
* 703-48250-12	REMOTE CONTROL ASSY (10P) (With Trim & Tilt Switch)	1 UR		701-48320-90	CABLE, remote control (L:18F)	2 UR	
* 5	703-48280-12	REMOTE CONTROL ASSY (10P) (Twin Lever)	1 UR	701-48320-40	CABLE, remote control (L:19F)	2 UR	
6	701-48310-10	CABLE, remote control (L:6F)	2 UR	701-48320-70	CABLE, remote control (L:20F)	2 UR	
	701-48310-20	CABLE, remote control (L:7F)	2 UR	701-48350-00	CABLE, remote control (L:21F)	2 UR	
	701-48310-40	CABLE, remote control (L:8F)	2 UR	701-48350-10	CABLE, remote control (L:22F)	2 UR	
	701-48310-60	CABLE, remote control (L:9F)	2 UR	701-48350-20	CABLE, remote control (L:23F)	2 UR	
	701-48310-80	CABLE, remote control (L:10F)	2 UR	7	703-48290-01	TWIN ATTACHMENT	1
	701-48310-90	CABLE, remote control (L:11F)	2 UR	8	6H4-48344-00	CABLE END, remote control	2
	701-48320-00	CABLE, remote control (L:12F)	2 UR	9	90468-18008	CLIP	2
	701-48320-20	CABLE, remote control (L:13F)	2 UR	10	6H4-48511-51-EJ	HOOK, steering (Steering Guide Type)	1 UR
					688-42511-01-EJ	HOOK, steering (Ball Post Type)	1 UR

* See Fig. 33 and 34 for detail service parts.

Fig. 32 STEERING GUIDE ATTACHMENT

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	689-61350-02	STEERING GUIDE ATTACHMENT KIT	1 UR	17	90201-10M63	.WASHER	1
2	689-61351-01	.ROD, steering link	1	18	6E5-61355-00	.BOLT	1
3	90201-10M20	.WASHER, plate	2	19	6E5-43145-00	.CAP, clamp bracket	1
4	90185-09M01	.NUT, self-locking	2	20	93210-16275	.O-RING	1
5	6E5-61355-00	.BOLT	1	21	6E5-61301-01	TWIN KIT (L:600-800mm)	1 UR
6	90201-10M63	.WASHER, plate	1		688-61301-01	TWIN KIT (L:430-630mm)	1 UR
7	90387-10M42	.COLLAR	1	22	90185-09M01	.NUT, self-locking	2
8	90170-09M03	.NUT	1	23	90201-10M76	.WASHER, plate	2
9	6E5-43145-00	.CAP, clamp bracket	1	24	90101-09M70	.BOLT	2
10	93210-16275	.O-RING	1	25	90170-09M05	.NUT	2
11	688-61350-10	STEERING GUIDE ATTACHMENT KIT (40HETO Model)	1 UR	26	6E5-61303-00	.STEERING EYE COMP.	2
12	688-61351-10	.ROD, steering link	1	27	6E5-61311-11	.TIE BAR (L:600-800mm)	1 UR
13	90201-10M20	.WASHER	2		688-61311-11	.TIE BAR (L:430-630mm)	1 UR
14	90185-09M01	.NUT, self-locking	2	28	95380-14700	.NUT	2
15	90170-09M03	.NUT	1	29	6E5-61315-00	.TIE BAR	1
16	90387-10M42	.COLLAR	1	30	6E5-61313-00	.ADJUSTER	1
				31	90170-14M06	.NUT	1

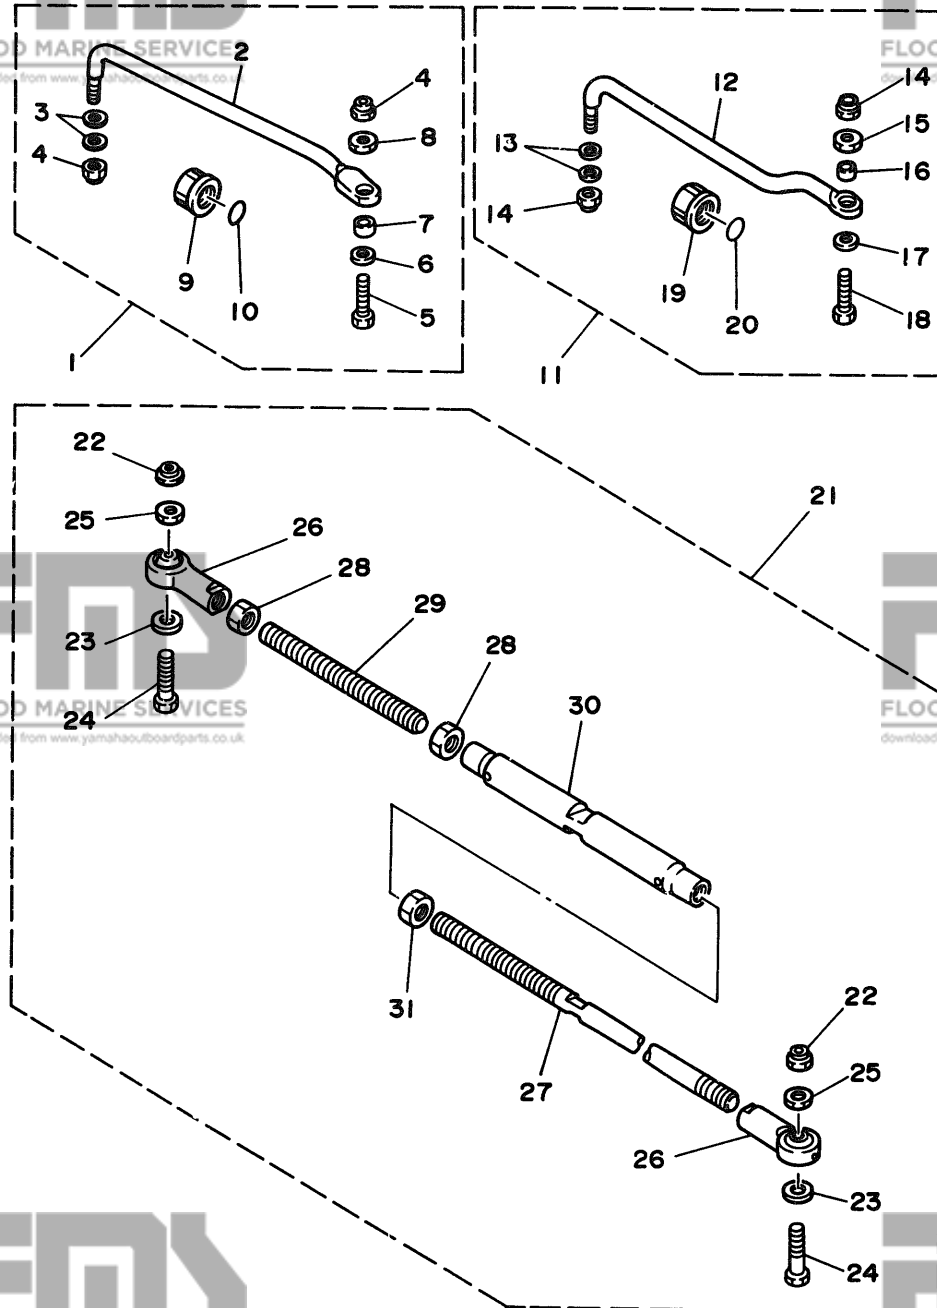


Fig. 33 REMOTE CONTROL ASSY 1

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	701-48101-11	REMOTE CONTROL ASSY (Right)	1 UR	24	701-48246-00	.SPACER	2
	701-48102-11	REMOTE CONTROL ASSY (Left)	1 UR	25	92990-06300	.WASHER, internal tooth	1
	701-48110-23	REMOTE CONTROL ASSY (Twin)	1 UR	26	701-48229-00	.GRIP, control lever	1
2	701-48235-00	.BUSHING	1	27	701-48222-00	.GRIP, control lever	1
3	701-48197-10	.WASHER, wave	1	28	98580-05555	.SCREW	2
4	701-48252-00	.ROLLER, cam	1	29	701-48239-00	.SET PIN, plate	1
5	701-48234-00	.BUSHIG 1	1	30	701-48266-00	.SPACER	1
6	701-48221-00	.LEVER, control	1	31	701-48232-00	.GEAR	1
7	701-48196-11	.WASHER, wave	1	32	701-48189-11	.RETAINER	1
8	701-48236-00	.ROLLER, detent	1	33	98580-05010	.SCREW, pan head	2
9	702-48237-00	.ADAPTOR	1	34	701-48153-12	.SHAFT, free accel.	1
10	702-48238-00	.SPRING, detent	1	35	701-48271-00	.ARM, shift (Right)	1 UR
11	701-48249-00	.ADAPTOR, spring	1		701-48271-10	.ARM, shift (Left)	1 UR
12	701-48248-00	.ROLLER, free accel.	1	36	93430-06024	.CIRCLIP	3
13	701-48152-11	.KNOB, free accel. (Right)	1 UR	37	703-48345-01	.CABLE END, remote control 2	2
	701-48152-20	.KNOB, free accel. (Left)	1 UR	38	701-48261-00	.ARM, throttle (Right)	1 UR
14	701-48243-00	.BUSHING	1		701-48261-10	.ARM, throttle (Left)	1 UR
15	701-48198-10	.WASHER, wave	1	39	701-48358-00	.ANCHOR, cable	1
16	701-48281-10	.SCREW (For Single) (M6x40)	3	40	701-82550-50	.ENGINE STOP SWITCH ASSY	1
17	98580-05010	.SCREW	4	41	701-48126-00	.GRAPHIC	1
18	701-48268-00	.SPACER	1	42	701-48283-00	.SCREW	1
19	701-48213-00	.PLATE	1	43	701-82594-00	.CLAMP	1
20	92780-06025	.SCREW, flat head	2	44	701-48291-00	.ATTACHMENT (For Twin)	1
21	701-48255-00	.COLLAR	1	45	701-48287-00	.WASHER (For Single)	3
22	97395-06018	.BOLT	2	46	95380-06600	.NUT (For Single)	3
23	702-48288-00	.WASHER, plate	1	47	701-48280-00	NEUTRAL LOCK KIT	1 AP


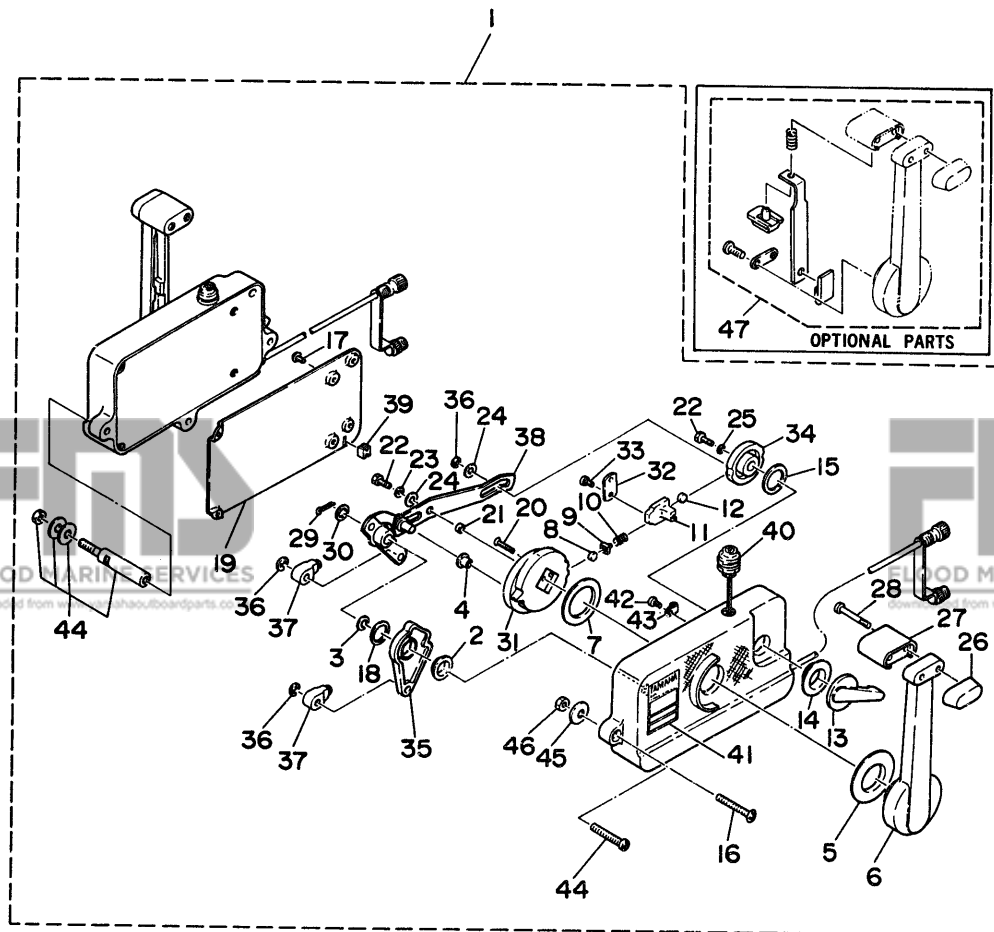



Fig. 34 REMOTE CONTROL ASSY 2

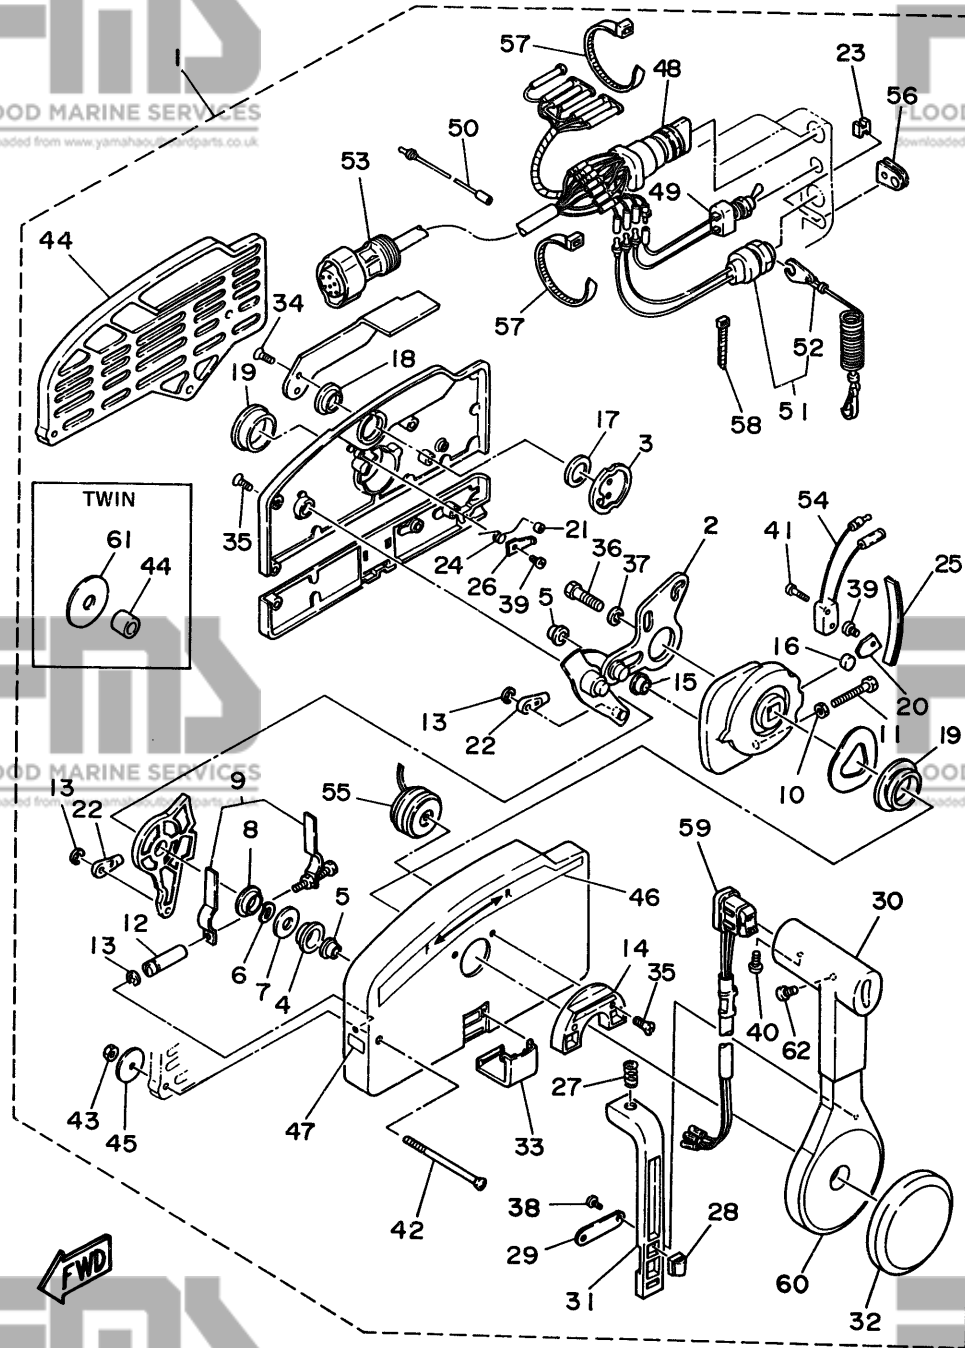

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	703-48210-12	REMOTE CONTROL ASSY (10P) (Single)	1 UR	31	703-48223-00	.LOCK, neutral	1
	703-48250-12	REMOTE CONTROL ASSY (10P) (With Trim & Tilt Switch)	1 UR	32	703-48225-00	.COVER	1
	703-48280-12	REMOTE CONTROL ASSY (10P) (Twin Lever)	1 UR	33	703-48219-00	.COVER, lead	1
2	703-48261-10	.ARM, throttle	1	34	98780-05012	.SCREW, flat head	2
3	703-48153-00	.SHAFT, free accel.	1	35	98780-05016	.SCREW, flat head	7
4	703-48235-00	.BUSHING	1	36	97395-08030	.BOLT	1
5	703-48273-00	.BUSHING	2	37	92990-08600	.WASHER, plate	1
6	703-48197-00	.WASHER, wave	1	38	98580-04010	.SCREW, pan head	3
7	703-48268-00	.SPACER	1	39	98580-04006	.SCREW, pan head	2
8	703-48263-00	.BUSHING	1	40	98580-05010	.SCREW, pan head	1
9	703-48264-00	.THROTTLE, friction	1	41	98580-03015	.SCREW, pan head	2
10	95380-05600	.NUT	1	42	703-48291-10	.SCREW	3
11	97380-05025	.BOLT	1	43	95380-06600	.NUT	3
12	703-48265-00	.SHAFT, friction	1	44	703-48293-10	.SPACER, remote control (Single)	1 UR
13	93430-06024	.CIRCLIP	3		703-48293-00	.SPACER, remote control (Twin)	3 UR
14	703-48245-00	.PLATE, lock	1	45	701-48287-00	.WASHER	3
15	703-48252-00	.SHAFT, cam	1	46	703-48215-00	.GRAPHIC	1
16	701-48248-00	.ROLLER, free accel.	1	47	702-48217-00	.MARK	1
17	703-48198-00	.WASHER, wave	1	48	703-82510-10	.MAIN SWITCH ASSY	1
18	703-48243-00	.BUSHING	1	49	703-82574-00	.SWITCH, choke	1
19	703-48236-00	.BUSHING 1	2	50	703-82531-00	.WIRE, lead	1
20	703-48189-00	.RETAINER	1	51	688-82575-01	.ENGINE STOP SWITCH ASSY	1
21	703-48234-00	.ROLLER, detent	1	52	682-82556-00	..STOPPER	1
22	703-48345-01	.CABLE END, remote control 2	2	53	688-8258A-20	.EXTENSION, wire harness (10P) (L:5m)	1
23	703-48358-00	.ANCHOR, cable	1	54	703-82540-00	.NEUTRAL SWITCH ASSY	1
24	703-48244-00	.SPRING, free accel.	1	55	703-83383-02	.BUZZER	1
25	703-48238-00	.SPRING, detent	5	56	703-48284-00	.GROMMET	1
26	703-48246-00	.SPACER	1	57	90465-13169	.CLAMP	2
27	703-48227-00	.SPRING, neutral lock	1	58	80L-26397-00	.BAND	1
28	703-82594-00	.CLAMP	1	59	703-82563-01	.TRIM & TILT SWITCH ASSY	1 UR
29	703-48226-00	.PLATE, stopper	1		703-48224-00	.COVER, control lever (Without Trim & Tilt Switch)	1 UR
30	703-48222-00	.GRIP, control lever (Single)	1 UR	60	703-48221-00	.LEVER, control	1
	703-48222-10	.GRIP, control lever (Twin)	1 UR	61	702-48287-00	.WASHER (Twin)	3
				62	98580-04010	.SCREW (Single)	1

Fig. 35 OPTIONAL PARTS 1

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	689-82575-13	ENGINE STOP SWITCH ASSY	1	7	676-42726-00	GROMMET	1
2	682-82556-00	.STOPPER	1	8	661-81970-61	RECTIFIER ASSY	1
3	6A0-82553-20	EXTENSION, wire lead	1	9	661-82151-00	.FUSE	1
4	676-42726-00	GROMMET	1	10	98503-05025	SCREW, pan head	1
5	689-82550-11	ENGINE STOP SWITCH ASSY	1	11	92990-05600	WASHER, plate	1
6	6A0-82553-20	EXTENSION, wire lead	1	12	663-81910-10	VOLTAGE REGULATOR ASSY	1

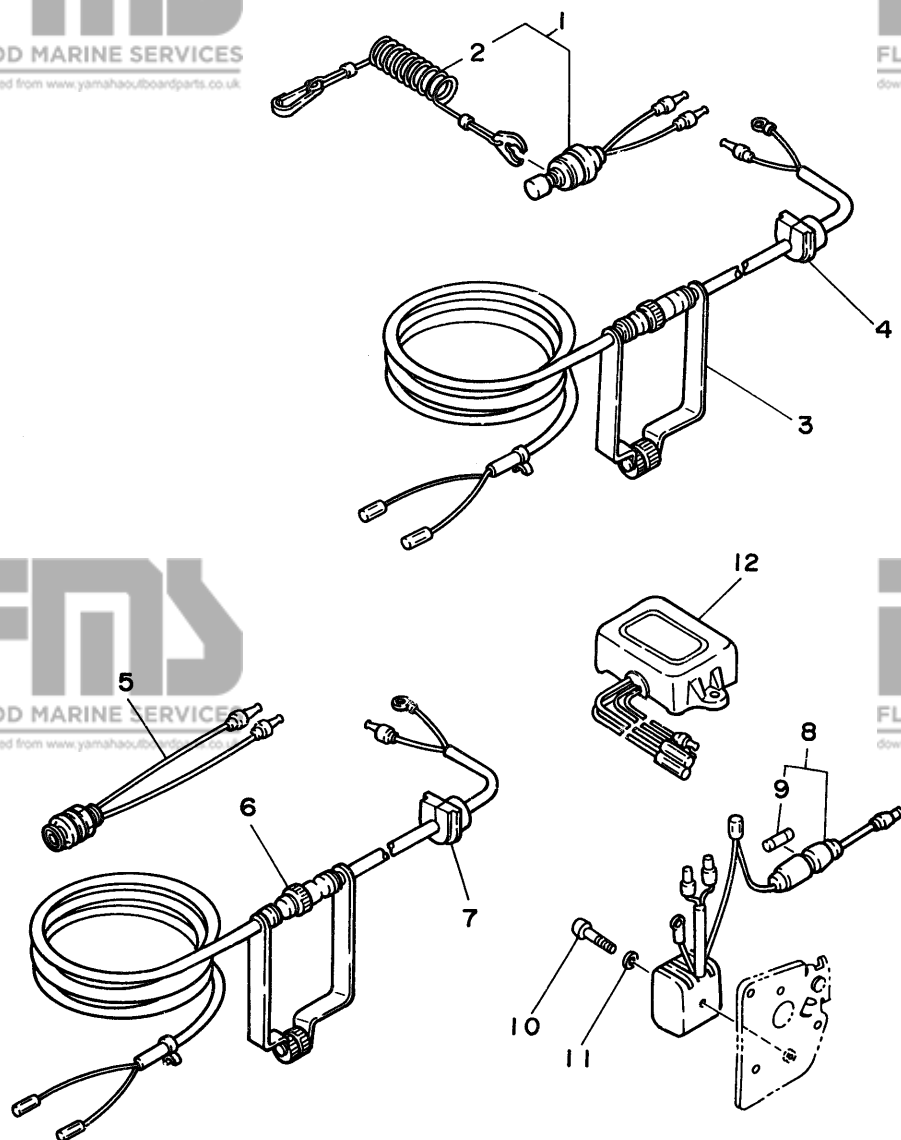

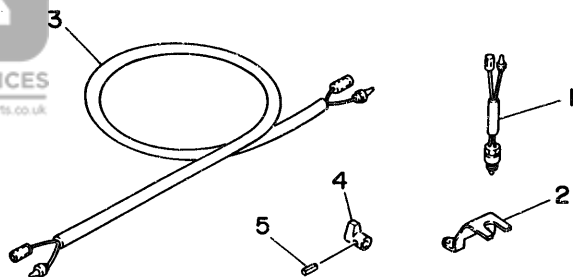


Fig. 36 OPTIONAL PARTS 2

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H3-82540-00	NEUTRAL SWITCH ASSY	1	13	98303-04008	.SCREW, cylinder head	1
2	6H4-82554-00	STAY, neutral switch	1	14	92901-04100	.WASHER, spring	1
3	6H4-82553-00	EXTENSION, wire lead	1	15	90149-05M05	SCREW	4
4	6H4-44173-00	LEVER, shift control	1	16	95380-05600	NUT	4
5	91690-30020	PIN, spring	1	17	92990-05100	WASHER, spring	1
6	689-82570-15	PANEL SWITCH ASSY	1	18	92990-05600	WASHER, plate	4
7	689-82510-00	.MAIN SWITCH ASSY	1	19	688-8258A-50	EXTENSION, wire harness (10P)	
8	703-82574-00	.SWITCH, choke	1		(L:5m)		1
9	688-82575-01	.ENGINE STOP SWITCH ASSY	1	20	688-8258A-10	EXTENSION, wire harness (10P)	
10	682-82556-00	.STOPPER	1		(L:2m)		1 UR
11	689-82571-02	.PANEL, switch	1		688-8258A-30	EXTENSION, wire harness (10P)	
12	663-82581-01	.STAY, cord clamp	1		(L:3m)		1 UR

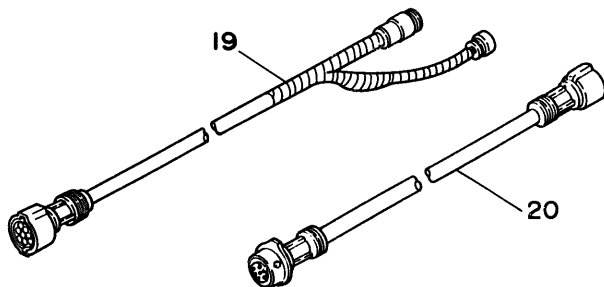
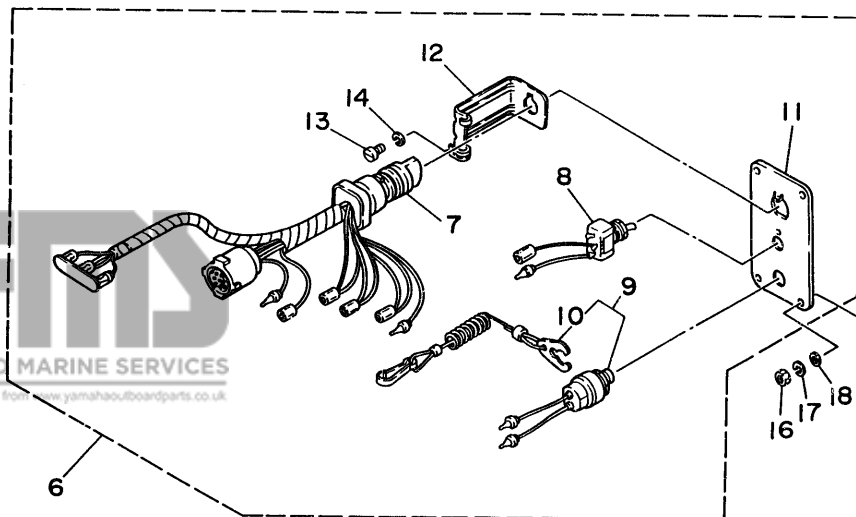
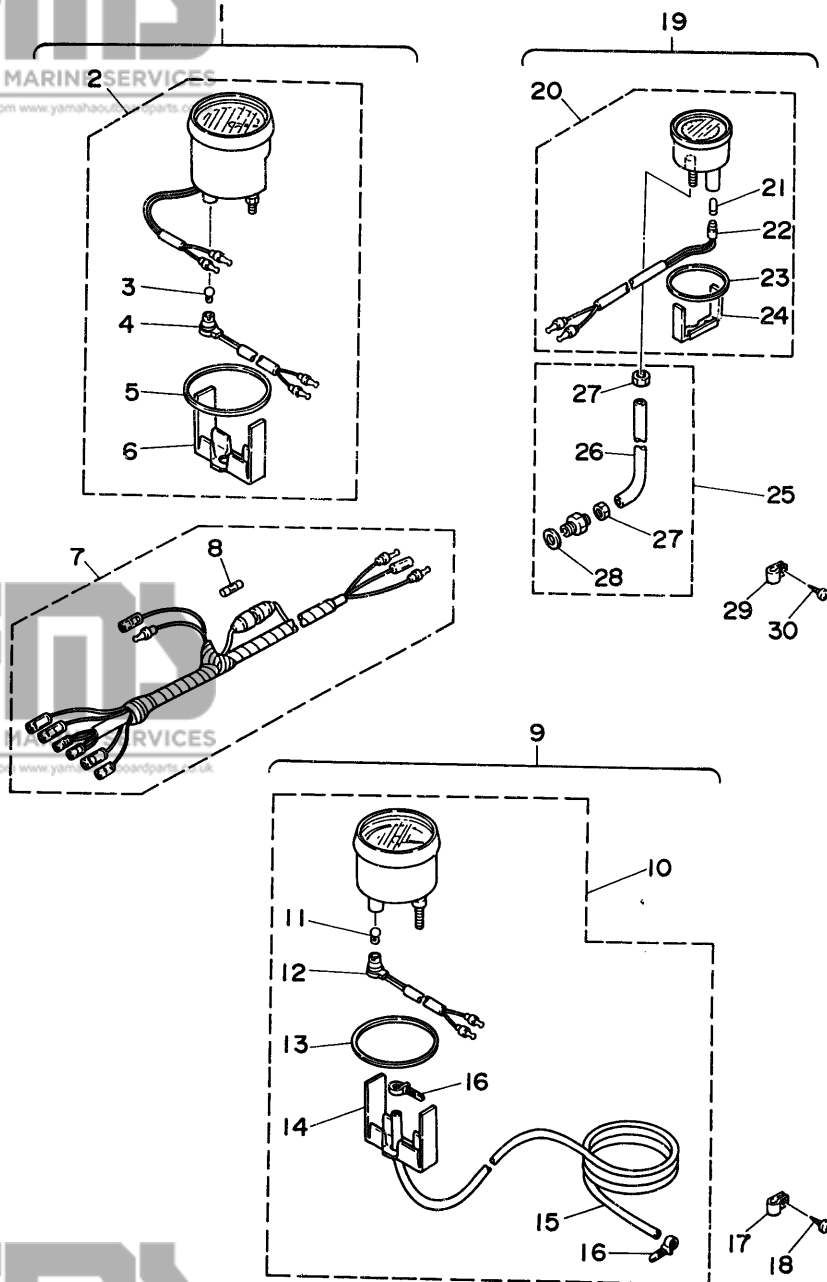


Fig. 37 OPTIONAL PARTS 3

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6Y5-W0080-11	TACHOMETER KIT	1	16	90465-11M10	..CLAMP	2
2	6Y5-83540-12	TACHOMETER ASSY	1	17	90601-31402	..NYLON CLIP 1	5
3	688-83516-00	..BULB	1	18	97780-40116	..SCREW, tapping	5
4	6Y5-83536-10	..SOCKET, meter	1	19	6Y5-W0088-00	WATER PRESSURE METER KIT	1
5	6Y5-83523-00	..DAMPER	1	20	6Y5-83660-00	..WATER PRESSURE METER ASSY	1
6	6Y5-83514-00	..PLATE, fitting	1	21	6Y5-83518-00	..BULB, meter	1
7	6Y5-83553-00	..WIRE, lead	1	22	6Y5-83536-00	..SOCKET, meter	1
8	1E6-82151-00	..FUSE (10A)	1	23	688-83664-00	..DAMPER	1
9	6Y5-W0081-30	SPEEDOMETER KIT	1	24	688-83665-00	..PLATE, fitting	1
10	6Y5-83510-30	..SPEEDOMETER ASSY	1	25	688-83667-00	..SENDER	1
11	688-83516-00	..BULB	1	26	688-83666-00	..TUBE	1
12	6Y5-83536-10	..SOCKET, meter	1	27	663-83668-00	..NUT, nipple	2
13	6Y5-83523-00	..DAMPER	1	28	90430-14115	..GASKET	1
14	6Y5-83514-00	..PLATE, fitting	1	29	90601-31402	..NYLON CLIP 1	5
15	688-83557-00	..TUBE	1	30	97780-40116	..SCREW, tapping	5



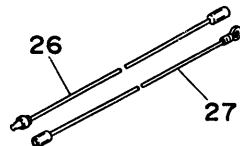
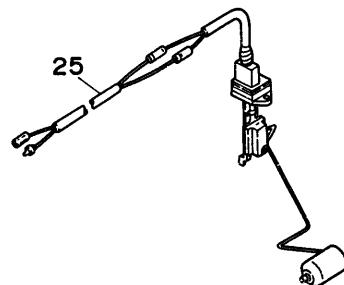
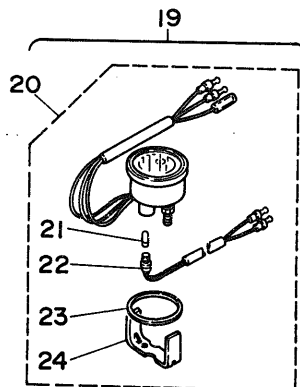
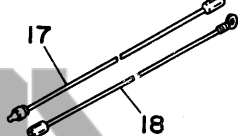
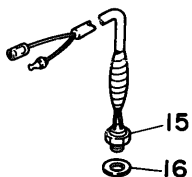
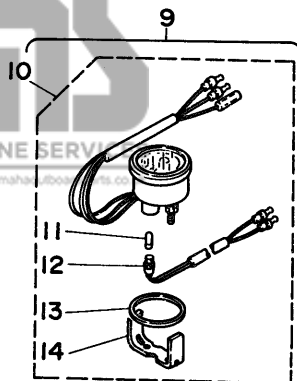

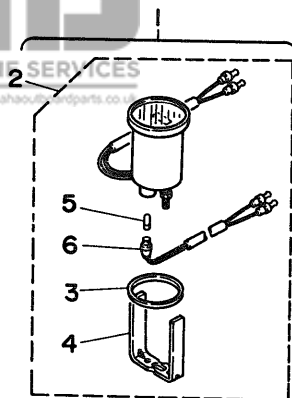


Fig. 38 OPTIONAL PARTS 4

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6Y5-W0088-31	HOUR METER KIT	1	15	688-83591-00	.THERMO UNIT	1
2	6Y5-83504-01	.HOUR METER ASSY	1	16	90430-14115	.GASKET	1
3	688-83664-00	.DAMPER	1	17	663-83553-Y0	.WIRE, lead	1
4	6Y5-83577-00	..PLATE, fitting	1	18	663-83553-A0	.WIRE, lead	1
5	6Y5-83518-00	..BULB, meter	1	19	6Y5-W0088-20	FUEL METER KIT	1
6	6Y5-83536-00	..SOCKET, meter	1	20	6Y5-85750-00	.FUEL METER ASSY	1
7	663-83553-A0	.WIRE, lead	1	21	6Y5-83518-00	..BULB, meter	1
8	663-83553-Y0	.WIRE, lead	1	22	6Y5-83536-00	..SOCKET, meter	1
9	6Y5-W0088-10	WATER TEMP. METER KIT	1	23	688-83664-00	..DAMPER	1
10	6Y5-83590-00	.WATER TEMPERATURE ASSY	1	24	6Y5-83544-00	..PLATE, fitting	1
11	6Y5-83518-00	..BULB, meter	1	25	688-85752-01	.SENDER UNIT ASSY, fuel meter	1
12	6Y5-83536-00	..SOCKET, meter	1	26	663-83553-Y0	.WIRE, lead	1
13	688-83664-00	..DAMPER	1	27	663-83553-A0	.WIRE, lead	1
14	6Y5-83544-00	..PLATE, fitting	1				

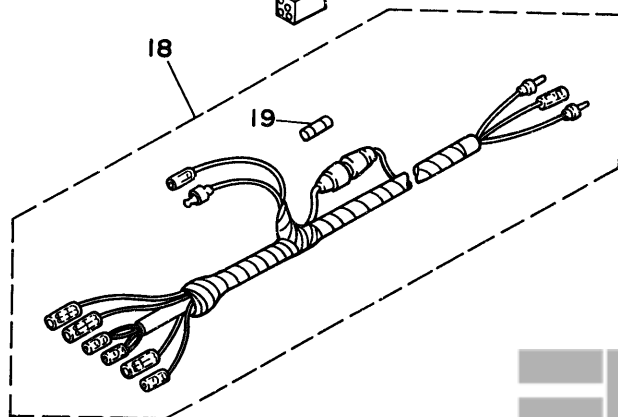
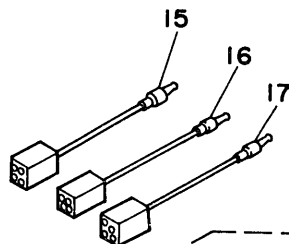
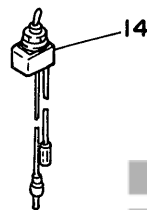
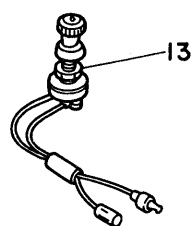
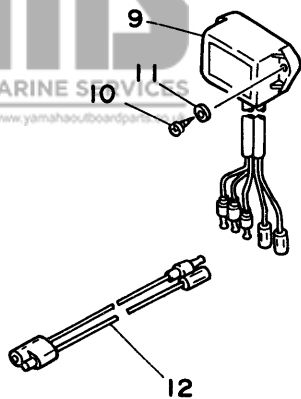
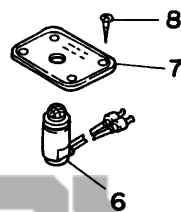

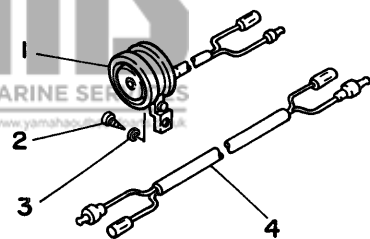
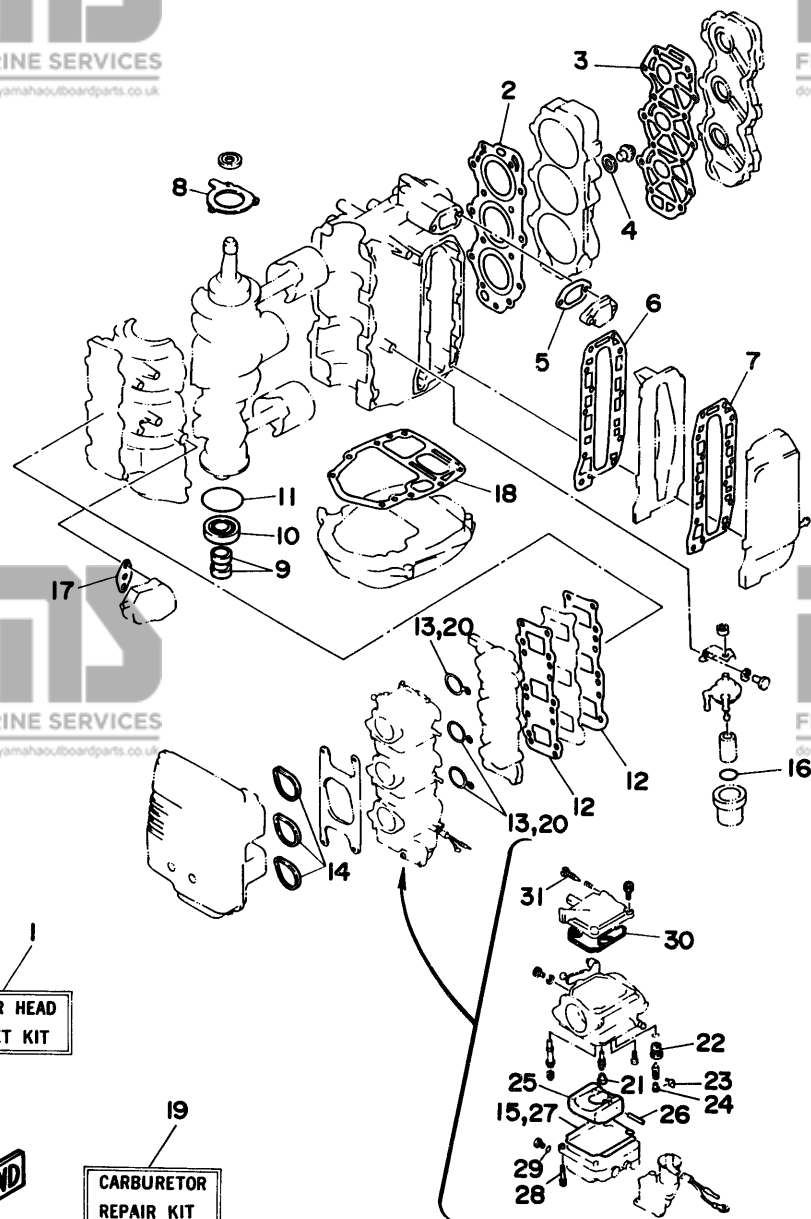


Fig. 39 OPTIONAL PARTS 5

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	688-83383-11	BUZZER	1	11	92990-06600	.WASHER, plate	2
2	97780-60516	SCREW, tapping	1	12	663-82521-09	.WIRE, lead	1
3	92990-05600	WASHER, plate	1	13	688-82520-00	LIGHT SWITCH ASSY	1 UR
4	688-83373-10	LEAD, horn	1	14	688-82526-00	SWITCH, lamp	1 UR
5	688-W0088-40	PILOT LAMP KIT	1	15	6Y5-82149-00	WIRE, lead (BLUE)	1 UR
6	663-84301-01	.PILOT LIGHT ASSY 1	1	16	6Y5-82117-00	WIRE, lead (BLACK)	1 UR
7	663-84309-00	.PLATE, set	1	17	6Y5-82521-00	WIRE, lead (YELLOW)	1 UR
8	95428-31316	.SCREW, wood	4	18	6Y5-83553-00	WIRE, lead	1
9	697-81901-60	.CHARGE WARNING UNIT ASSY	1	19	1E6-82151-00	.FUSE (10A)	1
10	97780-60120	.SCREW, tapping	2				

Fig. 40 REPAIR KIT 1

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H4-W0001-03	POWER HEAD GASKET KIT	1	17	650-24431-A0	.GASKET, fuel pump 1	1
2	6H4-11181-A0	.GASKET, cylinder head 1	1	18	6H4-45113-A0	.GASKET, upper casing	1
3	6H4-11193-A1	.GASKET, head cover 1	1	19	6H4-W0093-03	CARBURETOR REPAIR KIT	1
4	90430-14115	.GASKET	1	20	6H4-14198-01	.GASKET	3
5	6J8-12414-A0	.GASKET, cover	1	21	676-14966-00	.CAP	3
6	6H4-41112-A0	.GASKET, exhaust inner cover	1	22	6H4-14590-00	.NEEDLE VALVE ASSY	3
7	6H4-41114-A0	.GASKET, exhaust outer cover	1	23	663-14159-00	.CLIP	3
8	6H4-15369-A1	.GASKET, oil seal housing	1	24	676-14186-00	.PIN, float	3
9	93104-16M04	.OIL SEAL	2	25	6H4-14985-01	.FLOAT	3
10	93102-25M28	.OIL SEAL	1	26	6H4-14548-00	.PIN, float arm	3
11	93210-57M09	.O-RING	1	27	6H4-14984-00	.GASKET, float chamber	3
12	6H4-13621-A1	.GASKET, valve seat	2	28	97980-04114	.SCREW, with washer	3
13	6H4-14198-01	.GASKET	3	29	93210-04230	.O-RING	3
14	6H3-14457-01	.SEAL	3	30	6H4-14147-00	.O-RING	3
15	6H4-14984-00	.GASKET, float chamber	3	31	692-14923-00	.SCREW, pilot	3
16	93210-37M25	.O-RING	1				



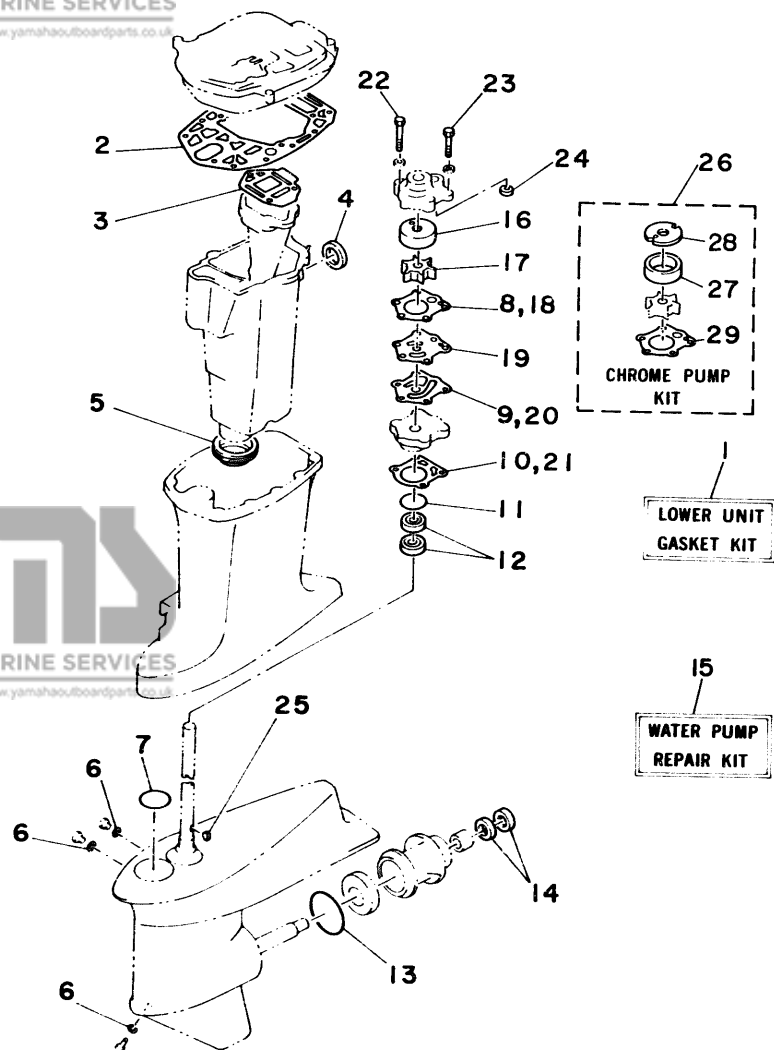


Fig. 41 REPAIR KIT 2

Ref.No.	Parts No.	Description	Q'ty	Ref.No.	Parts No.	Description	Q'ty
1	6H4-W0001-21	LOWER UNIT GASKET KIT	1	16	663-44322-00	.INSERT, cartridge	1
2	6H4-45114-A1	.GASKET, upper casing	1	17	6H4-44352-02	.IMPELLER	1
3	6H4-41134-A0	.GASKET, exhaust manifold	1	18	663-44315-A0	.GASKET, water pump	1
4	6H4-41133-00	.GASKET, exhaust manifold 1	1	19	663-44323-00	.OUTER PLATE, cartridge	1
5	663-45123-00	.GASKET, muffler	1	20	663-44324-A0	.GASKET, cartridge	1
6	90430-08020	.GASKET	3	21	663-44316-A0	.GASKET, water pump	1
7	93210-49ME0	.O-RING	1	22	97395-08055	.BOLT	2
8	663-44315-A0	.GASKET, water pump	1	23	97395-08045	.BOLT	2
9	663-44324-A0	.GASKET, cartridge	1	24	663-44366-00	.DAMPER, water seal	1
10	663-44316-A0	.GASKET, water pump	1	25	90280-03024	.KEY, woodruff	1
11	93210-41042	.O-RING	1	26	6H4-W0078-0A	CHROME PUMP KIT	1
12	93101-23070	.OIL SEAL	2	27	670-44322-01	.INSERT, cartridge	1
13	93210-66M98	.O-RING	1	28	670-44321-00	.INNER PLATE, cartridge	1
14	93101-22067	.OIL SEAL	2	29	670-44323-00	.OUTER PLATE, cartridge	1
15	6H4-W0078-01	WATER PUMP REPAIR KIT	1				

PART NO.	REF. NO.	PART NO.	REF. NO.
6H4-W0001-03	40- 1	6J8-12414-A0	40- 5
6H4-W0001-21	41- 1	6H1-13117-01	5- 3
6H4-W0004-00	3- 2		20- 3
6H4-W0070-G0	21-10	6E9-13183-70	5-37
6H4-W0070-N2	9-10		20-47
6H4-W0070-V1	9-10	6H4-13200-04	5- 5
6H4-W0078-0A	41-26		20- 5
6H4-W0078-01	41-15	6J8-13411-00	20-39
6Y5-W0080-11	37- 1	6J8-13414-00	20-40
6Y5-W0081-30	37- 9	6L2-13416-00	20-41
6H4-W0084-04-EJ	13- 1	6H4-13436-00	21-11
6Y5-W0088-00	37-19	6H5-13610-00	3- 1
6Y5-W0088-10	38- 9	6H4-13621-A1	3- 8
6Y5-W0088-20	38-19		40-12
6Y5-W0088-31	38- 1	6H4-13624-01-94	3- 7
688-W0088-40	39- 5	6H4-13641-12-94	3- 5
6H4-W0090-42-EJ	1- 1	6H4-13641-30-94	3- 5
6H4-W0093-03	40-19	6H4-14146-00	4-15
6Y1-W2420-62-24	8- 1	6H4-14147-00	4-28
656-W2810-02	8-20		40-30
6H4-11111-01-94	1-21	663-14159-00	4-12
6H4-11119-00	1-17		40-23
6H4-11181-A0	1-22	676-14186-00	4-13
	40- 2		40-24
6H4-11191-01-9M	1-25	6H4-14198-01	3-11
6H4-11193-A1	1-26		40-13
	40- 3		40-20
688-11325-00	1-19	6H4-14301-08	4- 1
650-11370-00	1- 3	6H4-14301-12	4- 1
688-11370-00	1- 7	6H4-14302-08	4- 2
6H4-11372-00	1- 5	6H4-14302-12	4- 2
6H4-11400-14	2- 1	6H4-14303-08	4- 3
6H4-11536-00	2- 2	6H4-14303-12	4- 3
6H4-11537-01	5- 2	6A0-14325-00	7-20
	20- 2	6H4-14406-00	3-12
6H4-11545-00	18-19	6H4-14431-01	3-14
6H4-11601-00	2- 8	6H3-14457-01	3-15
6H4-11601-10	2- 8		40-14
6H4-11601-20	2- 8	6H1-14485-00	3- 6
6H4-11631-01-95	2- 7		3- 6
648-11633-00	2- 9	624-14485-00	1- 4
6H4-11634-01	2-12		1- 6
6H4-11635-01	2- 7	6H1-14523-00	4- 7
6H4-11636-01	2- 7	6H4-14548-00	4-10
6H4-11641-00	2-11		40-26
6E5-12411-20	1-28	679-14555-00	4-24
6H4-12413-00-9M	1-29	6H4-14561-00	4-33
6J8-12414-A0	1-30	6H4-14562-00	4-34

NUMERICAL INDEX

PART NO.	REF. NO.	PART NO.	REF. NO.
6H4-14567-00	4-30	6H4-15762-00	6- 7
6H2-14578-00	4- 9	6H4-15770-10	6 44
6H4-14590-00	4-26	6H4-15771-01-94	6-30
	40-22	6H4-15772-02-94	6-33
6H4-14592-10	4-32	6H4-15774-10	6-40
6K5-14592-00	4- 5	6F5-15779-02	6-16
6H4-14711-00-5B	15- 8	6H4-15787-01	6-14
6H4-14711-10-5B	15- 8	6A0-15789-00	6- 8
692-14923-00	4-25	6H4-21707-04	20-21
	40-31	6H4-21707-12	5-21
676-14943-30	4-21	6H3-21732-00	21-13
676-14943-31	4-21	6H3-21735-00	21-14
	4-21	6J8-21744-00	5-42
676-14943-32	4-21		20-34
6H4-14947-07	4-20	6H4-21752-00	20-25
6H4-14948-11	4-23	6H1-21756-00	5-25
676-14966-00	4-22	6H1-21757-00	20-31
	40-21	6H4-21757-00	5-29
6H4-14980-00	4-17	6J8-21758-00	20-30
	4-17	6H1-2176M-01	20-27
6H4-14980-10	4-17	6H1-2177H-01	21-12
6H4-14984-00	4-16	6H4-21770-00	5-26
	40-15		20-28
	40-27	6H4-21773-00	5-24
6H4-14985-01	4-14	6Y1-24167-00	8- 9
	40-25	6Y1-24246-00	8- 2
6H3-14992-00	4-18	6Y1-24256-80	8-10
6H4-15100-12-94	1- 2	6Y1-24257-00	8- 3
6H4-15359-04-94	18- 3	6Y1-24260-02	8- 4
	27- 3	6Y1-24268-00	8- 5
6H4-15369-A1	2-13	6G1-24304-02	7- 1
	40- 8	6G1-24305-00	8-16
6H4-15396-02-5B	2-14	6Y1-24305-01	8-18
6H4-15705-00	6-26	6Y1-24306-05	8-11
6H4-15710-02-94	6- 1	6H4-24311-00	7-36
6H4-15711-02-94	6- 2	6H4-24312-00	7-34
6H4-15714-00	6-18	6H4-24313-00	7-33
6H4-15717-00	6-20	6H4-24314-00	7-12
6H4-15723-01-94	6-36	6Y1-24329-00	8- 7
6J8-15723-E1	28-25	650-24351-51	8-15
676-15741-03	6-24	6Y1-24360-02	8-13
6H4-15746-00	6-42	6E5-24367-01	10-34
6H4-15747-10	6-47	6E5-24378-00	20-35
656-15748-00	6-45	688-24378-00	7-31
6F5-15752-00	6- 9	6A0-24410-05	7-14
689-15755-01	6-15	6H4-24411-00	4-43
6H4-15758-00-94	6- 4	648-24411-00	7-15
6H4-15761-00	9-11	663-24411-00	7-23

PART NO.	REF. NO.	PART NO.	REF. NO.
6H4-24412-00	4-31	6H4-41259-01	3-22
6H4-24413-00	4-35	6J8-41262-00	3-23
648-24413-01	7-24		12-47
6A0-24421-01	7-19	661-41262-02	3-20
6L5-24421-00	4-37		6-48
648-24423-00	7-17	6H4-41271-01	3-21
648-24424-00	7-16	689-41273-00	3-26
650-24431-A0	7-27	6J8-41274-00	3-24
	40-17	6H4-41632-01	14- 3
6H5-24434-00	4-42	6G5-41636-01	14- 5
648-24434-01	7-18	6F5-41662-00	14-22
648-24435-02	7-22	6H4-42111-01-EJ	13- 2
6H4-24452-01	4-29	664-42119-00	13- 3
6H4-24486-00	4-36	6H4-42121-02-5B	11-33
655-24521-01	7- 8	656-42126-01	13-24
655-24560-01	7- 5	6H4-42131-00	13-15
6F5-24563-00	7- 6	6L2-42137-00	13- 5
6H4-24566-01	7- 9	6H4-42138-01	13-10
6Y1-24610-00	8- 8	6H4-42159-00	13-12
6H4-24633-00	5-27	6G1-42177-00	13- 4
6H5-24633-00	20-29	6H4-42510-02-EJ	22-51
6H4-24634-00	5-28		23-37
6H4-26311-03	13-16	6H4-42510-12-EJ	11-25
80L-26397-00	34-58	6J8-42528-00	11-22
6E0-28193-00-94	8-21		22-21
6H4-41111-00-9M	1-34	624-42542-00	5-33
6H4-41112-A0	1-35		20-44
	40- 6	6H4-42613-00-EJ	9- 6
6H4-41113-00-9M	1-33	6H4-42613-10-EJ	21- 6
6H4-41114-A0	1-36	6H4-42615-00	9- 2
	40- 7		21- 2
6H4-41131-01-5B	15- 7	6H4-42630-G0-EJ	21- 1
6H4-41133-00	15-13	6H4-42630-N0-EJ	9- 1
	41- 4	6H4-42630-V0-EJ	9- 1
6H4-41134-A0	15- 6	6H4-42651-00	9- 3
	41- 3		21- 3
6H4-41137-00-94	15- 4	6H4-42652-00	9- 4
6H4-41213-04	14- 1		21- 4
6H4-41213-14	14- 1	6H4-42686-02	9- 8
6H4-41217-01	3-25	6H4-42686-11	21- 8
6H1-41237-00	5-16	6H4-42687-01	9- 9
	20-16	6H4-42687-10	21- 9
6H4-41237-00	14- 6	6H1-42694-00	21-15
6R5-41237-00	5-20	6H4-42711-05-EJ	10- 1
	20-20	6H4-42711-23-EJ	10- 1
6H4-41241-01	5-15	6H4-42716-00	10-19
	20-15	6H4-42724-00	10-17
6H4-41257-00	3-19	6H4-42724-20	10-17

NUMERICAL INDEX

PART NO. REF. NO.

6H4-42724-20 29- 9
30-29
6H4-42725-00 29-10
30-27
6H1-42726-10 10- 9
6H4-42726-00 10- 9
6H4-42726-40 10-37
6H5-42726-00 10- 9
676-42726-00 29-11
30-28
35- 4
35- 7
6H3-42727-00 10-14
682-42727-00 10-20
6H4-42741-20 10-25
6G1-42748-00 3-26
6H4-42815-00 10- 3
6H4-42816-00 10- 6
6H4-43111-04-EJ 11- 1
6H5-43111-02-EJ 22- 1
697-43111-04-EJ 23- 1
6H4-43112-04-EJ 11- 2
6H5-43112-03-EJ 22- 3
697-43112-03-EJ 23- 2
6J8-43113-01 11-11
22-16
648-43114-01 11- 8
616-43118-00-EJ 11- 5
6E5-43126-02 23-33
6H5-43126-02 22-41
6H5-43128-01-EJ 22- 6
6J8-43131-01 11- 9
22-14
688-43131-03 23-17
6E5-43145-00 32- 9
32-19
6G5-43145-00 11-14
22-19
23-21
6H4-43160-01 12- 1
676-43160-02 22-24
697-43160-00 23-30
676-43165-00 12- 2
22-25
688-43165-00 23-31
6H5-43181-02 22-33
6J8-43181-01 12- 5
688-43181-04 23-22

PART NO. REF. NO.

6H5-43185-02 22-34
688-43185-04 23-23
6J8-43186-00 12-42
6J8-43187-00 12-43
6H5-43311-04-EJ 22-20
6J8-43311-04-EJ 11-19
697-43311-03-EJ 23-13
663-43318-00 22-39
23-28
682-43318-01 12-10
689-43373-01 11-23
22-22
688-43376-01 24- 1
6J8-43611-01 12-20
6J8-43613-01 12-18
6J8-43614-00 12-16
6J8-43615-00 12-17
6H4-43616-00 12-30
12-39
6J8-43616-10 12-48
6J8-43617-00 12-33
6J8-43617-10 12-41
6J8-43627-00 12-11
6J8-43631-00 12-27
6J8-43631-10 12-37
6J8-43633-00 12-28
12-38
6J8-43641-00 12-31
12-40
6H4-43659-00 12-19
6J8-43673-00 12-36
6H4-43674-00 12-25
6J8-43681-01 12-35
697-4380E-01 25- 3
6H3-43800-07-EJ 25- 1
6H5-43801-00 26-31
6E5-43802-00 25-22
6G5-43808-02 25-31
6E5-4381A-00 25-56
6H5-4381A-00 26-41
6H5-4381E-00 26-38
6H5-4381F-00 26-47
6H5-43811-00 26-46
6H5-43812-00 26-42
6H5-43813-00 26-29
6E5-43814-01 25- 7
6H5-43814-00 26-35
6E5-43816-10 25-39

PART NO. REF. NO.

6E5-43817-10 25-40
6E5-43818-00 25-11
6E5-4382A-00 25-50
6H5-4382E-00 26- 9
6E5-43820-03 25-15
6E5-43821-01 25-18
6E5-43822-01 25-19
6E5-43824-01 25-58
6H5-43826-00 26-45
6E5-43828-00 25- 8
6H5-43828-00 26- 2
6E5-43829-00 25- 9
6H5-43829-00 26-27
6E5-43830-00 25-46
6E5-43831-00 25-45
6E5-43833-01 25-28
6E5-43834-01 25-29
6E5-43835-01 25-30
6H5-43836-00 26-17
6H5-43837-00 26-16
6H5-43840-04-EJ 26- 1
6E5-43841-01 25-25
6H5-43841-00 26- 3
6E5-43842-00 25-60
6E5-43843-00 25-33
6H5-43844-00 26-20
6E5-43845-01 25-52
6H5-43846-02 26-11
6E5-43847-00 25-48
6E5-43849-01 25-57
6H5-43849-00 26- 7
6H5-4385A-00 26-30
6H5-43853-00 26- 8
6H5-43853-10 26-23
6E5-43854-01 25-59
6H3-43855-00 25-34
6H5-43855-01 26-25
6H5-43856-00 26-19
6H5-43857-00 26-33
6H5-43858-00 26-32
6H5-43858-10 26-18
6E5-43859-00 25-35
6H5-43859-00 26-24
6H5-4386F-00 26-26
6E5-43861-00 25- 4
6H5-43861-00 26- 4
6E5-43862-00 25- 5
25-20

PART NO. REF. NO.

6H5-43862-00 26- 6
6E5-43863-00 25-10
6H5-43863-00 26-10
6E5-43864-00 25-16
6H5-43864-00 26-12
6E5-43865-00 25-21
6H5-43865-00 26-13
26-28
6E5-43866-00 25-23
6H5-43866-00 26-15
6E5-43867-00 25-24
6H5-43867-00 26-21
6E5-43868-00 25-26
6H5-43868-00 26-22
6E5-43869-00 25-27
6H5-43871-00 26-37
6E5-43872-00 25- 6
6H5-43872-00 26-50
6H5-43873-00 26-40
6E5-43874-01 25-17
6H1-43875-00 25-54
6H5-43875-00 26-14
6E5-43877-01 25-36
6E5-43878-01 25-43
6H5-4388A-00 26-55
6H1-43880-02 25- 2
6H5-43880-02 26-44
6E5-43883-00 25-32
6H5-43883-00 26-36
6H5-43886-00 26-49
6H5-43887-00 26-48
6E5-43888-01 25-44
6H5-43891-00 26- 5
6H5-43893-00 26-34
6E5-43895-00 25-37
6E5-43896-00 25-38
6H5-43896-00 26-39
6E5-43897-00 25-42
6H5-43897-00 26-43
6H4-44111-00 14-13
6H4-44111-10 14-13
6H4-44116-00 14-17
682-44117-00 14-18
6H4-44121-02 14-15
6H4-44125-01 14-20
682-44132-00 14-14
6H4-44143-00 14-25
648-44146-00 14-29

PART NO. REF. NO.

6G1-44147-00 16-12
6H4-44150-01 16-49
6H4-44150-12 16-49
6H4-44160-00 16-50
6H4-44173-00 36- 4
6H4-44173-01 29-13
30-31
688-44194-00 14-12
6J8-44311-00 16-20
663-44315-A0 16-23
41- 8
41-18
663-44316-A0 16-29
41-10
41-21
670-44321-00 41-28
663-44322-00 16-21
41-16
670-44322-01 41-27
663-44323-00 16-30
41-19
570-44323-00 41-29
663-44324-A0 16-31
41- 9
41-20
663-44341-00-94 16-26
6H4-44352-02 16-22
41-17
6H4-44361-00 17-18
6H4-44361-10 17-18
663-44366-00 16-24
41-24
663-44367-00 17-20
6E5-44391-00 10-18
6H4-44511-00-94 11-47
22-72
6H4-44514-00 11-43
22-68
23-56
6H1-44526-00 22- 8
23- 4
6H4-44551-01-EJ 11-31
22-57
23-43
6H4-44553-01 11-37
22-63
23-49

PART NO. REF. NO.

6H4-44557-00 11-36
22-62
23-48
6H4-44557-10 11-36
22-62
23-48
6H4-45111-00-EJ 15- 1
6H4-45111-10-EJ 15- 1
6H4-45113-A0 15-14
40-18
6H4-45114-A1 15- 5
41- 2
663-45119-00 11-21
22-29
23-16
663-45123-00 15- 9
41- 5
688-45214-02 17- 3
688-45215-02 17- 4
6H1-45251-02 22- 7
23- 3
6H4-45300-02-EJ 16- 1
6H4-45300-12-EJ 16- 1
6H4-45301-01-EJ 16- 2
6H4-45321-01 16-10
679-45331-00-94 16-52
688-45341-00 16- 9
664-45371-01 17- 7
17- 2
688-45375-00 17- 2
663-45376-00-94 17- 1
6H4-45378-00 16-15
697-45384-00 16-60
6H4-45501-00 16-35
6H4-45501-10 16-35
6H4-45536-00 16- 4
6H4-45551-00 16-36
6H4-45560-00 16-38
6H4-45567-01-10 16-40
6H4-45567-01-12 16-40
6H4-45567-01-15 16-40
6H4-45567-01-18 16-40
6H4-45567-01-30 16-40
6H4-45567-01-40 16-40
6H4-45567-01-50 16-40
6H4-45571-00 16-51
663-45576-00 16-55
663-45577-01-10 16-54
663-45577-01-12 16-54

NUMERICAL INDEX

PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.
663-45577-01-15	16-54	703-48153-00	34- 3	703-48252-00	34-15	701-48350-00	31- 6	663-81910-10	35-12	703-82531-00	34-50	703-82531-00	34-50
663-45577-01-18	16-54	701-48189-11	33-32	701-48255-00	33-21	701-48350-10	31- 6	6H5-81920-00	29-24	6H4-82537-00	10-30	6H4-82537-00	10-30
663-45577-01-30	16-54	703-48189-00	34-20	701-48261-00	33-38	701-48350-20	31- 6	6F5-81922-00	19-24	6H3-82540-00	36- 1	6H3-82540-00	36- 1
663-45577-01-40	16-54	701-48196-11	33- 7	701-48261-10	33-38	701-48358-00	33-39	6G1-81941-10	28-39	703-82540-00	34-54	703-82540-00	34-54
663-45577-01-50	16-54	701-48197-10	33- 3	703-48261-10	34- 2	703-48358-00	34-23	6H4-81945-00	28-41	689-82550-11	35- 5	689-82550-11	35- 5
663-45587-01-10	16- 5	703-48197-00	34- 6	703-48263-00	34- 8	6H4-48511-51-EJ	22-59	6H4-81945-20	30-13	701-82550-50	33-40	701-82550-50	33-40
663-45587-01-12	16- 5	701-48198-10	33-15	703-48264-00	34- 9		31-10	6H5-81949-00	30-18	6A0-82553-20	35- 3	6A0-82553-20	35- 3
663-45587-01-15	16- 5	703-48198-00	34-17	703-48265-00	34-12	6H5-48511-51-EJ	23-45	61A-81949-00	30-19		35- 6		35- 6
663-45587-01-18	16- 5	703-48210-12	31- 4	701-48266-00	33-30	688-48511-01-EJ	31-10	6H1-81950-00	30-10	6E5-82553-10	24-10	6E5-82553-10	24-10
663-45587-01-30	16- 5		34- 1	701-48268-00	33-18	6H4-48531-00-94	10-10	6H5-81950-00	29-19	6H4-82553-00	36- 3	6H4-82553-00	36- 3
663-45587-01-40	16- 5	701-48213-00	33-19	703-48268-00	34- 7	6H4-48531-10-94	10-10	6H4-81952-00	28-40	6Y5-82553-00	39-18	6Y5-82553-00	39-18
663-45587-01-50	16- 5	703-48215-00	34-46	701-48271-00	33-35		29- 7	6J8-81960-00	19-19	6H4-82554-00	29-12	6H4-82554-00	29-12
679-45611-01	16-41	702-48217-00	34-47	701-48271-10	33-35	6H4-48532-00-94	10-11	6G1-81970-61	29- 2		30-30		30-30
6H4-45631-00	16-44	703-48219-00	34-33	703-48273-00	34- 5	6H4-48532-10-94	10-11		30- 3		36- 2		36- 2
663-45633-00	16-46	701-48221-00	33- 6	701-48280-00	33-47		29- 8		35- 8	682-82556-00	10-29	682-82556-00	10-29
663-45634-00	16-43	703-48221-00	34-60	703-48280-12	31- 5	6E5-61301-01	32-21	6H4-81975-02	19-22		34-52		34-52
676-45635-00	16-42	701-48222-00	33-27		34- 1	688-61301-01	32-21	6H4-82105-01	29- 1		35- 2		35- 2
663-45930-00-98	17-29	703-48222-00	34-30	701-48281-10	33-16	6E5-61303-00	32-26		30- 1		36-10		36-10
663-45941-01-EL	17-29	703-48222-10	34-30	701-48283-00	33-42	6E5-61311-11	32-27	6J8-82105-10	19-29	6H4-82560-00	19-18	6H4-82560-00	19-18
6H5-45943-00-EL	17-29	703-48223-00	34-31	703-48284-00	34-56	688-61311-11	32-27	6H4-82117-00	28-19	689-82560-00	19-12	689-82560-00	19-12
663-45943-02-EL	17-29	703-48224-00	34-59	701-48287-00	33-45	6E5-61313-00	32-30	6H5-82117-00	23-54	6H1-82563-00	30-21	6H1-82563-00	30-21
6H5-45945-00-EL	17-29	703-48225-00	34-32		34-45	6E5-61315-00	32-29	6Y5-82117-00	39-16	703-82563-01	34-59	703-82563-01	34-59
663-45945-02-EL	17-29	703-48226-00	34-29	702-48287-00	34-61	688-61350-10	32-11	682-82119-00	30-20	689-82570-15	36- 6	689-82570-15	36- 6
663-45947-02-EL	17-29	703-48227-00	34-27	702-48288-00	33-23	689-61350-02	32- 1	6G1-82127-00	26-54	689-82571-02	36-11	689-82571-02	36-11
663-45949-01-EL	17-29	701-48229-00	33-26	703-48290-01	31- 7	688-61351-10	32-12	6H4-82127-00	11-42	703-82574-00	34-49	703-82574-00	34-49
6H5-45952-00-EL	17-29	701-48232-00	33-31	701-48291-00	33-44	689-61351-01	32- 2	6H5-82127-00	22-49		36- 8		36- 8
663-45952-02-EL	17-29	701-48234-00	33- 5	703-48291-10	34-42	6E5-61355-00	32- 5	6E5-82148-00	11- 3	6E9-82575-01	10-28	6E9-82575-01	10-28
663-45954-01-EL	17-29	703-48234-00	34-21	703-48293-00	34-44		32-18		22- 4	688-82575-01	34-51	688-82575-01	34-51
663-45956-01-EL	17-29	701-48235-00	33- 2	703-48293-10	34-44	6H4-81332-00	18-22		23-63		36- 9		36- 9
6H5-45958-00-EL	17-29	703-48235-00	34- 4	701-48310-10	31- 6	6H4-81337-01	28-20	6H1-82148-00	23-10	689-82575-13	35- 1	689-82575-13	35- 1
663-45958-01-EL	17-29	701-48236-00	33- 8	701-48310-20	31- 6	6J8-81365-A0	6-37	6H5-82149-00	22-50	688-8258A-10	36-20	688-8258A-10	36-20
663-45970-60-98	17-29	703-48236-00	34-19	701-48310-40	31- 6		28-26		23-55	688-8258A-20	34-53	688-8258A-20	34-53
663-45972-60-98	17-29	702-48237-00	33- 9	701-48310-60	31- 6	6F5-81800-11	28- 1	6Y5-82149-00	39-15	688-8258A-30	36-20	688-8258A-30	36-20
663-45974-60-98	17-29	702-48238-00	33-10	701-48310-80	31- 6	689-81807-12	28- 3	1E6-82151-00	37- 8	688-8258A-50	36-19	688-8258A-50	36-19
663-45976-00-98	17-29	703-48238-00	34-25	701-48310-90	31- 6	689-81809-11	28- 6		39-19	663-82581-01	36-12	663-82581-01	36-12
663-45978-00-98	17-29	701-48239-00	33-29	701-48320-00	31- 6	689-81810-11	28- 8	6G1-82151-00	29- 3	6E5-82582-00	29-27	6E5-82582-00	29-27
663-45987-02	17-24	701-48243-00	33-14	701-48320-20	31- 6	689-81811-11	28- 9		30- 4	6E5-82587-00	30-22	6E5-82587-00	30-22
670-45997-02	17-25	703-48243-00	34-18	701-48320-30	31- 6	689-81812-11	28-11		35- 9	6H4-82588-00	29-16	6H4-82588-00	29-16
701-48101-11	31- 1	703-48244-00	34-24	701-48320-40	31- 6	689-81813-10	28-12	6A0-82317-00	5-32		30- 9		30- 9
	33- 1	703-48245-00	34-14	701-48320-50	31- 6	689-81820-11	28-13		20-43	6H4-82590-11	29-18	6H4-82590-11	29-18
701-48102-11	31- 2	701-48246-00	33-24	701-48320-60	31- 6	6H4-81822-01-98	28-29	6G1-82370-20	19-11	6H4-82590-22	29-18	6H4-82590-22	29-18
	33- 1	703-48246-00	34-26	701-48320-70	31- 6	689-81826-10	28-14	689-82510-00	36- 7		30- 8		30- 8
701-48110-23	31- 3	701-48248-00	33-12	701-48320-80	31- 6	6F5-81830-11	28- 4	703-82510-10	34-48	701-82594-00	33-43	701-82594-00	33-43
	33- 1		34-16	701-48320-90	31- 6	689-81840-11	28-10	688-82520-00	39-13	703-82594-00	34-28	703-82594-00	34-28
701-48126-00	33-41	701-48249-00	33-11	6H4-48344-00	31- 8	689-81847-11	28- 5	6Y5-82521-00	39-17	6H4-83354-00	18- 9	6H4-83354-00	18- 9
701-48152-11	33-13	703-48250-12	31- 4	663-48344-00	14-30	689-81850-12	28- 7	663-82521-09	39-12		27- 9		27- 9
701-48152-20	33-13		34- 1	703-48345-01	33-37	689-81857-11	28- 2	688-82526-00	39-14	688-83373-10	39- 4	688-83373-10	39- 4
701-48153-12	33-34	701-48252-00	33- 4		34-22	697-81901-60	39- 9	6H4-82531-02	19- 4	688-83383-11	39- 1	688-83383-11	39- 1

PART NO.	REF. NO.
703-83383-02	34-55
6Y5-83504-01	38- 2
6Y5-83510-30	37-10
6Y5-83514-00	37- 6
	37-14
688-83516-00	37- 3
	37-11
6Y5-83518-00	24- 7
	37-21
	38- 5
	38-11
	38-21
6Y5-83523-00	37- 5
	37-13
6Y5-83536-00	37-22
	38- 6
	38-12
	38-22
6Y5-83536-10	37- 4
	37-12
6Y5-83536-20	24- 6
6Y5-83540-12	37- 2
6Y5-83544-00	38-14
	38-24
6Y5-83553-00	37- 7
663-83553-A0	38- 7
	38-18
	38-27
663-83553-Y0	38- 8
	38-17
	38-26
661-83557-00	19-14
688-83557-00	37-15
6E5-83558-00	16-18
	17-23
6E5-83558-10	16-18
6Y5-83577-00	24- 5
	38- 4
6H4-83589-00	20-52
6Y5-83590-00	38-10
688-83591-00	38-15
6E5-83614-01	30-23
6Y5-83660-00	37-20
688-83664-00	24- 4
	37-23
	38- 3
	38-13
	38-23

PART NO.	REF. NO.
688-83665-00	37-24
688-83666-00	37-26
688-83667-00	37-25
663-83668-00	37-27
6Y5-83670-10	24- 3
6H5-83672-00	24- 8
6H4-84301-01	20-56
663-84301-01	39- 6
663-84309-00	39- 7
6F5-84340-00	10-38
6H4-84342-00	20-51
682-84381-00	19-27
6J8-85410-00	10-31
6H4-85415-10	10-33
6H5-85520-00	18- 4
	27- 4
6H5-85533-01	18- 5
	27- 5
6H5-85540-02	19- 1
6H5-85550-00	27- 1
6H5-85550-10	18- 1
6H5-85560-02	18- 2
	27- 2
6H5-85570-00	19- 7
6H5-85580-00	18- 6
	27- 6
6H5-85580-10	18- 7
	27- 7
6H5-85580-20	18- 8
	27- 8
6H4-85720-21	5-44
6H5-85720-12	20-50
6Y5-85750-00	38-20
688-85752-01	38-25
6H4-86120-00	4-41
90101-08M86	11-44
	22-69
	23-57
90101-08339	11-15
90101-09M70	32-24
90101-10M58	11-50
90101-12M37	13-17
90101-12M65	22-75
	23-68
90105-06M15	30-16
90105-06M16	30-17
90105-06M18	11-24
	22-23

PART NO.	REF. NO.
90109-06M04	6-43
90109-06M21	25-41
90109-06M39	5- 7
	20- 7
90109-06M40	5- 8
	20- 8
90109-06M43	14- 2
90116-06M22	28-42
90116-10175	11-34
	22-60
	23-46
90116-18M21	22-45
90119-06M13	1-15
90119-06M42	25-13
90119-06M51	19- 3
90119-06M65	5-34
	20-45
90119-06M67	5-35
90119-06M71	25-14
90119-06M99	9- 7
	21- 7
90119-08M19	1-14
90119-08M29	1-27
90119-08M79	15-12
90119-08M83	15- 3
90119-08M92	17-16
90149-05M05	36-15
90149-05M13	13- 7
90149-14M12	11- 7
90157-06M01	10-35
90157-06M13	14-10
90170-07021	14-32
90170-09M03	32- 8
	32-15
90170-09M05	32-25
90170-12138	16-37
90170-14M06	32-31
90170-18M10	22-46
90171-16011	17-27
90179-06M24	28-35
90179-16M05	18-20
90183-05M06	21-17
90185-05002	17- 6
90185-06062	13-26
90185-08045	11-46
	22-71
	23-59
90185-09M01	32- 4

NUMERICAL INDEX

PART NO.	REF. NO.
90185-09M01	32-14
	32-22
90185-10051	11-35
	22-61
	23-47
90185-12058	13-23
90185-22043	11-13
	22-18
	23-20
90201-05M00	25-55
90201-05652	4- 6
90201-06M02	10- 7
90201-06M31	22- 9
	23- 5
90201-06060	6-21
90201-06416	10-23
90201-08M93	5- 1
	20- 1
90201-09425	11-45
	22-70
	23-58
90201-10M20	32- 3
	32-13
90201-10M63	32- 6
	32-17
90201-10M76	32-23
90201-12426	11-52
	22-77
	23-70
90201-12537	13-21
90201-16M44	18-21
90201-22M67	23-19
90201-22428	11-12
	22-17
90201-22429	16-47
90201-30M00	11-27
	22-55
	23-38
90201-50306	2- 6
90202-05088	5-17
	20-17
90202-12031	12- 9
	12-14
90202-12060	17-17
90202-12092	13-20
90202-26M45	19-28
90206-12M16	12-15
90206-12052	10- 4

PART NO.	REF. NO.
90206-12054	13-22
90209-06M04	28-22
90209-06M05	3-18
90209-08M02	16-62
90209-10M14	16-16
90214-48M03	16-59
90243-04M00	11- 6
90249-06M23	12-32
90249-06M24	12-32
90249-07M25	12-45
90249-12M27	12-12
90249-12M28	12- 7
90250-06023	16-45
90266-04M01	9- 5
	21- 5
90269-02M09	13- 6
90269-03010	23-14
90280-03024	16-25
	41-25
90282-04010	16-61
90338-05M03	10- 2
90338-05M11	28-38
90338-05M12	21-16
90340-08M04	16- 7
90340-14M00	1-23
90386-08032	13-11
90386-10M16	22-35
	23-24
90386-10M19	22-40
90386-12M64	22-43
90386-12M65	22-42
90386-12069	10- 5
90386-12089	13-18
90386-18M14	25-12
90386-18M35	23-36
90386-18M44	22-48
90386-18M63	23-34
90386-22M15	22-15
	23-18
90386-22M69	11-10
90386-30M60	11-30
	22-53
	23-42
90386-30M77	11-26
	22-54
	23-40
90386-30M78	11-28
	22-56

PART NO.	REF. NO.
90386-30M78	23-39
90387-06M05	29-23
	30-15
90387-06M19	14- 8
90387-06M41	10-22
90387-06M65	28-21
90387-06M69	6-10
90387-07M64	12-21
90387-08M03	11-16
90387-10M38	23-29
90387-10M42	32- 7
	32-16
90430-08020	16- 8
	41- 6
90430-12072	17-19
90430-14115	1-24
	37-28
	38-16
	40- 4
90440-14M00	19-26
	24-12
90445-07MA3	1-12
90445-07MA6	5-11
	20-11
90445-07ME9	16-17
90445-07MF1	17-22
90445-07M23	5-10
	20-10
90445-07M24	1-10
	3-27
90445-07M27	1- 9
90445-07M31	16-17
90445-07M44	5- 9
	20- 9
90445-07M46	1- 8
90445-07M87	5-36
	20-46
90445-09M37	1-37
	5-30
90445-09057	7-32
90445-09063	7-30
90445-11M05	8-14
90445-11M06	8-12
90445-11M07	20-33
90445-11M17	5-39
	20-22
	20-37
90445-11M23	5-43

PART NO.	REF. NO.	PART NO.	REF. NO.
90445-11M23	20-32	90468-05M03	20-18
90446-07M40	22-32	90468-07M02	5-12
90446-09M08	5-22		5-13
90446-10M01	5-40		5-38
	20-38		20-12
90446-10M02	19-13		20-13
90464-03M15	18-17		20-48
	27-17	90468-18008	14-31
90464-05M16	19-15		31- 9
90464-07M05	30-25	90480-09M21	10-21
90464-07M20	5-14	90480-13M24	30-14
	20-14	90480-25161	19- 8
	29-28	90501-10M21	22-37
	30- 2		23-26
90464-09M13	24-11	90501-10227	6-46
90464-11M23	20-23	90501-10326	4- 8
90464-12M35	19-25	90501-16M01	16-48
90464-15M27	29-15	90501-23215	13- 9
	30-33	90502-10M04	12- 4
90464-16039	7-37		22-27
90465-08028	24-14	90502-20M03	23-67
90465-11M10	16-19	90506-12M25	12- 6
	17-21	90506-32M22	12-24
	24-13	90508-18M23	12-29
	37-16	90508-18M24	12-29
90465-13M11	22- 2	90508-20M22	12-49
90465-13M30	20-26	90508-25M21	12-44
90465-13M36	19- 2	90508-26M20	14- 4
90465-13169	34-57	90510-08002	6-19
90465-18147	10-32	90601-31402	37-17
	20-55		37-29
	29- 6	90890-44373	6-17
	30- 7	91316-06020	26-51
90467-06016	1-11	91490-16010	14-28
	1-13	91490-20010	12-26
	3-28	91490-30030	17-28
90467-08004	1-38		22-38
	5-23		23-27
	5-31	91690-30010	12- 3
	7- 4	91690-30012	22-26
	7-13		23-32
	7-35	91690-30020	29-14
	20-42		30-32
90467-10M04	5-41		36- 5
	20-36	91690-30316	14-21
90467-11M08	20-24	91690-30318	14-16
	20-49	91690-40018	6- 3
90468-05M03	5-18	91790-05020	14-26

NUMERICAL INDEX		PART NO.	REF. NO.
92503-06015	20-53	92990-06600	20-54
92580-06012	23-64		22-13
92780-06025	33-20		22-31
92901-04100	36-14		23- 9
92901-05100	18-11		23-12
	27-11		28-31
92901-05600	13-14		28-37
	18-12		28-44
	27-12		29-22
92990-05100	7-26		29-26
	36-17		30-12
92990-05600	3- 4		39-11
	10-13	92990-08100	11-49
	14-27		17- 9
	29- 5		22-74
	30- 6		23-62
	35-11	92990-08600	6-32
	36-18		6-39
	39- 3		11-17
92990-06100	18-14		11-39
	18-16		15-11
	22-12		17-10
	23- 8		22-65
	26-52		23-51
	27-14		28-16
	27-16		28-18
92990-06200	29-20		28-28
92990-06300	33-25		28-33
92990-06600	1-32		34-37
	1-40	92990-10100	17-14
	2-19		23-66
	3-10	92990-10600	11-41
	6- 6		13- 8
	6-12		17-15
	6-28		22-36
	6-35		22-67
	7- 3		23-25
	7-29		23-53
	10-16	92990-12200	13-19
	10-27		22-76
	10-36	92990-16200	17-26
	14-24	92990-18600	22-47
	16-14	92995-10600	11-51
	18-25	92995-12200	23-69
	19- 6	93101-22067	16-58
	19-10		41-14
	19-17	93101-23070	16-27
	19-21		41-12


PART NO.	REF. NO.	PART NO.	REF. NO.
93102-23096	18-18	93430-06024	33-36
	27-18		34-13
93102-25M28	2-15	93430-10M00	12- 8
	40-10		12-13
93104-16M04	2-16	93440-62057	2- 5
	40- 9	93602-20M02	2-10
93210-04228	4-27	93604-08062	16-32
93210-04230	4-19	93606-12019	1-16
	40-29		15- 2
93210-06M77	25-59		15-15
93210-07M78	25-47		17-12
93210-08287	8-17	93700-06M03	11-20
	8-19		22-28
93210-10M74	25-51		23-15
93210-13595	5- 4	94702-00271	1-41
	20- 4	95303-06600	6-23
93210-16275	32-10	95380-03600	4-39
	32-20		7-21
93210-18M75	25-53	95380-05600	5-19
93210-19MA7	5- 6		14- 7
	20- 6		20-19
93210-29M94	11-29		34-10
	22-52		36-16
	23-41	95380-06600	6-13
93210-37M25	7- 7		14-11
	40-16		28-43
93210-41042	16-28		33-46
	41-11		34-43
93210-49ME0	16-11	95380-08600	7-11
	41- 7		11-18
93210-57M09	2-17		17-11
	40-11	95380-10600	11-53
93210-66M98	16-56	95380-12600	22-78
	41-13		23-71
93306-00702	16-53	95380-14700	32-28
93306-305U8	2- 3	95428-31316	39- 8
	2- 4	95600-12100	26-53
93315-32224	16- 3	95670-06640	28-34
93317-22204	16-57	95780-08300	24- 2
93332-000V4	16-39	97013-06012	7-10
93332-00001	16- 6		19-23
93410-12M08	22-44		29-17
93410-18M02	23-35		29-25
93410-28M06	11-32		30-26
	22-58	97013-06035	1-39
	23-44	97021-08014	28-27
93430-06M02	6-25	97090-08035	11-48
	12-22		22-73



FLOOD MARINE SERVICES

downloaded from www.yamahaoutboardparts.co.uk

PART NO.	REF. NO.	PART NO.	REF. NO.
97090-08035	23-61	97395-08025	11-38
97313-06010	10- 8		22-64
97313-06014	1-18		23-50
	28-36	97395-08030	15-10
97313-06016	14-19		34-36
	30-24	97395-08045	16-34
97313-06018	18-24		41-23
97313-06020	2-18	97395-08055	16-33
	3- 9		41-22
	6-22	97395-10040	17-13
	14-23	97395-10045	23-65
97313-06025	1-31	97395-10060	11-40
	6-34		22-66
	14- 9		23-52
	29-21	97780-40116	37-18
97313-06030	6-11		37-30
	10-24	97780-60120	39-10
	28-30	97780-60516	39- 2
97313-06095	3-13	97880-05016	13-13
97313-08016	28-17	97895-06008	11- 4
97313-08020	6-38		22- 5
97313-08030	6-31	97895-06035	28-24
	28-15	97895-06040	3-16
97313-08050	28-32		28-23
97375-08075	17- 8	97895-06055	3-17
97380-05025	34-11	97980-04114	4- 4
97395-05016	10-12		40-28
97395-06010	22-30	97980-05310	4-40
	23-11	97985-05210	18-23
97395-06012	6-41	98303-04008	36-13
	19-20	98501-05012	18-10
	22-10		27-10
	23- 6	98501-06025	18-13
97395-06014	19- 5		27-13
	19-16	98501-06030	18-15
97395-06016	6- 5		27-15
	10-26	98503-05025	29- 4
	16-13		30- 5
	22-11		35-10
	23- 7	98580-03015	34-41
97395-06018	33-22	98580-04006	34-39
97395-06020	10-15	98580-04008	4-11
	13-25	98580-04010	34-38
	19- 9		34-62
97395-06025	7- 2	98580-05010	33-17
	30-11		33-33
97395-06035	6-27		34-40
97395-06040	7-28	98580-05016	3- 3

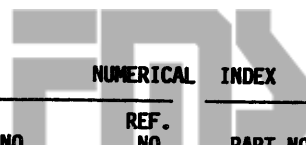

FLOOD MARINE SERVICES

downloaded from www.yamahaoutboardparts.co.uk

NUMERICAL INDEX			
PART NO.	REF. NO.	PART NO.	REF. NO.
98580-05530	7-25		
98580-05555	33-28		
98580-06016	24- 9		
98586-05016	8- 6		
98680-04016	1-20		
98680-05535	17- 5		
98780-05012	34-34		
98780-05016	34-35		
98980-03006	4-38		
99080-05600	12-23		
	12-34		
	12-46		
99530-10014	6-29		



FLOOD MARINE SERVICES

downloaded from www.yamahaoutboardparts.co.uk

PART NO.	REF. NO.	PART NO.	REF. NO.
----------	----------	----------	----------



FLOOD MARINE SERVICES

downloaded from www.yamahaoutboardparts.co.uk



FLOOD MARINE SERVICES

downloaded from www.yamahaoutboardparts.co.uk



FLOOD MARINE SERVICES

downloaded from www.yamahaoutboardparts.co.uk



FLOOD MARINE SERVICES

downloaded from www.yamahaoutboardparts.co.uk



FLOOD MARINE SERVICES

downloaded from www.yamahaoutboardparts.co.uk



FLOOD MARINE SERVICES

downloaded from www.yamahaoutboardparts.co.uk