



**PARTS
CATALOGUE
CATALOGUE
DE PIÉCES
DETACHÉES**

3A'98 (6L5)

2W6L5-300F1

This Parts Catalogue is related to the parts for the model(s) in the below frame. When you are ordering replacement parts, please refer to this Parts Catalogue and quote both part numbers and part names correctly.

3A'98(6L5)

1. Modifications or additions which have been made after issue of the Parts Catalogue will be announced in the Yamaha Parts News.
It is advisable that you make necessary corrections to the Parts Catalogue according to the Yamaha Parts News.

2. Abbreviations

The following abbreviations are used in this Parts Catalogue.

"UR"	Use specified parts number.	"M"	Manual start model
"UN"	Use as many as needed.	"E"	Electric start model
"AP"	Alternate Parts	"PTT"	Power Trim & Tilt model
"LM"	Local Made (Parts need to be ordered locally)	"H/T"	Hydro Tilt model
"O/S"	Over Size	"M/T"	Manual Tilt model
		"T.H/D"	Tiller Handle model

3. Parts, which are to be supplied in an assembly, are listed with a dot (.) in front of the part name as shown below.

EXAMPLE

CARBURETOR ASSY
. JET, PILOT
. NOZZLE, MAIN

4. Number of component for assembly



The numeral appearing to the right of each component part indicates the quantity of parts for each assembly unit.

EXAMPLE

PART NO.	DESCRIPTION	Q'TY	REMARKS
6E0-85500-70	C.D.I. MAGNETO ASSY	1	
6E0-85550-70	. ROTOR ASSY	1	
6E0-15723-00-94	.. PULLY, STARTER	1	

5. Applicable Serial No. and Color Code

Engine Serial No.	3AMH S : 063637 ~ L : 312528 ~
-------------------	-----------------------------------

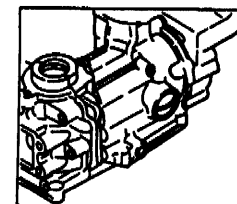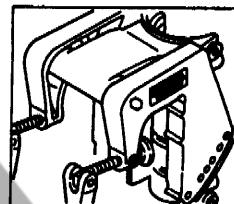

Color Code	Color Name	Abbreviation
4D	DARK BLuish GRAY METALLIC 2	DBNM2

6. Note that the illustrations are for reference in finding parts numbers, not to be used for assembling. When assembling, please use the applicable service manual.

Ce Catalogue de pièces détachées concerne les pièces pour le(s) modèle(s) indiqué(s) dans le cadre ci-dessous. Lorsque vous commandez des pièces de rechange, veuillez vous référer à ce catalogue de pièces détachées et indiquer clairement les numéros et les noms des pièces détachées.

3A'98(6L5)

1. Les modifications ou ajouts ayant été effectués après la parution du catalogue de pièces détachées seront décrits dans les Bulletins d'information Yamaha concernant les pièces détachées.
Il est recommandé que vous apportiez les corrections nécessaires au catalogue des pièces détachées en vous référant aux Bulletins d'information Yamaha.

2. Abréviations

Dans ce catalogue, les abréviations suivantes sont utilisées:

"UR"	Utiliser le numéro des pièces.
"UN"	Utiliser autant que nécessaire.
"AP"	Pièces de substitution
"OS"	Cote Réparation
"LM"	Fabrication locale (les pièces doivent être commandées localement.)
"M"	Modèle à démarrage manuel
"E"	Modèle à démarrage électrique
"PTT"	Modèle à assiette et relevage assistés
"H/T"	Modèle à relevage hydraulique
"M/T"	Modèle à relevage manuel
"T.H/D"	Modèle à commande par barre franche

3. Dans ce catalogue, les pièces qui sont fournies dans un ensemble sont précédées d'un point (.) de la manière indiquée ci-dessous.

EXEMPLE ENS CARBURATEUR
 . GICLEUR, ralenti
 . PUIXS D'AIGUILLE



4. Nombre de pièces composant un ensemble

Le chiffre apparaissant à la droite de chaque description indique la quantité de pièces pour chaque ensemble de pièces .

Référence	Description	Qté	Remarques
6E0-85500-70	MAGNETO C.D.I CPLT	1	
6E0-85550-70	. ROTOR CPLT	1	
6E0-15723-00-94	. . POULIE DE DEMARREUR	1	

5. Applications No de série et code couleur correspondants

No de série du moteur	3AMH S : 063637 ~ L : 312528 ~
-----------------------	-----------------------------------

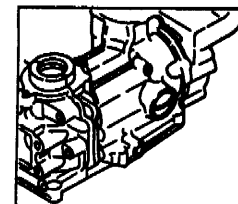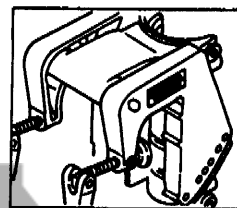

Code couleur	Nom de couleur	Abréviation
4D	DARK BLUISH GRAY METALLIC 2	DBNM2

6. Veuillez noter que les illustrations sont indiquées pour référence pour trouver les numéros de pièces, non pour être utilisées lors de l'assemblage. Lors de l'assemblage, veuillez utiliser le manuel d'entretien adéquat.

FIG. 1	CYLINDER. CRANKCASE	A6, A7
FIG. 2	INTAKE	B1, B2
FIG. 3	STARTER	B3
FIG. 4	COWLING. FUEL	B4, B5
FIG. 5	UPPER CASING. BRACKET	B6~C1
FIG. 6	CONTROL	C2, C3
FIG. 7	LOWER CASING. DRIVE 1	C4~C8
FIG. 8	GENERATOR	C7
FIG. 9	ELECTRIC PARTS	D1
FIG. 10	REPAIR KIT	D2, D3
	NUMERICAL INDEX	

TABLE DES MATIERES

FIG. 1	CYLINDRE. CARTER	A6, A7
FIG. 2	ADMISSION	B1, B2
FIG. 3	DEMARREUR	B3
FIG. 4	CAPOT, SECTION D'ALIMENTATION	B4, B5
FIG. 5	FOURREAU, SUPPORT	B6~C1
FIG. 6	COMMANDE	C2, C3
FIG. 7	BOITIER D'HELICE, TRANSMISSION 1	C4~C6
FIG. 8	GENERATRICE	C7
FIG. 9	PIECES ELECTRIQUE	D1
FIG. 10	KITS DE REPARATION	D2, D3
	INDEX NUMERIQUE	

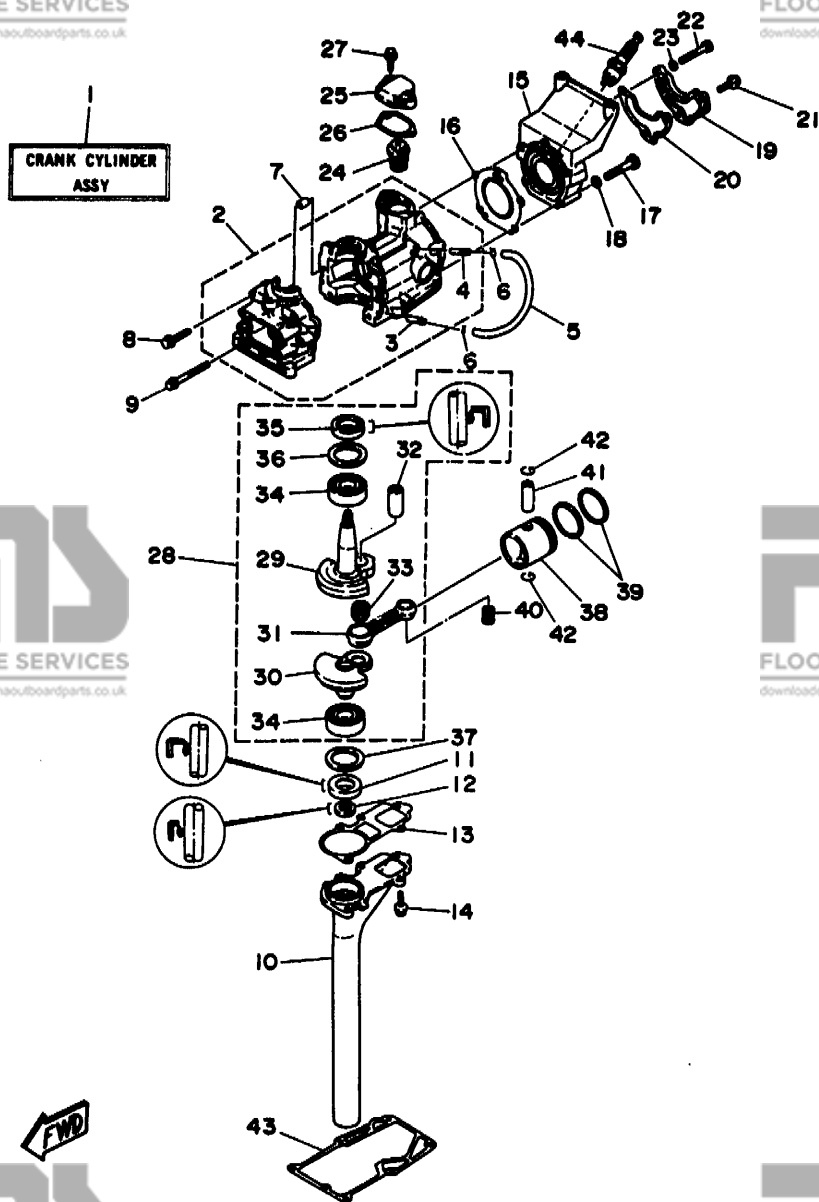


FIG. 1 CYLINDER. CRANKCASE

CYLINDRE. CARTER

REF. NO.	PART NO. NO. PIECES	DESCRIPTION DESCRIPTION	Q'TY QTE	REMARKS REMARQUES
1	6L5-W0090-01-40	CRANK CYLINDER ASSY EMBIELLAGE CYLINDRE (ENS.)	1	REF.NO. 2 ~ 43
2	6L5-15100-00-94	CRANKCASE ASSY CARTER DE MOTEUR COMPLET	1	
3	624-14485-00	.PIPE, JOINT .DURITE	1	
4	6E5-11372-00	.NIPPLE, HOSE .RACCORD, TUYAU	1	
5	90445-07M29	HOSE DURITE	1	
6	90467-06016	CLIP JONC	2	
7	93606-12019	PIN, DOWEL GOUPILLE	2	
8	90105-06M16	BOLT, WASHER BASED BOULON, AVEC RONDELLE	4	
9	90105-06M40	BOLT, WASHER BASED BOULON, AVEC RONDELLE	2	
10	6L5-15396-00-94	HOUSING, OIL SEAL LOGEMENT DE JOINT SPY	1	
11	93101-20M29	OIL SEAL JOINT SPY	1	
12	93101-09M42	OIL SEAL JOINT SPY	1	
13	6L5-15369-A0	GASKET, OIL SEAL HOUSING JOINT SPY DE LOGEMENT	1	
14	97595-06520	BOLT, WITH WASHER VIS HEXAGONAL	5	
15	6L5-11111-00-94	HEAD, CYLINDER 1 CULASSE	1	
16	6L5-11181-A2	GASKET, CYLINDER HEAD 1 JOINT, DE CULASSE 1	1	
17	97313-06028	BOLT BOULON	3	
18	92990-06600	WASHER, PLATE RONDELLE, PLATE	3	
19	6L5-11191-00-9M	COVER, CYLINDER HEAD 1 COUVERCLE, CULASSE 1	1	
20	6L5-11193-A1	GASKET, HEAD COVER 1 JOINT, COUVERCLE DE CULASSE 1	1	
21	97595-06520	BOLT, WITH WASHER VIS HEXAGONAL	1	
22	97313-06050	BOLT BOULON	2	
23	92990-06600	WASHER, PLATE RONDELLE, PLATE	2	
24	6E5-12411-01	THERMOSTAT THERMOSTAT	1	
25	6L5-12413-00-9M	COVER, THERMOSTAT COUVERCLE, THERMOSTAT	1	
26	6L5-12414-A1	GASKET, COVER JOINT, COUVERCLE	1	
27	97595-06520	BOLT, WITH WASHER VIS HEXAGONAL	2	
28	6L5-11400-00	CRANKSHAFT ASSY VILEBREQUIN COMPLET	1	

A6

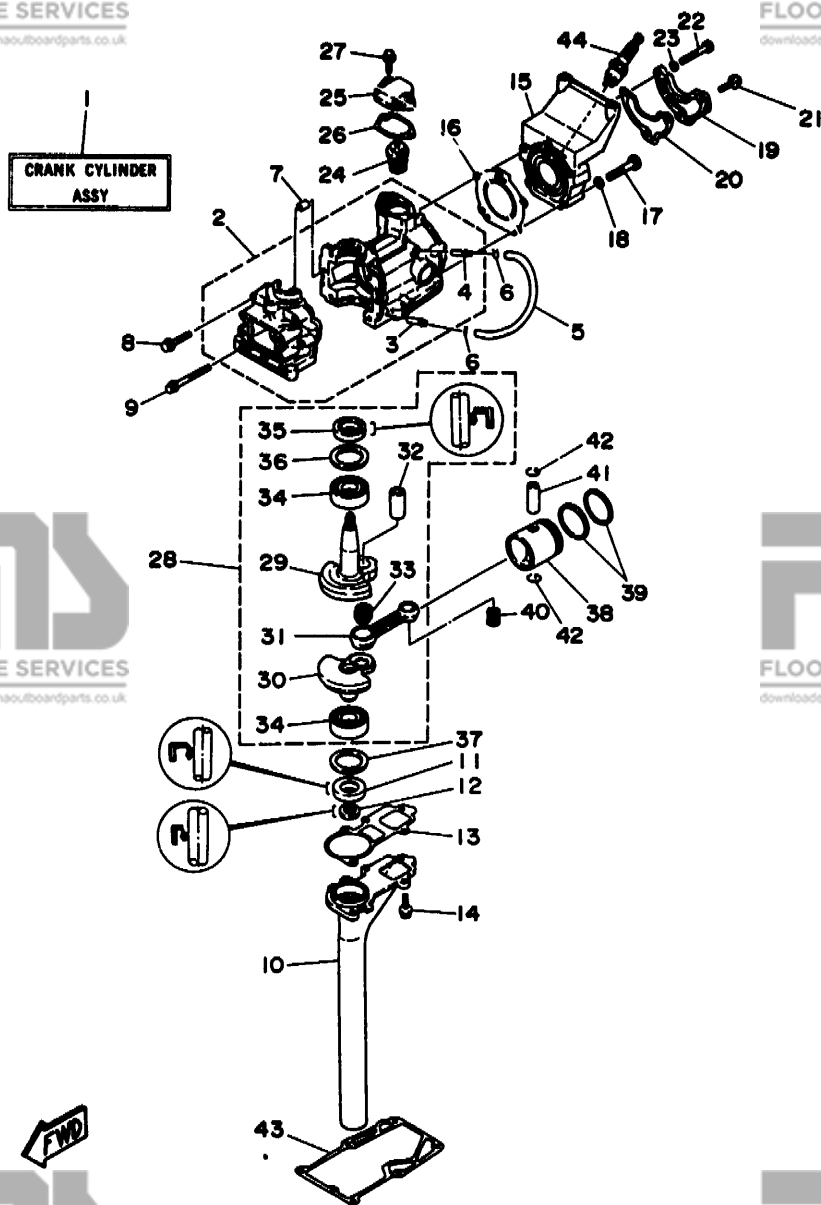


FIG. 1 CYLINDER, CRANKCASE

CYLINDER, CARTER

REF. NO.	PART NO. NO. PIECES	DESCRIPTION DESCRIPTION	Q'TY QTE	REMARKS REMARQUES
29	6L5-11412-00	.CRANK 1 .MASSOLOTTE DE VILEBREQUIN 1	1	
30	6L5-11422-00	.CRANK 2 .MASSOLOTTE DE VILEBREQUIN 2	1	
31	6L5-11651-00	.ROD, CONNECTING .BIELLE NUE	1	
32	6L5-11681-00	.PIN, CRANK 1 .MANETON, VILEBREQUIN 1	1	
33	93310-416N7	.BEARING, CYLINDRICAL .ROULEMENT	1	
34	93306-204U0	.BEARING .ROULEMENT	2	
35	93101-20M29	.OIL SEAL .JOINT SPY	1	
36	90201-32M00	.WASHER, PLATE .RONDELLE, PLATE	1	
37	90201-32M01	.WASHER, PLATE .RONDELLE, PLATE	1	
38	6L5-11631-00-96	PISTON (STD) PISTON (STD)	1	
	6L5-11635-00	PISTON (0.25MM O/S)	1	AP
	6L5-11636-00	PISTON (0.25MM O/S) PISTON (0.50MM O/S)	1	AP
39	6L5-11610-00	PISTON RING SET (STD) JEU DE SEGMENTS (STD)	1	
	6L5-11610-10	PISTON RING SET (0.25MM O/S) JEU DE SEGMENTS (0.25MM O/S)	1	AP
	6L5-11610-20	PISTON RING SET (0.50MM O/S) JEU DE SEGMENTS (0.50MM O/S)	1	AP
40	93310-112U0	BEARING, CYLINDRICAL ROULEMENT	1	
41	6L5-11633-00	PIN, PISTON AXE, PISTON	1	
42	93450-13022	CIRCLIP CIRCLIP	2	
43	6L5-45113-A1	GASKET, UPPER CASING JOINT, TUBE D'ARBRE	1	
44	94702-00274	PLUG SPARK (NGK BR6HS-10) BOUGIE D,ALLUMAGE	1	

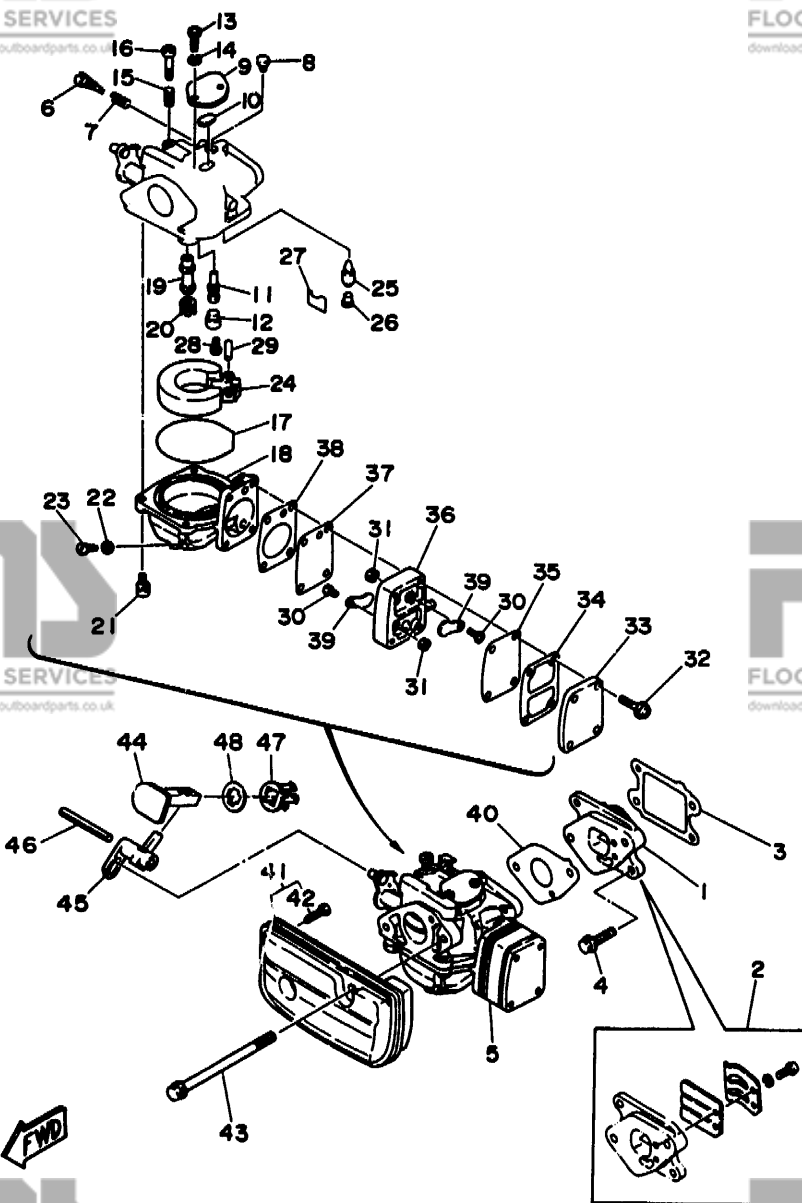


FIG. 2 INTAKE

ADMISSION

REF. NO.	PART NO. NO. PIECES	DESCRIPTION DESCRIPTION	Q'TY QTE	REMARKS REMARQUES
1	6L5-13610-02	REED VALVE ASSY CLAPET COMPLET	1	
2	6L5-W0004-02	.REED SET .JEU DE CLAPETS	1	
3	6L5-13621-A2	GASKET, VALVE SEAT JOINT, SIEGE DE CLAPET	1	
4	95895-06016	BOLT, FLANGE BOULON	2	
5	6L5-14301-03	CARBURETOR ASSY 1 CARBURATEUR COMPLET	1	
6	679-14923-00	.SCREW, PILOT .VIS, RALENTI	1	
7	679-14555-00	.SPRING .RESSORT	1	
8	6G1-14966-00	.CAP .CAPUCHON	1	
9	6G1-14527-00	.PLATE .PLAQUE	1	
10	6G1-14126-00	.GASKET .JOINT	1	
11	6L5-14948-03	.JET (#40) .GICLEUR (#40)	1	
12	676-14966-00	.CAP .CAPUCHON	1	
13	98580-04010	.SCREW, PAN HEAD .VIS	2	
14	92990-04100	.WASHER, SPRING .RONDELLE, GROWER	2	
15	90501-10326	.SPRING, COMPRESSION .RESSORT, COMPRESSION	1	
16	63V-14523-00	.SCREW, STOP .VIS, BUTEE	1	
17	6G1-14984-00	.O-RING .JOINT TORIQUE	1	
18	6G1-14980-01	.BODY, FLOAT CHAMBER .CORPS, CUVE DE FLOTTEUR	1	
19	6L5-14947-01	.JET, NEEDLE .GICLEUR DE STARTER	1	
20	676-14943-14	.JET, MAIN (#68) .GICLEUR, PRINCIPAL (#68)	1	
21	97980-04114	.SCREW, WITH WASHER .VIS, AVEC RONDELLE	4	
22	6G1-14398-00	.WASHER .RONDELLE	1	
23	6G1-14992-00	.SCREW, DRAIN .BOUCHON, PURGE	1	
24	6G1-14985-00	.FLOAT .FLOTTEUR	1	
25	6G1-14546-00	.VALVE, NEEDLE .POINTEAU	1	
26	676-14186-00	.PIN, FLOAT .AXE, FLOTTEUR	1	
27	663-14159-00	.CLIP .JONC	1	
28	98580-04008	.SCREW, PAN HEAD .VIS	1	

B1

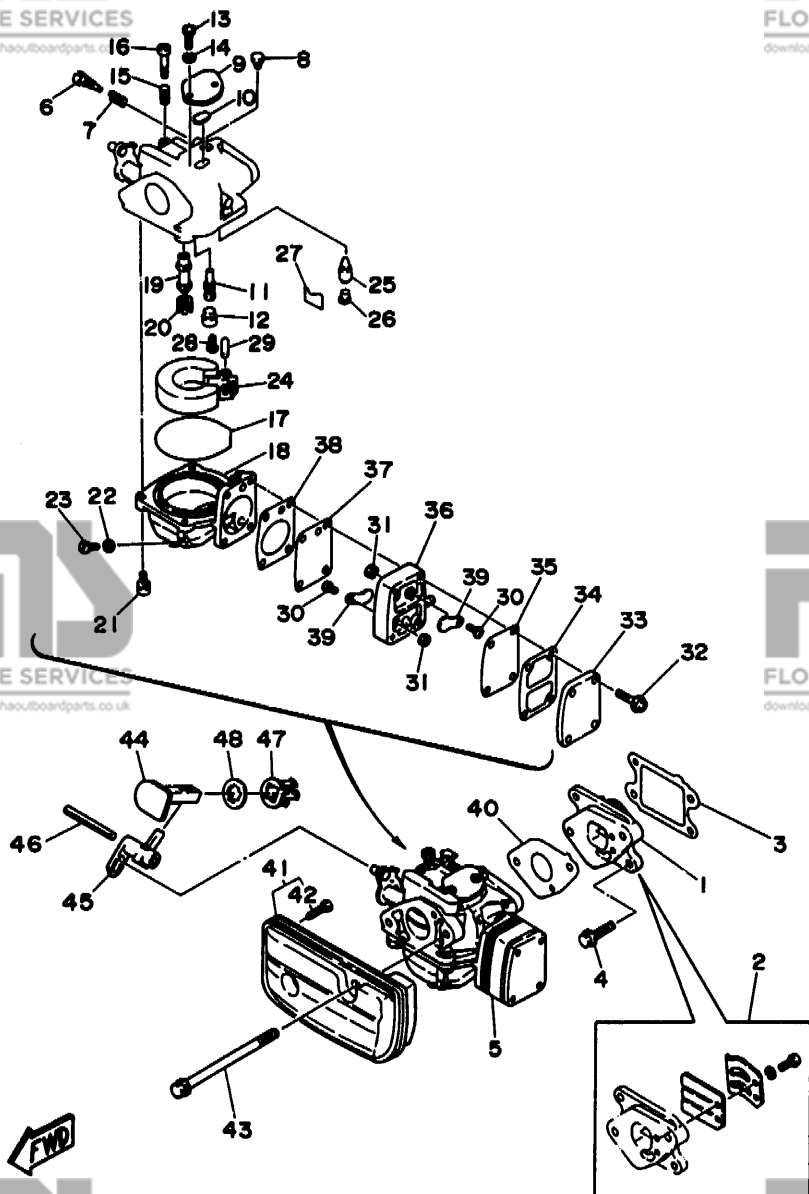


FIG. 2 INTAKE

ADMISSION

REF. NO.	PART NO. NO. PIECES	DESCRIPTION DESCRIPTION	Q'TY QTE	REMARKS REMARQUES
29	688-14540-00	.PIN, FLOAT ARM	1	
30	98580-0306S	.AXE, BRAS DE FLOTTEUR	2	
31	95380-03600	.SCREW, PAN HEAD	2	
32	97980-04125	.VIS	2	
33	661-24452-00	.NUT	2	
34	97980-04125	.ECROU	4	
35	661-24452-00	.SCREW, WITH WASHER	1	
36	661-24432-00	.VIS, AVEC RONDELLE	1	
37	661-24471-00	.COVER	1	
38	661-24432-00	.COUVERCLE	1	
39	661-24471-00	.GASKET, FUEL PUMP 2	1	
40	661-24412-01	.JOINT 2 DE POMPE A ESSENCE	1	
41	661-24411-00	.DIAPHRAGM	1	
42	661-24431-01	.DIAPHRAGME	1	
43	661-24421-00	.BODY 1	1	
44	661-24421-00	.CORPS 1	1	
45	661-24421-00	.DIAPHRAGM	1	
46	661-24421-00	.DIAPHRAGME	1	
47	661-24421-00	.GASKET, FUEL PUMP 1	1	
48	661-24421-00	.JOINT 1 DE POMPE A ESSENCE	2	
49	661-24421-00	.VALVE, CHECK	1	
50	661-24421-00	.SOUPAPE, RETENUE	1	
51	661-24421-00	.GASKET	1	
52	661-24421-00	.JOINT	1	
53	661-24421-00	.SILENCER ASSY, INTAKE	1	
54	661-24421-00	.SIENCIEX D'ADMISSION	3	
55	661-24421-00	.SCREW, TAPPING	2	
56	661-24421-00	.VIS, TETE BOMBEE	2	
57	661-24421-00	.BOLT, FLANGE	1	
58	661-24421-00	.BOULON	1	
59	661-24421-00	.KNOB, CHOKE	1	
60	661-24421-00	.BOUTON DE STARTER	1	
61	661-24421-00	.LEVER, CHOKE 1	1	
62	661-24421-00	.LEVIER 1	1	
63	661-24421-00	.PIN, SPRING	1	
64	661-24421-00	.AGRAFFE	1	
65	661-24421-00	.GROMMET	1	
66	661-24421-00	.PASSE-FIL	1	
67	661-24421-00	.GROMMET 2	1	
68	661-24421-00	.PASSE-FIL 2	1	

B2

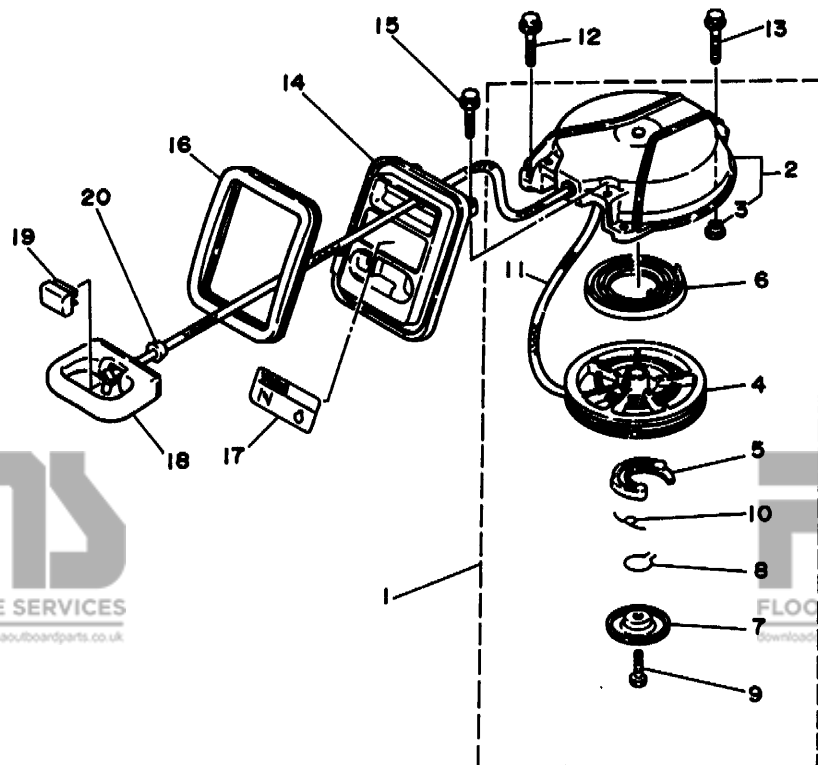


FIG. 3 STARTER

DEMARREUR

REF. NO.	PART NO. NO. PIECES	DESCRIPTION DESCRIPTION	Q'TY QTE	REMARKS REMARQUES
1	6L5-15710-00	STARTER ASSY DEMARREUR COMPLET	1	
2	6L5-15711-00	.CASE, STARTER .CARTER DE DEMARREUR	1	
3	90387-06M70	..COLLAR ..COLLERETTE	1	
4	6L5-15714-00	.DRUM, SHEAVE .TAMBOUR, POULIE	1	
5	6L5-15741-00	.PAWL, DRIVE .CLIQUET, ENTRAINEMENT	1	
6	6L5-15713-00	.SPRING, STARTER .RESSORT DE DEMARREUR	1	
7	6L5-15716-00	.PLATE, DRIVE .PLAQUE, ENTRAINEMENT	1	
8	6A1-15705-00	.SPRING, DRIVE PAWL .RESSORT DE CLIQUET	1	
9	97013-06012	.BOLT .BOULON	1	
10	6A1-15767-00	.SPRING .RESSORT	1	
11	*	.WIRE (L:1650MM) .FIL (L:1650MM)	1	
12	95895-06020	BOLT, FLANGE BOULON	2	
13	95895-06035	BOLT, FLANGE BOULON	1	
14	6L5-15758-00-98	GUIDE, ROPE GUIDE DE CABLE	1	
15	95895-06016	BOLT, FLANGE BOULON	2	
16	6L5-15761-00	SEAL, RUBBER 1 JOINT CAOUTCHOUC 1	1	
17	6L5-42677-00	GRAPHIC, FRONT ADHESIF, AVANT	1	
18	6L5-15755-00	HANDLE, STARTER POIGNEE, DE DEMARREUR	1	
19	6L5-15779-20	COVER COUVERCLE	1	
20	6L5-15789-00	DAMPER AMORTISSEUR	1	

* CUT FROM 50M ROLLS, PART NO. 90790-77002, CUTTING LENGTH 1.65M.

* A PRELEVER SUR BOBINE 50M, REFERENCE 90790-77002, LONGUEUR DE COUPE 1.65M.



B3

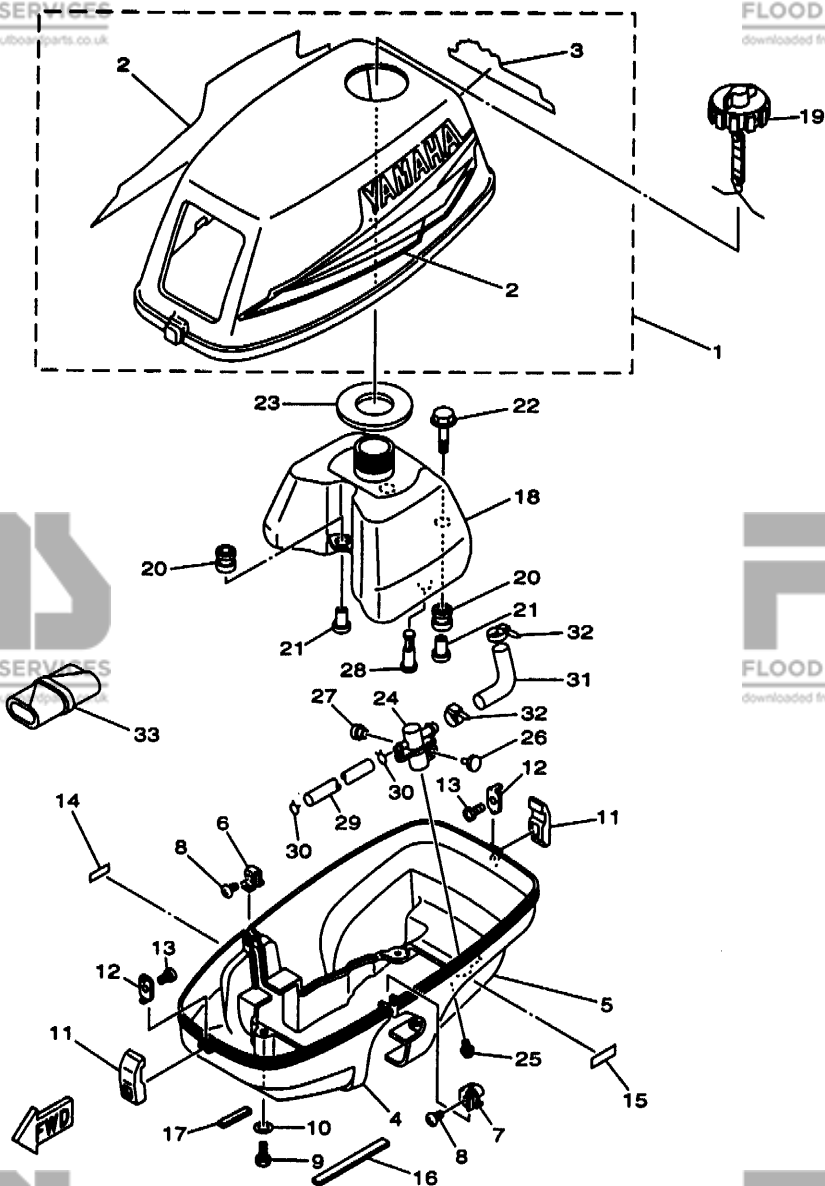


FIG. 4 COMLING. FUEL

CAPOT, SECTION D'ALIMENTATION

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
NO.	NO. PIECES	DESCRIPTION	QTE	REMARQUES
1	6L5-42610-54-40	TOP COWLING ASSY	1	
2	6L5-W0070-13	CAPOT (ENS.)	1	
3	6L5-42678-51	.GRAPHIC SET	1	
4	6L5-42711-11	.JEU DIEMBLEMES	1	
5	6L5-42712-12	.GRAPHIC, REAR	1	
6	6L5-42774-00	.ADHESIF, ARRIERE	1	
7	6L5-42775-00	COWLING, BOTTOM	1	
8	98580-05010	CUVETTE	1	
9	97095-06016	COWLING, BOTTOM	1	
10	92990-06600	STAY, APRON 1	1	
11	6L5-42647-00	COUSSINET	1	
12	6L5-42823-00	STAY, APRON 2	1	
13	90167-03M02	COUSSINET	1	
14	6L5-44191-00	SCREW, PAN HEAD	2	
15	6L5-24591-00	VIS	4	
16	6L5-42662-00	BOLT	4	
17	6L5-42663-00	BOULON	4	
18	6L5-24111-02	WASHER, PLATE	4	
19	6L5-24610-20	RONDELLE, PLATE	4	
20	6A0-82317-00	HOLDER, CLAMP BAND	2	
21	624-42542-00	SUPPORT, SANDOW DE SERRAGE	2	
22	90119-06M65	PLATE, STOP	2	
23	6L5-44196-20	PLAQUE	2	
24	6L5-44197-20	SCREW, TAPPING	2	
25	90159-06M10	VIS, TETE FRAISEE	1	
26	6L5-44196-20	INDICATOR, SHIFT	1	
27	6L5-44197-20	ETIQUETTE, EMBRAYAGE	1	
28	6L5-24251-00	EMBLEM, FUEL COCK	1	
29	6L5-24251-00	ADHESIF	1	
30	6L5-24251-00	DAMPER	1	
31	6L5-24251-00	AMORTISSEUR	1	
32	6L5-24251-00	TANK, FUEL	1	
33	6L5-24251-00	RESERVOIR, A ESSENCE	1	

B4


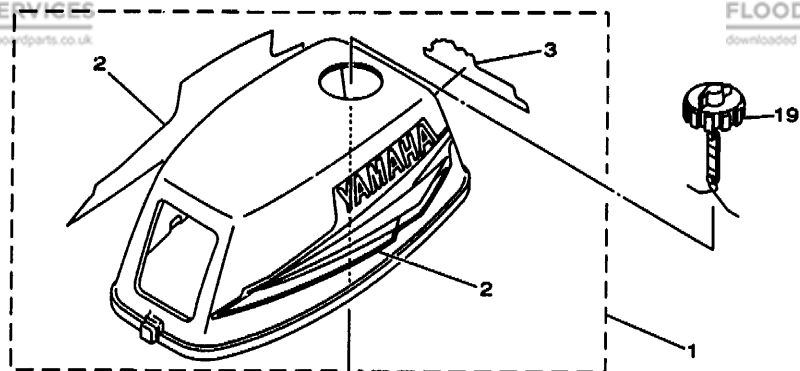


FIG. 4 COILING. FUEL

CAPOT, SECTION D'ALIMENTATION



REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
NO.	NO. PIECES	DESCRIPTION	QTE	REMARQUES
29	6L5-24311-00	PIPE, FUEL 1	1	
30	90467-08004	DURITE A ESSENCE	2	
31	6L5-24312-00	CLIP	1	
32	90465-13M11	JONC	2	
33	656-W2810-02	PIPE 2	1	
		DURITE 2		
		CLAMP		
		BRIDE		
		TOOL KIT	1	
		TROUSSE A OUTILS		

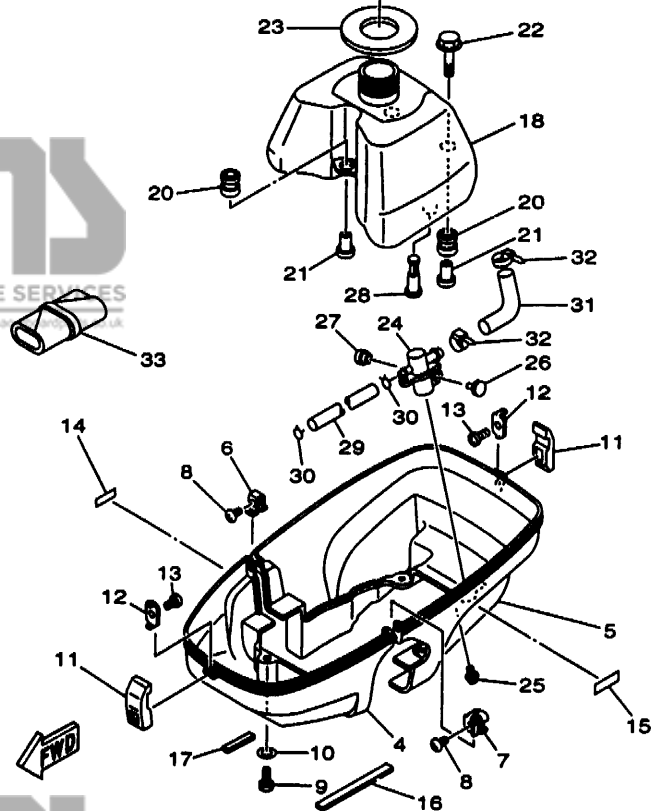

B5

FIG. 5 UPPER CASING. BRACKET

FOURREAU, SUPPORT

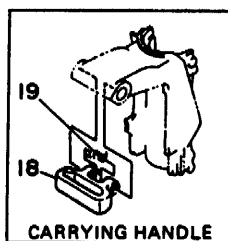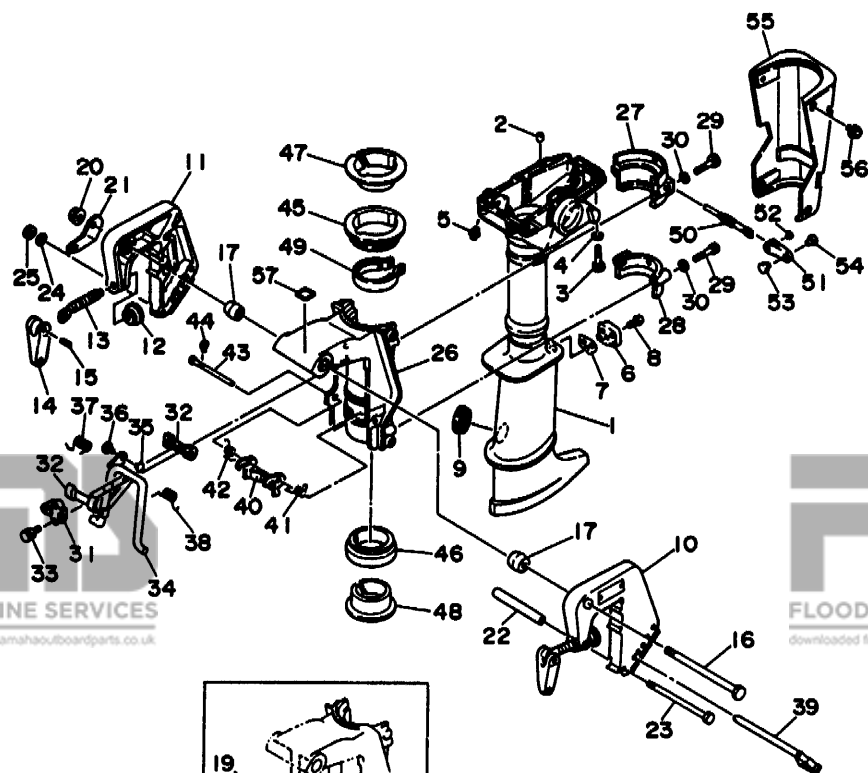


CARRYING HANDLE

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
NO.	NO. PIECES	DESCRIPTION	QTE	REMARQUES
1	6L5-45111-02-4D	CASING, UPPER FOURREAU	1	
2	93604-10M03	PIN, DOWEL CLAVETTE	2	
3	97095-06030	BOLT BOULON	6	
4	92990-06600	WASHER, PLATE RONDELLE, PLATE	6	
5	93700-06M03	NIPPLE, GREASE PION	1	
6	6L5-45152-00	COVER, UPPER CASING 2 CAPUCHON, FOURREAU 2	1	
7	6L5-45115-A0	GASKET, UPPER CASING JOINT, TUBE D'ARBRE	1	
8	90149-05M08	SCREW VIS	1	
9	647-45151-01	COVER, UPPER CASING CAPUCHON, FOURREAU	1	
10	6L5-43111-01-4D	BRACKET, CLAMP PRESSE	1	
11	6L5-43112-00-4D	BRACKET, CLAMP PRESSE	1	
12	648-43114-01	PAD, TRANSOM CLAMP RONDELLE D'APPUI	2	
13	6E0-43116-01	SCREW, TRANSOM CLAMP VIS DE PRESSE	2	
14	6E0-43118-01	HANDLE, TRANSOM CLAMP POIGNEE DE VIS DE PRESSE	2	
15	90243-04M01	PIN, SPRING RIVET, TETE TRONCONIQUE	2	
16	90101-08M10	BOLT BOULON	1	
17	668-43136-00	PIECE, FRICTION FRICTION	2	
18	6L5-42121-00	BRACKET SUPPORT	1	
19	90508-16M30	SPRING, TORSION RESSORT, TORSION	1	
20	95780-08300	NUT, FLANGE ECROU	1	
21	6A1-43113-01	PLATE, CLAMP BRACKET PLAQUETTE, PRESSE	1	
22	90387-06M11	COLLAR COLLERETTE	1	
23	90101-06335	BOLT BOULON	1	
24	92990-06600	WASHER, PLATE RONDELLE, PLATE	1	
25	95380-06600	NUT ECROU	1	
26	6L5-43311-01-4D	BRACKET, SWIVEL SUPPORT, PIVOT	1	
27	6L5-44511-00-4D	COVER, UPPER MOUNT COUVERCLE, SUSPENSION SUPERIEUR	1	
28	6L5-44553-00-4D	COVER, LOWER MOUNT COUVERCLE, SUSPENSION INFRIEUR	1	

B6

FIG. 5 UPPER CASING. BRACKET

FOURREAU, SUPPORT

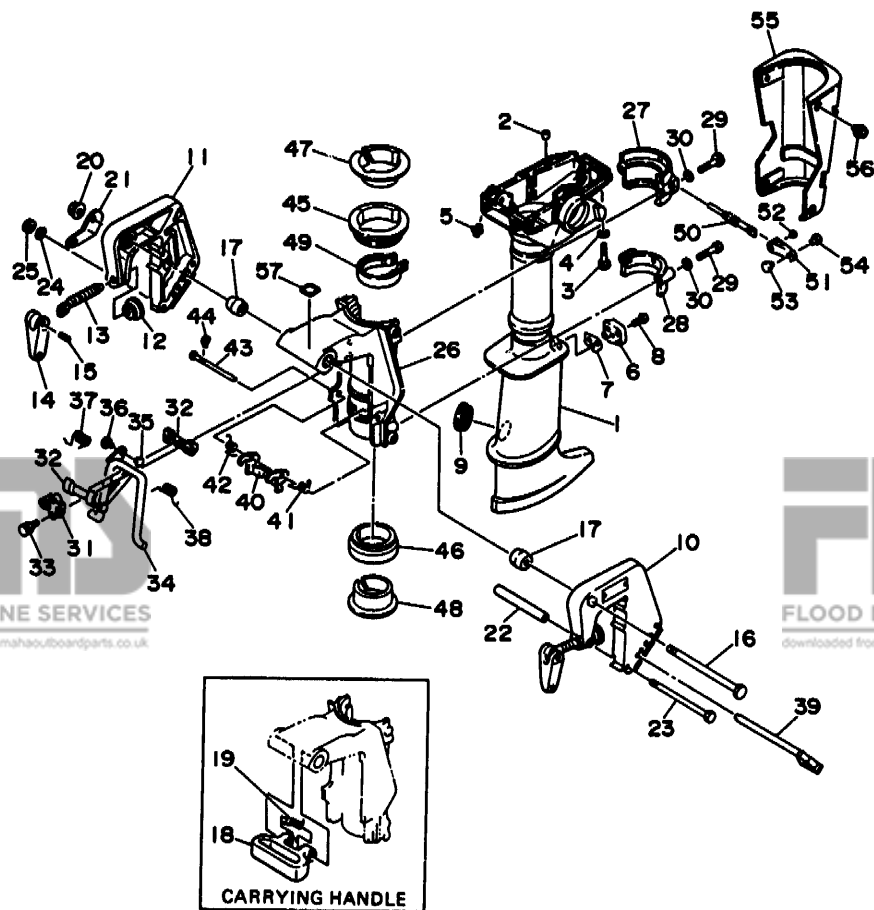



REF. NO.	PART NO. NO. PIECES	DESCRIPTION DESCRIPTION	Q'TY QTE	REMARKS REMARQUES
29	97095-06035	BOLT BOULON	4	
30	92990-06600	WASHER, PLATE RONDELLE, PLATE	4	
31	6E0-43313-00-94	BRACKET, SWIVEL SUPPORT, PIVOT	1	
32	620-43189-00	BUSHING COUSSINET	2	
33	95895-06020	BOLT, FLANGE BOULON	2	
34	6L5-43181-00	LEVER, TILT STOP LEVIER, VERROUILLAGE RELEVAGE	1	
35	6L5-44196-20	INDICATOR 3 INDICATEUR 3	1	
36	6L5-44197-20	INDICATOR 4 INDICATEUR 4	1	
37	90508-16020	SPRING, TORSION RESSORT, TORSION	1	
38	90508-16021	SPRING, TORSION RESSORT, TORSION	1	
39	6L5-43160-00	TILT ROD ASSY BROCHE D'INCLINAISON (ENS.)	1	
40	6L5-43614-00	PLATE, TILT LOCK ETRIER, VERROUILLAGE MARCHÉ AR	1	
41	90508-08M26	SPRING, TORSION RESSORT, TORSION	1	
42	90508-08M27	SPRING, TORSION RESSORT, TORSION	1	
43	6L5-43659-00	SHAFT, REVERSE LOCK AXE, VERROUILLAGE MARCHÉ AR	1	
44	99080-05600	CIRCLIP CIRCLIP	1	
45	6L5-425-00	BUSHING, PIVOT SHAFT COUSSINET	1	
46	6L5-42538-00	BUSHING, PIVOT SHAFT COUSSINET	1	
47	6L5-42539-00	BUSHING, PIVOT SHAFT COUSSINET	1	
48	6L5-42549-00	BUSHING, PIVOT SHAFT COUSSINET	1	
49	6E0-42528-03	PLATE, FRICTION PLAQUE, FRICTION	1	
50	6L5-42529-01	SCREW, FRICTION PIECE VIS, PIECE DE FRICTION	1	
51	6L5-42561-00	KNOB, STEERING LOCK BOUON	1	
52	90266-04M05	RIVET RIVET	1	
53	6L5-44196-20	INDICATOR 3 INDICATEUR 3	1	
54	6L5-44197-20	INDICATOR 4 INDICATEUR 4	1	
55	6L5-43318-11	COVER CAPUCHON	1	
56	90159-06M10	SCREW, WITH WASHER VIS, AVEC RONDELLE	4	



FIG. 5 UPPER CASING. BRACKET

FOURREAU, SUPPORT

REF. NO.	PART NO. NO. PIECES	DESCRIPTION DESCRIPTION	Q'TY QTE	REMARKS REMARQUES
57	6A1-42792-01	MARK (100 : 1) ETIQUETTE (100 : 1)	1	

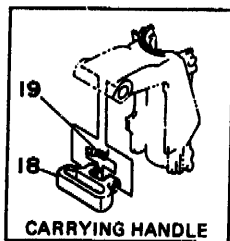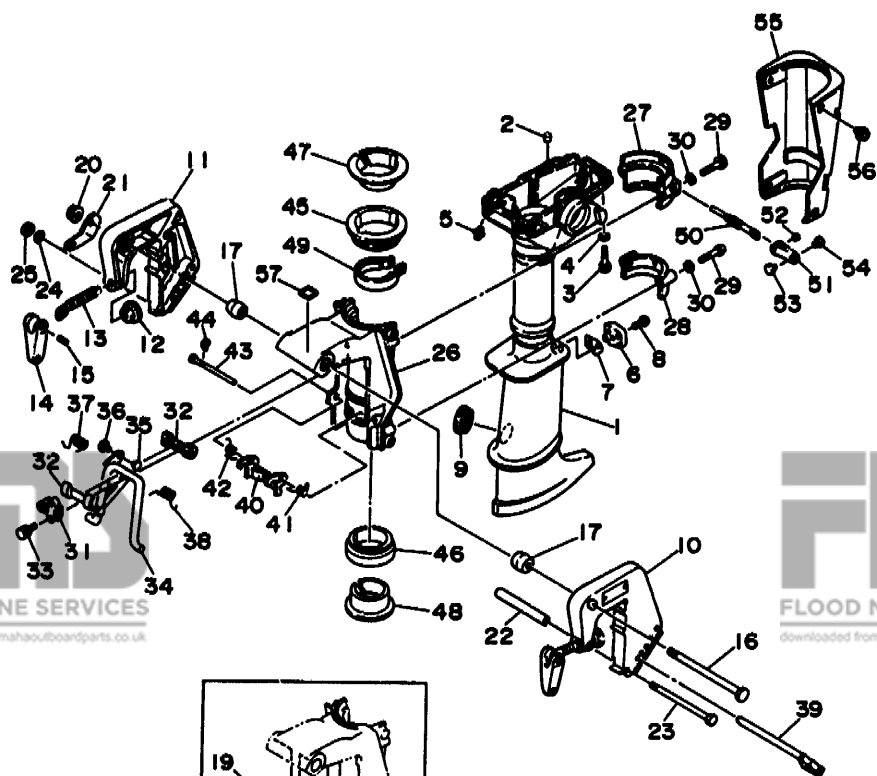

C1

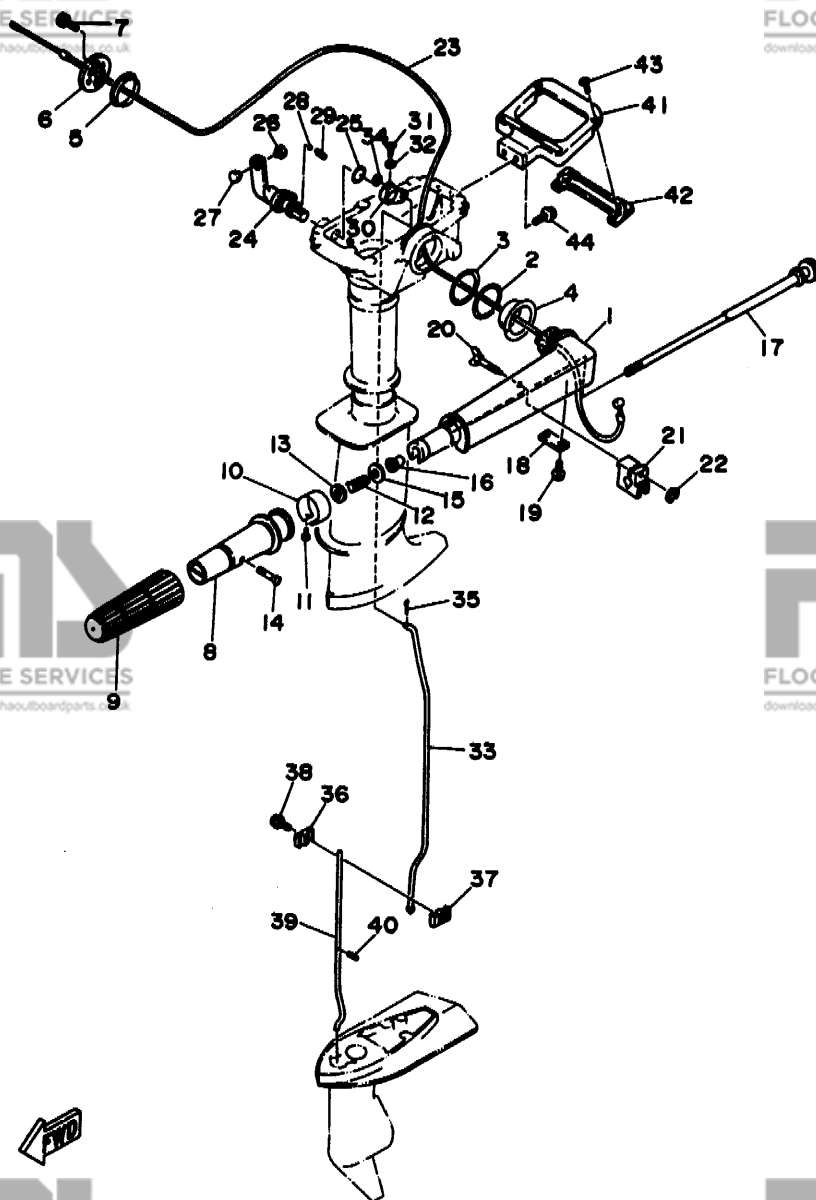


FIG. 6 CONTROL

COMMANDE

REF. RV	PART NO.	DESCRIPTION	Q'TY	REMARKS
NO.	NO. PIECES	DESCRIPTION	QTE	REMARKS
1	661-42111-11-40	HANDLE, STEERING	1	
2	90206-36M21	POIGNEE	1	
3	90202-36M55	WASHER, WAY"	1	
4	90386-34M97	RONDELLE, ONDULEE	1	
5	90386-33M96	WASHER, PLATE	1	
6	661-42131-01	RONDELLE, PLATE	1	
7	97095-06020	BUSH	1	
8	664-42119-00	DOUILLE	1	
9	661-42177-00	BUSH	1	
10	6L5-42137-20	DOUILLE	1	
11	90269-02M09	COVER, HANDLE STEERING	1	
12	90501-23215	COUVERCLE	1	
13	92990-10600	BOLT	1	
14	90149-05M13	BOULON	1	
15	90209-08M17	GRIP, STEERING HANDLE	1	
16	90386-08032	POIGNEE, BARRE FRANCHE	1	
17	6G1-42138-01	RUBBER, HANDLE	1	
18	6E0-42159-02	CAOUTCHOUC, POIGNEE	1	
19	97885-05012	INDICATOR, THROTTLE	1	
20	6L5-42125-00	INDICATEUR, ACCELERATION	1	
21	661-42126-00	RIVET	1	
22	99080-03600	RIVET	1	
23	6L5-26301-01	SPRING, COMPRESSION	1	
24	6L5-44111-00	RESSORT, COMPRESSION	1	
25	93210-12790	WASHER, PLATE	1	
26	6L5-44196-20	RONDELLE, PLATE	1	
27	6L5-44197-20	SCREW	1	
28	93505-16024	VIS	1	
29		WASHER	1	
30		RONDELLE	1	
31		BUSH	1	
32		DOUILLE	1	
33		LEVER, THROTTLE	1	
34		LEVIER, ACCELERATEUR	1	
35		STAY	1	
36		SUPPORT	1	
37		SCREW, PAN HEAD	2	
38		VIS, TETE TRONCONIQUE	1	
39		BOLT, FRICTION ADJUSTING	1	
40		BOULON	1	
41		FRICTION, STEERING HANDLE GRIP	1	
42		CUVETTE, POIGNEE DE DIRECTION	1	
43		CIRCLIP	1	

C2

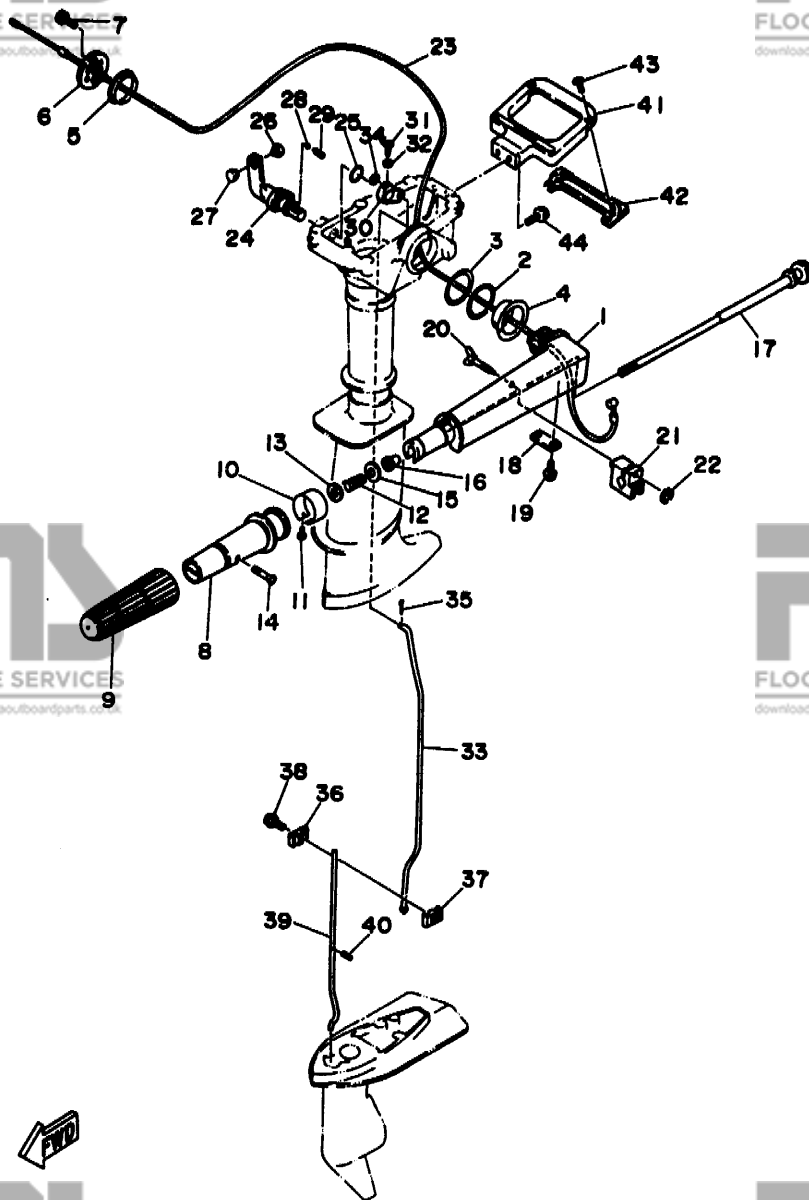



FIG. 6 CONTROL

COMMANDE

REF. NO.	PART NO. NO. PIECES	DESCRIPTION DESCRIPTION	Q'TY QTE	REMARKS REMARQUES
29	90501-12274	SPRING, COMPRESSION	1	
30	6L5-44121-00	RESSORT, COMPRESSION	1	
31	97704-40620	LEVER, SHIFT ROD	1	
32	92990-04600	LEVIER, TIGE D'INVERSION	1	
33	6L5-44143-00	SCREW, TAPPING	1	
34	92990-05600	VIS, TETE FRAISEE	1	
35	91490-16010	WASHER, PLATE	1	
36	6E0-44145-00	RONDELLE, PLATE	1	
37	6E0-44146-00	ROD, SHIFT	1	
38	95895-06020	TIGE D'EMBRAYAGE	1	
39	6L5-44144-00	WASHER, PLATE	1	
40	91690-25014	RONDELLE, PLATE	1	
41	6L5-42731-00-40	PIN, COTTER	1	
42	6L5-42735-20	GOUPILLE	1	
43	90161-04M02	CONNECTOR, SHIFT ROD	1	
44	97595-06520	CONNECTEUR, TIGE D'INVERSION	1	
		CONNECTEUR, TIGE D'INVERSION	1	
		BOLT, FLANGE	1	
		BOULON	1	
		ROD, SHIFT	1	UR SHORT
		TIGE D'EMBRAYAGE	1	
		ROD, SHIFT	1	UR LONG
		TIGE D'EMBRAYAGE	1	
		PIN, SPRING	1	
		AGRAFFE	1	
		CARRYING HANDLE	1	
		POIGNEE DE PORTAGE	1	
		PROTECTOR	1	
		PROTECTEUR	1	
		SCREW, TAPPING	2	
		VIS, TETE FRAISEE	2	
		BOLT, WITH WASHER	2	
		VIS HEXAGONAL	2	

FIG. 7 LOWER CASING. DRIVE 1

BOITIER D'HELICE, TRANSMISSION 1

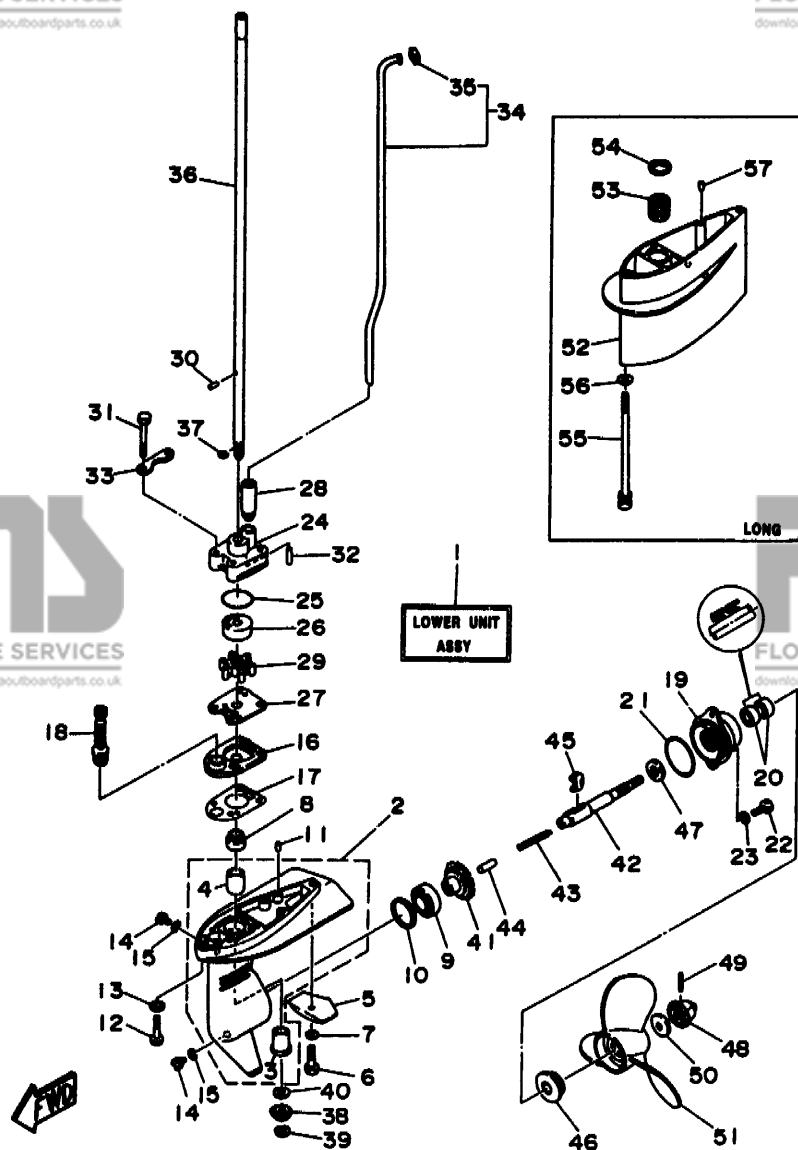


REF. NO.	PART NO. NO. PIECES	DESCRIPTION DESCRIPTION	Q'TY QTE	REMARKS REMARQUES
1	6L5-45300-01-4D	LOWER UNIT ASSY UNITE INFERIEURE (ENS.) (REF.NO. 2 ~ 10, 14 ~ 33, 36 ~ 45, 47)	1	UR SHORT
	6L5-45300-11-4D	LOWER UNIT ASSY UNITE INFERIEURE (ENS.) (REF.NO. 2 ~ 10, 14 ~ 33, 36 ~ 45, 47)	1	UR LONG
2	6L5-45311-00-4D	CASING, LOWER BOITIER D'HELICE	1	
3	6L5-45317-09	.BUSHING, DRIVE SHAFT .DOUILLE, ARBRE MOTEUR	1	
4	6L5-45316-09	.BUSHING, DRIVE SHAFT .DOUILLE, ARBRE MOTEUR	1	
5	6L5-45251-02	ANODE	1	
6	95895-06030	BOLT, FLANGE BOULON	1	UR SHORT
	90101-06M18	BOLT BOULON	1	UR LONG
7	92990-06300	WASHER, INTERNAL TOOTH RONDELLE, DENTURE INTERNE	1	
8	93103-09M41	OIL SEAL JOINT SPY	1	
9	93316-003U0	BEARING, CYLINDRICAL ROULEMENT	1	
10	6L5-45567-00	SHIM CALE	1	UN
11	93604-10M03	PIN, DOWEL CLAVETTE	2	
12	97095-06030	BOLT BOULON	3	
13	92990-06600	WASHER, PLATE RONDELLE, PLATE	3	
14	90340-08M04	PLUG, STRAIGHT SCREW PLOT, FILETE DROIT	2	
15	90430-08020	GASKET JOINT	2	
16	6L5-45321-00-58	PLATE PLAQUETTE	1	
17	6L5-45315-A0	PACKING, LOWER CASING JOINT, BOITIER D'HELICE	1	
18	6L2-44147-00	BOOT, SHIFT ROD SOUFFLET, TIGE D'INVERSION	1	
19	6L5-45361-00-4D	CAP, LOWER CASING COUVERCLE, BOITIER D'HELICE	1	
20	93101-13M12	OIL SEAL JOINT SPY	2	
21	93210-48214	O-RING JOINT TORIQUE	1	
22	97095-06016	BOLT BOULON	2	
23	92990-06600	WASHER, PLATE RONDELLE, PLATE	2	
24	6L5-44311-00	HOUSING, WATER PUMP CORPS, POMPE A EAU	1	

C4

FIG. 7 LOWER CASING, DRIVE 1

BOITIER D'HELICE, TRANSMISSION 1

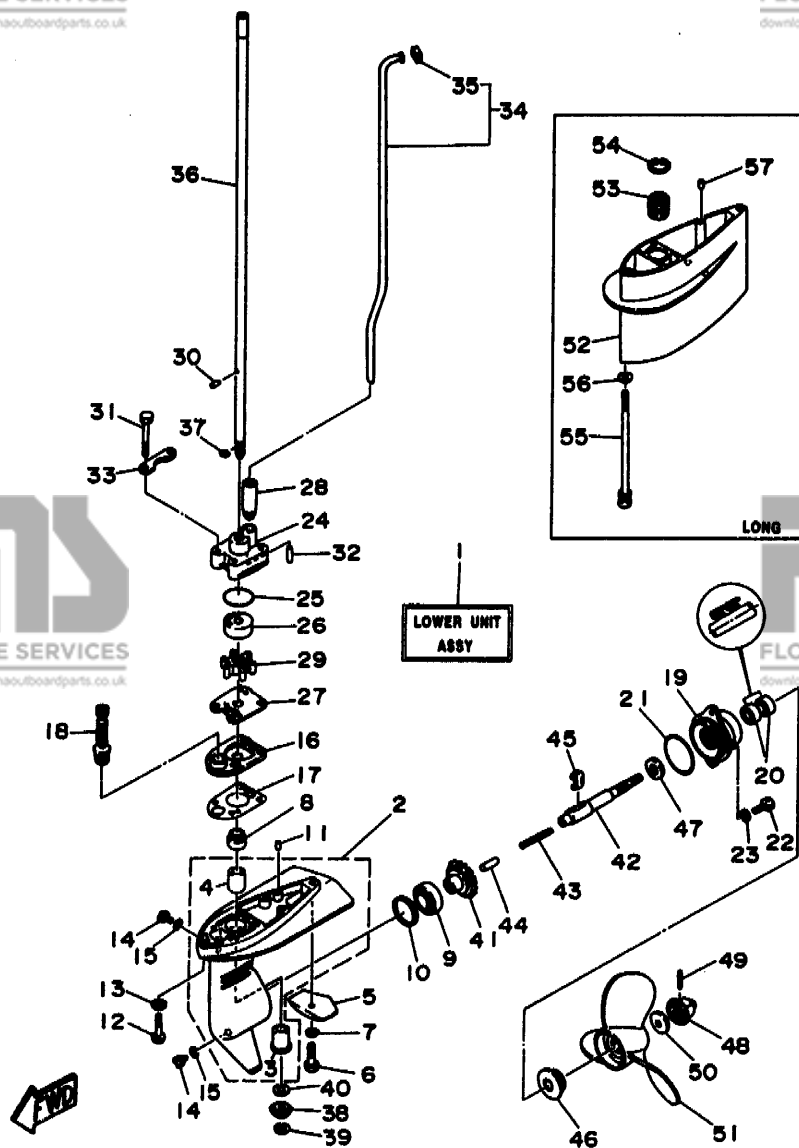


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
NO.	NO. PIECES	DESCRIPTION	QTE	REMARKS
25	93210-33M85	O-RING	1	
26	6L5-44322-00	JOINT TORIQUE INSERT, CARTRIDGE	1	
27	6L5-44323-00	CUVETTE OUTER PLATE, CARTRIDGE	1	
28	6E0-44366-00	PLAQUE EXTERIEURE DAMPER, WATER SEAL	1	
29	6L5-44352-00	JOINT, TUBE D'EAU IMPELLER	1	
30	93604-07M13	TURBINE PIN, DOWEL	1	
31	97095-06040	CLAVETTE BOLT	4	
32	93604-18080	BOULON PIN, DOWEL	2	
33	6L5-44328-00	CLAVETTE PLATE	2	
34	6L5-44360-01	PLAQUETTE WATER TUBE ASSY	1	UR SHORT
	6L5-44360-11	TUYAU,EAU WATER TUBE ASSY	1	UR LONG
35	646-44365-00	TUYAU,EAU .DAMPER, WATER SEAL	1	
36	6L5-45511-00	JOINT, TUBE D'EAU SHAFT, DRIVE	1	UR SHORT
	6L5-45511-10	ARBRE, MOTEUR SHAFT, DRIVE	1	UR LONG
37	90467-07M12	ARBRE, MOTEUR CLIP	1	
38	6L5-45551-00	JONG PINION	1	
39	99009-06600	PIGNON D'ATTAQUE CIRCLIP	1	
40	6L5-45533-00-20	CIRCLIP SHIM (T:2.0MM)	1	UR
	6L5-45533-00-21	CALE (T:2.0MM) SHIM (T:2.1MM)	1	UR
	6L5-45533-00-22	CALE (T:2.1MM) SHIM (T:2.2MM)	1	UR
	6L5-45533-00-23	CALE (T:2.2MM) SHIM (T:2.3MM)	1	UR
41	6L5-45560-00	CALE (T:2.3MM) GEAR	1	
42	6L5-45611-00	PIGNON SHAFT, PROPELLER	1	
43	90501-10064	ARBRE, HELICE SPRING, COMPRESSION	1	
44	6L5-45635-00	RESSORT, COMPRESSION PLUNGER, SHIFT	1	
45	6L5-45631-00	POUSOIR D'EMBRAYAGE CLUTCH, DOG	1	
46	6L5-45987-01	CRABOT SPACER	1	
47	90201-13198	ENTRETOISE WASHER, PLATE	1	
		RONDELLE, PLATE	1	

C5

FIG. 7 LOWER CASING. DRIVE 1

BOITIER D'HELICE, TRANSMISSION 1

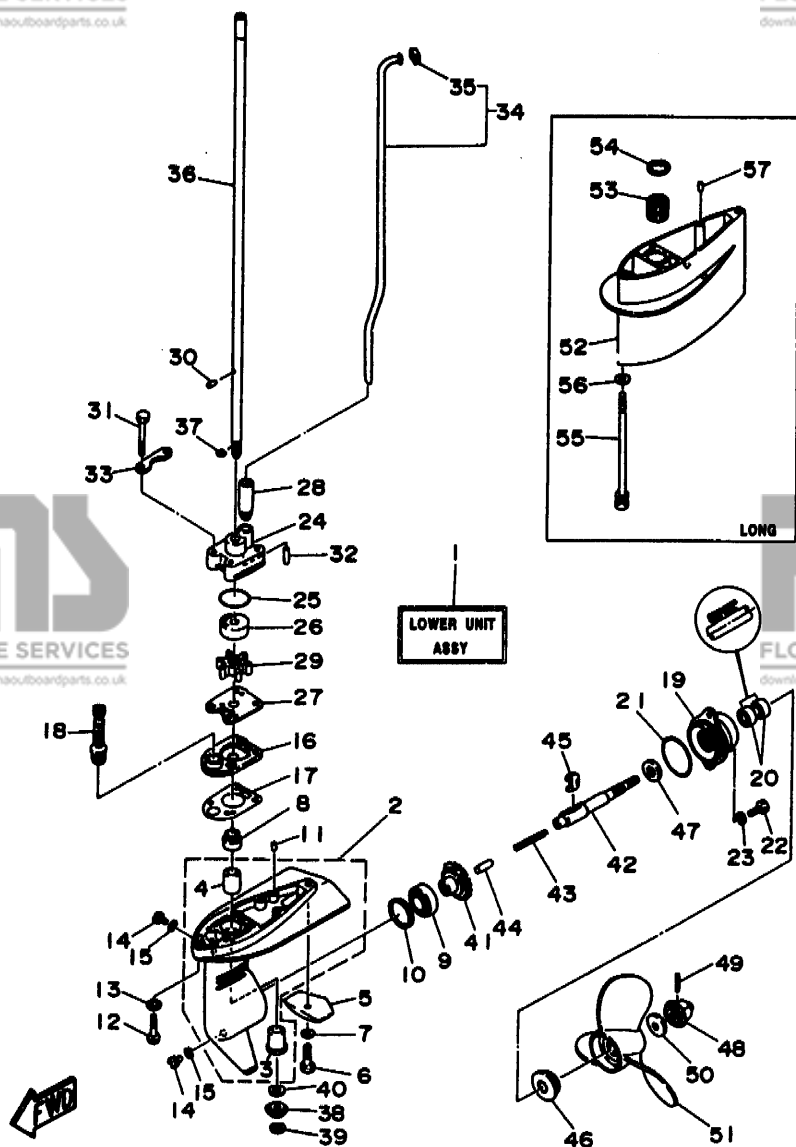

REF. NO.	PART NO. NO. PIECES	DESCRIPTION DESCRIPTION	Q'TY QTE	REMARKS REMARQUES
48	6L5-45616-00	NUT, PROPELLER CONE, HELICE	1	
49	91490-25030	PIN, COTTER GOUPILLE	1	
50	90201-08M54	WASHER, PLATE RONDELLE, PLATE	1	
51	6L5-45943-00-EL	PROPELLER (3X7-1/4"X6"-BS) HELICE (3X7-1/4"X6"-BS)	1	UR
	6L5-45945-00-EL	PROPELLER (3X7-1/4"X7-1/4"-BS) HELICE (3X7-1/4"X7-1/4"-BS)	1	UR
	6L5-45947-00-EL	PROPELLER (3X7-1/4"X8-1/4"-BS) HELICE (3X7-1/4"X8-1/4"-BS)	1	UR
	6L5-45949-00-EL	PROPELLER (3X7-1/4"X5"-BS) HELICE (3X7-1/4"X5"-BS)	1	UR
52	6L5-45211-00-4D	EXTENSION EXTENSION	1	LONG
53	6L5-45318-00	BUSHING, DRIVE SHAFT DOUILLE, ARBRE MOTEUR	1	LONG
54	93420-22M03	CIRCLIP CIRCLIP TYPE R	1	LONG
55	90101-06M18	BOLT BOULON	3	LONG
56	92990-06600	WASHER, PLATE RONDELLE, PLATE	3	LONG
57	93604-10M03	PIN, DOWEL CLAVETTE	2	LONG

C6

15

3A

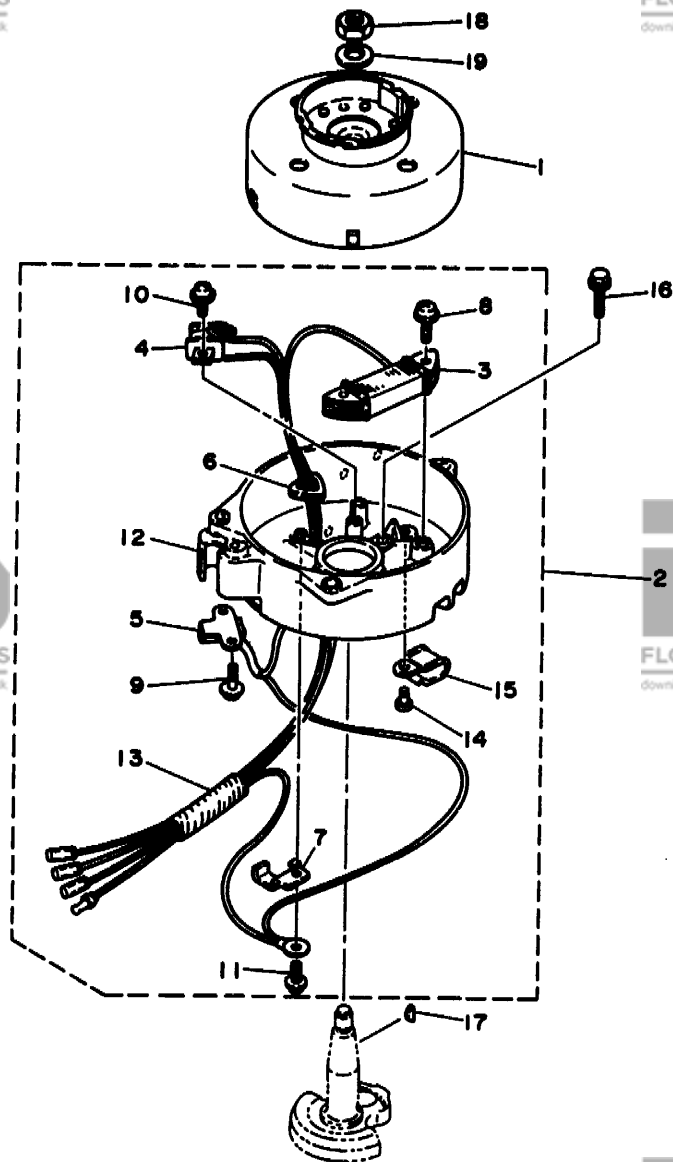


FIG. 8 GENERATOR

GENERATRICE

REF. NO. PART NO. NO. PIECES

DESCRIPTION	Q'TY	REMARKS
DESCRIPTION	QTE	REMARQUES
1 6L5-85550-M0 ROTOR ASSY	1	
2 6L5-85560-M1 ROTOR CPLT	1	
3 6E0-85520-70 BASE ASSY	1	
4 6L5-85595-M0 ENS. FLASQUE	1	
5 6L5-85592-M0 .COIL, CHARGE	1	
6 6E0-81336-70 .BOBINE, CHARGE	1	
7 6E0-81328-70 .COIL, PULSER	1	
8 90159-05038 .BOBINE, PULSEUR	1	
9 90159-05037 .PULSER COIL ASSY	1	
10 90159-04036 .PULSATION BOBINE (ENS.)	1	
11 90159-04035 .GROMMET	1	
12 6L5-15771-01-94 .OEILLET CAOUTCHOUC	1	
13 90446-10M01 .CLAMP	1	
14 98580-05008 .COLLIER	1	
15 90465-10M34 .SCREW, WITH WASHER	2	
16 95895-06016 .VIS, AVEC RONDELLE	2	
17 90280-04M06 .SCREW, WITH WASHER	2	
18 90170-10113 .VIS, AVEC RONDELLE	1	
19 90201-10269 .SCREW, WITH WASHER	1	
		.VIS, AVEC RONDELLE
		.STAY 1
		.SUPPORT 1
		.HOSE
		.DURITE
		.SCREW, PAN HEAD
		.VIS
		.CLAMP
		.BRIDE
		.BOLT, FLANGE
		.BOULON
		.KEY, WOODRUFF
		.CLAVETTE, DEMI-LUNE
		.NUT
		.ECROU
		.WASHER, PLATE
		.RONDELLE, PLATE

C7


16

3A

FIG. 9 ELECTRIC PARTS

PIECES ELECTRIQUE


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
NO.	NO. PIECES	DESCRIPTION	QTE	REMARQUES
1	6G1-82370-20	PLUG CAP ASSY	1	
2	6L5-82316-00	ANTIPARASITE BRACKET, IGNITION COIL SUPPORT, BOBINE D'ALLUMAGE	1	
3	97095-06016	BOLT BOULON	2	
4	92990-06600	WASHER, PLATE RONDELLE, PLATE	2	
5	6L5-85570-N0	IGNITION COIL ASSY BOBINE D'ALLUMAGE (ENS.)	1	
6	98580-06016	SCREW, PAN HEAD VIS	2	
7	92990-06600	WASHER, PLATE RONDELLE, PLATE	2	
8	6L5-85540-M0	C.D.I. UNIT ASSY BLOC C.D.I.	1	
9	97095-06016	BOLT BOULON	1	
10	92990-06600	WASHER, PLATE RONDELLE, PLATE	1	
11	90465-18147	CLAMP BRIDE	1	
12	6L5-82550-00	ENGINE STOP SWITCH ASSY COMMUTATEUR D'ARRET CPLT	1	
13	97095-06012	BOLT BOULON	1	
14	92990-06600	WASHER, PLATE RONDELLE, PLATE	1	

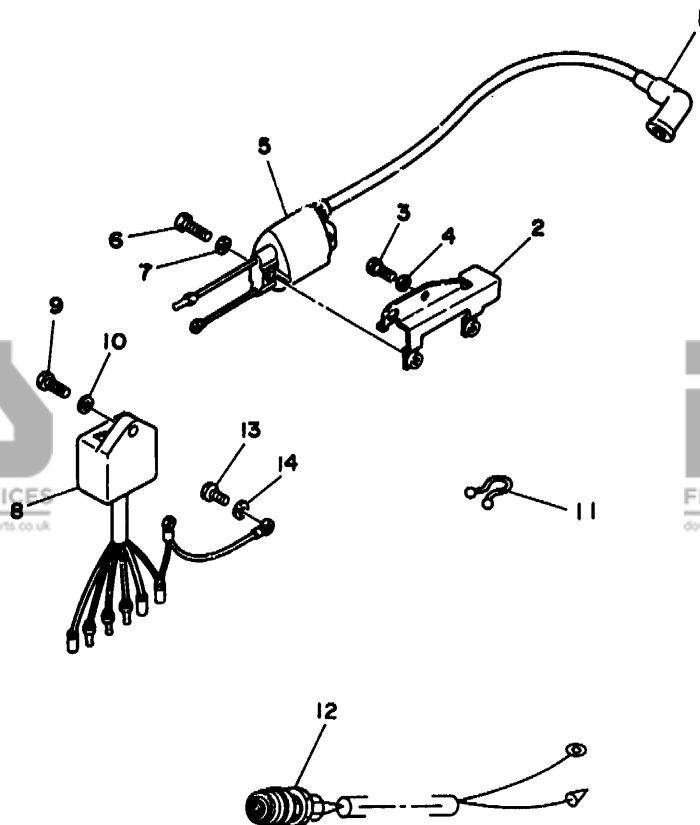

D1

FIG. 10 REPAIR KIT

KITS DE REPARATION

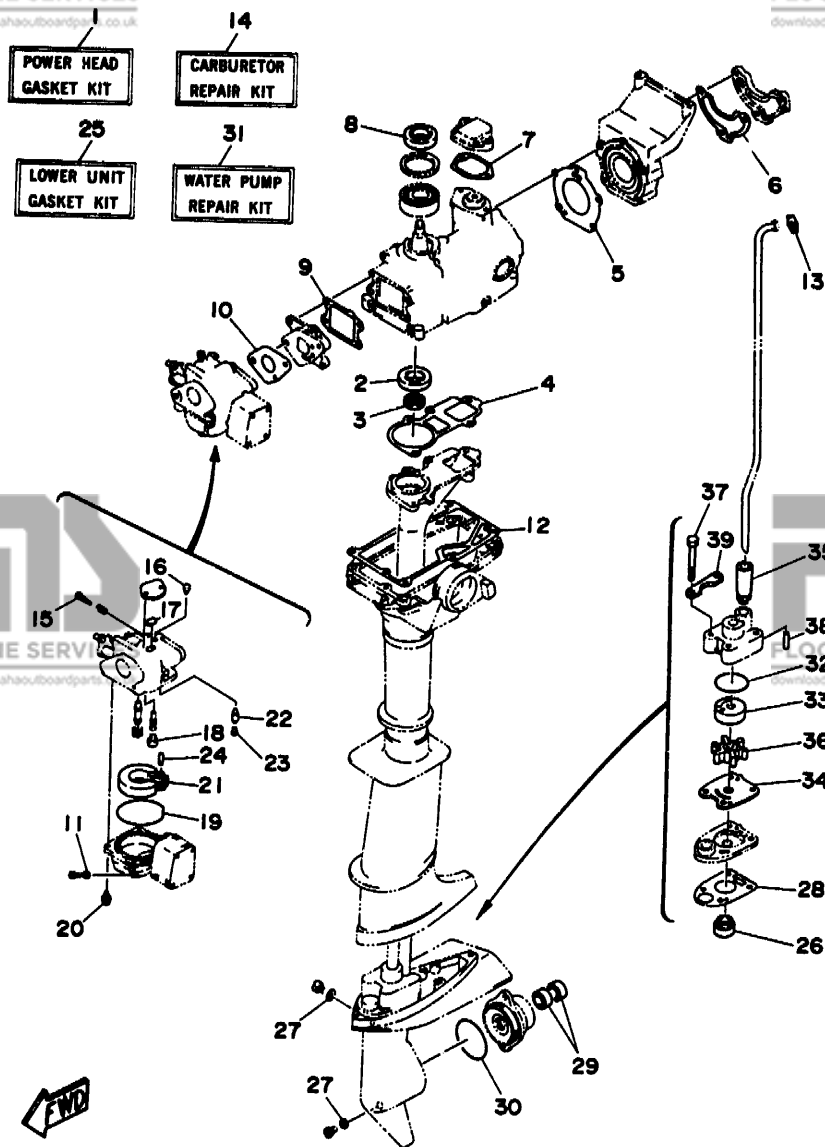

REF. NO.	RV PART NO.	DESCRIPTION	Q'TY	REMARKS
NO.	NO. PIECES	DESCRIPTION	QTE	REMARQUES
1	6L5-W0001-A1	POWER HEAD GASKET KIT	1	
2	93101-20M29	POCHETTE DE JOINTS	1	
3	93101-09M42	.OIL SEAL	1	
4	6L5-15369-A0	.JOINT SPY	1	
5	6L5-11181-A2	.OIL SEAL	1	
6	6L5-11193-A1	.JOINT SPY	1	
7	6L5-12414-A1	.GASKET, OIL SEAL HOUSING	1	
8	93101-20M29	.JOINT SPY DE LOGEMENT	1	
9	6L5-13621-A2	.GASKET, CYLINDER HEAD 1	1	
10	6L5-14198-A1	.JOINT, DE CULASSE 1	1	
11	6G1-14398-00	.GASKET, HEAD COVER 1	1	
12	6L5-45113-A1	.JOINT, COUVERCLE DE CULASSE 1	1	
13	646-44365-00	.GASKET, COVER	1	
14	6G1-W0093-00	.JOINT, COUVERCLE	1	
15	679-14923-00	.OIL SEAL	1	
16	6G1-14966-00	.JOINT SPY	1	
17	6G1-14126-00	.GASKET, VALVE SEAT	1	
18	676-14966-00	.JOINT, SIEGE DE CLAPET	1	
19	6G1-14984-00	.GASKET	1	
20	97980-04114	.JOINT	1	
21	661-14985-00	.WASHER	1	
22	661-14546-00	.RONDELLE	1	
23	676-14186-00	.GASKET, UPPER CASING	1	
24	688-14548-00	.JOINT, TUBE D'ARBRE	1	
25	6L5-W0001-21	.DAMPER, WATER SEAL	1	
26	93103-09M41	.JOINT, TUBE D'EAU	1	
27	90430-08020	CARBURETOR REPAIR KIT	1	
28	6L5-45315-A0	KIT DE REPARATION CARBURATEUR	1	
29		.SCREW, PILOT	1	
30		.VIS, RALENTI	1	
31		.CAP	1	
32		.CAPUCHON	1	
33		.GASKET	1	
34		.JOINT	1	
35		.CAP	1	
36		.CAPUCHON	1	
37		.O-RING	1	
38		.JOINT TORIQUE	1	
39		.SCREW, WITH WASHER	4	
		.VIS, AVEC RONDELLE	1	
		.FLOAT	1	
		.FLOTTEUR	1	
		.VALVE, NEEDLE	1	
		.POINTEAU	1	
		.PIN, FLOAT	1	
		.AXE, FLOTTEUR	1	
		.PIN, FLOAT ARM	1	
		.AXE, BRAS DE FLOTTEUR	1	
		LOWER UNIT GASKET KIT	1	
		POCHETTE DE JOINTS EMBASE	1	
		.OIL SEAL	1	
		.JOINT SPY	1	
		.GASKET	2	
		.JOINT	1	
		.PACKING, LOWER CASING	1	
		.JOINT, BOITIER D'HELICE	1	

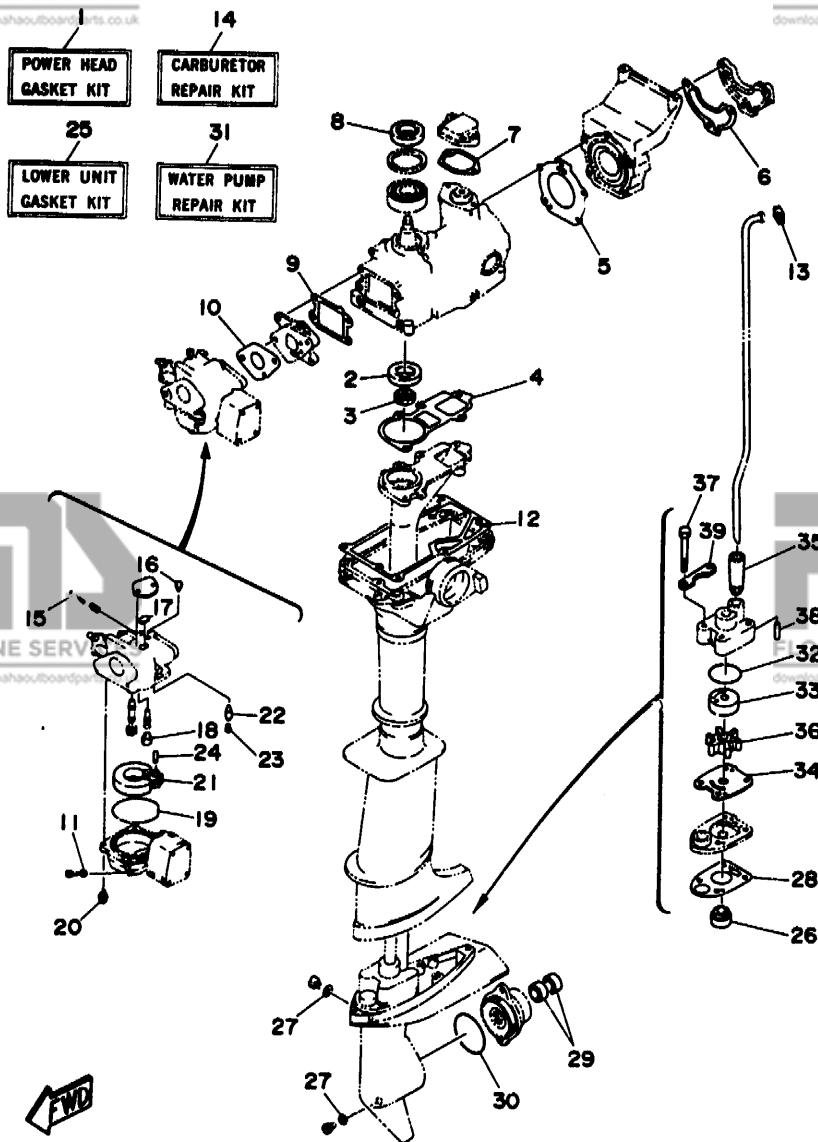


FIG. 10 REPAIR KIT

KITS DE REPARATION

REF. NO.	PART NO. NO. PIECES	DESCRIPTION DESCRIPTION	Q'TY QTE	REMARKS REMARQUES
29	93101-13M12	.OIL SEAL	2	
30	93210-48214	.JOINT SPY	1	
31	6L5-W0078-00	.O-RING	1	
32	93210-33M85	.JOINT TORIQUE	1	
33	6L5-44322-00	WATER PUMP REPAIR KIT	1	
34	6L5-44323-00	KIT DE REPARATION DE LA POMPE	1	
35	6E0-44366-00	.O-RING	1	
36	6L5-44352-00	.JOINT TORIQUE	1	
37	97095-06040	.INSERT, CARTRIDGE	1	
38	93604-18080	.CUVETTE	1	
39	6L5-44328-00	.OUTER PLATE, CARTRIDGE	1	
		.PLAQUE EXTERIEURE	1	
		.DAMPER, WATER SEAL	1	
		.JOINT, TUBE D'EAU	1	
		.IMPELLER	1	
		.TURBINE	4	
		.BOLT	2	
		.BOULON	2	
		.PIN, DOWEL	2	
		.CLAVETTE	2	
		.PLATE	2	
		.PLAQUETTE		

D3

PART NO. NO. PIECES	REF. NO.	PART NO. NO. PIECES	REF. NO.	PART NO. NO. PIECES	REF. NO.	PART NO. NO. PIECES	REF. NO.	PART NO. NO. PIECES	REF. NO.	PART NO. NO. PIECES	REF. NO.
6L5-W0001-A1	10- 1	6G1-14546-00	2-25	6G1-24471-00	2-35	6G8-43136-00	5-17	6L5-45152-00	5- 6	90105-06M16	1- 8
6L5-W0001-21	10-25			6L5-24500-60	4-24	6L5-43160-00	5-39	6L5-45211-00-4D	7-52	90105-06M40	1- 9
6L5-W0004-02	2- 2	688-14548-00	2-29	6L5-24591-00	4-15	6L5-43181-00	5-34	6L5-45251-02	7- 5	90119-06M65	4-22
6L5-W0070-13	4- 2			6L5-24610-20	4-19	620-43189-00	5-32	6L5-45300-01-4D	7- 1	90149-05M08	5- 8
6L5-W0078-00	10-31	679-14555-00	2- 7	6L5-24641-00	4-23	6L5-43311-01-4D	5-26	6L5-45300-11-4D	7- 1	90149-05M13	6-14
6L5-W0090-01-4D	1- 1	679-14923-00	2- 6	6L5-26301-01	6-23	6E0-43313-00-94	5-31	6L5-45311-00-4D	7- 2	90159-04035	8-11
6G1-W0093-00	10-14			6L5-41252-00	2-45	6L5-43318-11	5-55	6L5-45315-A0	7-17	90159-04036	8-10
656-W2810-02	4-33	676-14943-14	10-15	6L5-41271-00	2-44	6L5-43614-00	5-40		10-28	90159-05037	8- 9
6L5-11111-00-94	1-15	6L5-14947-01	2-19	689-41273-00	2-47	6L5-43659-00	5-43	6L5-45316-09	7- 4	90159-05038	8- 8
6L5-11181-A2	1-16	6L5-14948-03	2-11	6J8-41274-00	2-48	6L5-44111-00	6-24	6L5-45317-09	7- 3	90159-06M10	4-25
	10- 5	6G1-14966-00	2- 8	6G1-42111-11-4D	6- 1	6L5-44121-00	6-30	6L5-45318-00	7-53		5-56
6L5-11191-00-9M	1-19			664-42119-00	6- 8	6L5-44143-00	6-33	6L5-45321-00-5B	7-16	90161-04M02	6-43
6L5-11193-A1	1-20	676-14966-00	2-12	6L5-42121-00	5-18	6L5-44144-00	6-39	6L5-45361-00-4D	7-19	90167-03M02	4-13
	10- 6			6L5-42125-00	6-20	6L5-44144-10	6-39	6L5-45511-00	7-36	90170-10113	8-18
6E5-11372-00	1- 4	6G1-14980-01	2-18	6G1-42126-00	6-21	6E0-44145-00	6-36	6L5-45511-10	7-36	90201-08M54	7-50
6L5-11400-00	1-28	6G1-14984-00	2-17	6G1-42131-01	6- 6	6E0-44146-00	6-37	6L5-45533-00-20	7-40	90201-10269	8-19
6L5-11412-00	1-29			6L5-42137-20	6-10	6L2-44147-00	7-18	6L5-45533-00-21	7-40	90201-13198	7-47
6L5-11422-00	1-30	6G1-14985-00	2-24	6G1-42138-01	6-17	6L5-44191-00	4-14	6L5-45533-00-22	7-40	90201-32M00	1-36
6L5-11610-00	1-39			6E0-42159-02	6-18	6L5-44196-20	4-26	6L5-45533-00-23	7-40	90201-32M01	1-37
6L5-11610-10	1-39	6G1-14992-00	2-23	6G1-42177-00	6- 9		5-35	6L5-45551-00	7-38	90202-36M55	6- 3
6L5-11610-20	1-39	6L5-15100-00-94	1- 2	6E0-42528-03	5-49		5-53	6L5-45560-00	7-41	90206-36M21	6- 2
6L5-11631-00-96	1-38	6L5-15369-A0	1-13	6L5-42529-01	5-50		6-26	6L5-45567-00	7-10	90209-08M17	6-15
6L5-11633-00	1-41			6L5-42537-00	5-45	6L5-44197-20	4-27	6L5-45611-00	7-42	90243-04M01	5-15
6L5-11635-00	1-38	6L5-15396-00-94	1-10	6L5-42538-00	5-46		5-36	6L5-45616-00	7-48	90266-04M05	5-52
6L5-11636-00	1-38	6A1-15705-00	3- 8	6L5-42539-00	5-47		5-54	6L5-45631-00	7-45	90269-02M09	6-11
6L5-11651-00	1-31	6L5-15710-00	3- 1	624-42542-00	4-21		6-27	6L5-45635-00	7-44	90280-04M06	8-17
6L5-11681-00	1-32	6L5-15711-00	3- 2	6L5-42549-00	5-48	6L5-44311-00	7-24	6L5-45943-00-EL	7-51	90340-08M04	7-14
6E5-12411-01	1-24	6L5-15713-00	3- 6	6L5-42561-00	5-51	6L5-44322-00	7-26	6L5-45945-00-EL	7-51	90386-08032	6-16
6L5-12413-00-9M	1-25	6L5-15714-00	3- 4	6L5-42610-54-4D	4- 1		10-33	6L5-45947-00-EL	7-51	90386-33M96	6- 5
6L5-12414-A1	1-26	6L5-15716-00	3- 7	6L5-42647-00	4-11	6L5-44323-00	7-27	6L5-45949-00-EL	7-51	90386-34M97	6- 4
	10- 7	6L5-15741-00	3- 5	6L5-42662-00	4-16		10-34	6L5-45987-01	7-46	90387-06M11	5-22
6L5-13610-02	2- 1	6L5-15755-00	3-18	6L5-42663-00	4-17	6L5-44328-00	7-33	6E0-81328-70	8- 7	90387-06M70	3- 3
6L5-13621-A2	2- 3	6L5-15758-00-98	3-14	6L5-42677-00	3-17		10-39	6E0-81336-70	8- 6	90430-08020	7-15
	10- 9	6L5-15761-00	3-16	6L5-42678-51	4- 3	6L5-44352-00	7-29	6L5-82316-00	9- 2		10-27
6G1-14126-00	2-10	6A1-15767-00	3-10	6L5-42711-11	4- 4		10-36	6A0-82317-00	4-20	90445-07M29	1- 5
	10-17	6L5-15771-01-94	8-12	6L5-42712-12	4- 5	6L5-44360-01	7-34	6G1-82370-20	9- 1	90446-10M01	8-13
663-14159-00	2-27	6L5-15779-20	3-19	6L5-42731-00-4D	6-41	6L5-44360-11	7-34	6L5-82550-00	9-12	90465-10M34	8-15
676-14186-00	2-26	6L5-15789-00	3-20	6L5-42735-20	6-42	646-44365-00	7-35	6E0-85520-70	8- 3	90465-13M11	4-32
	10-23	6L5-24111-02	4-18	6L5-42774-00	4- 6		10-13	6L5-85540-M0	9- 8	90465-18147	9-11
6L5-14198-A1	2-40	6L5-24251-00	4-28	6L5-42775-00	4- 7	6E0-44366-00	7-28	6L5-85550-M0	8- 1	90467-06016	1- 6
	10-10	6L5-24311-00	4-29	6A1-42792-01	5-57		10-35	6L5-85560-M1	8- 2	90467-07M12	7-37
6L5-14301-03	2- 5	6L5-24312-00	4-31	6L5-42823-00	4-12	6L5-44511-00-4D	5-27	6L5-85570-N0	9- 5	90467-08004	4-30
6G1-14398-00	2-22	6G1-24411-00	2-37	6L5-43111-01-4D	5-10	6L5-44553-00-4D	5-28	6L5-85592-M0	8- 5	90501-10064	7-43
	10-11	6G1-24412-01	2-36	6L5-43112-00-4D	5-11	6L5-45111-02-4D	5- 1	6L5-85595-M0	8- 4	90501-10326	2-15
6L5-14440-00	2-41	6L5-24421-00	2-39	6A1-43113-01	5-21	6L5-45113-A1	1-43	90101-06M18	7- 6	90501-12274	6-29
624-14485-00	1- 3	6G1-24431-01	2-38	648-43114-01	5-12		10-12		7-55	90501-23215	6-12
63V-14523-00	2-16	6G1-24432-00	2-34	6E0-43116-01	5-13	6L5-45115-A0	5- 7	90101-06335	5-23	90508-08M26	5-41
6G1-14527-00	2- 9	6G1-24452-00	2-33	6E0-43118-01	5-14	647-45151-01	5- 9	90101-08M10	5-16	90508-08M27	5-42

PART NO. NO. PIECES	REF. NO.	PART NO. NO. PIECES	REF. NO.	PART NO. NO. PIECES	REF. NO.	PART NO. NO. PIECES	REF. NO.	PART NO. NO. PIECES	REF. NO.	PART NO. NO. PIECES	REF. NO.
90508-16M30	5-19	93604-07M13	7-30	98580-05008	8-14						
90508-16020	5-37	93604-10M03	5- 2	98580-05010	4- 8						
90508-16021	5-38		7-11	98580-06016	9- 6						
90790-77002	3-11		7-57	99009-06600	7-39						
91490-16010	6-35	93604-18080	7-32	99080-03600	6-22						
91490-25030	7-49		10-38	99080-05600	5-44						
91690-25014	6-40	93606-12019	1- 7								
91690-40048	2-46	93700-06M03	5- 5								
92990-04100	2-14	94702-00274	1-44								
92990-04600	6-32	95380-03600	2-31								
92990-05600	6-34	95380-06600	5-25								
92990-06300	7- 7	95780-08300	5-20								
92990-06600	1-18	95895-06016	2- 4								
	1-23		3-15								
	4-10		8-16								
	5- 4	95895-06020	3-12								
	5-24		5-33								
	5-30		6-38								
	7-13	95895-06030	7- 6								
	7-23	95895-06035	3-13								
	7-56	95895-06095	2-43								
	9- 4	97013-06012	3- 9								
	9- 7	97095-06012	9-13								
	9-10	97095-06016	4- 9								
	9-14		7-22								
92990-10600	6-13		9- 3								
93101-09M42	1-12		9- 9								
	10- 3	97095-06020	6- 7								
93101-13M12	7-20	97095-06030	5- 3								
	10-29		7-12								
93101-20M29	1-11	97095-06035	5-29								
	1-35	97095-06040	7-31								
	10- 2		10-37								
	10- 8	97313-06028	1-17								
93103-09M41	7- 8	97313-06050	1-22								
	10-26	97595-06520	1-14								
	6-25		1-21								
93210-12790	7-25		1-27								
93210-33M85	10-32		6-44								
	7-21	97704-40620	6-31								
93210-48214	10-30	97780-40716	2-42								
	1-34	97885-05012	6-19								
93306-204U0	1-40	97980-04114	2-21								
93310-112U0	1-33		10-20								
93310-416N7	7- 9	97980-04125	2-32								
93316-003U0	7-54	98580-03006	2-30								
93420-22M03	1-42	98580-04008	2-28								
93450-13022	6-28	98580-04010	2-13								
93505-16024											